


Installation Instructions

Lippert® Soap Caddy

Please read all instructions
before installing products.

fig.1

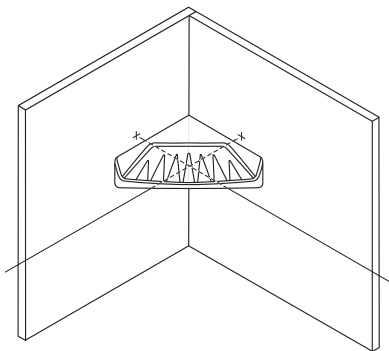

General Information:

Soap dish is designed for corner installation. Unit includes pre-drilled counter sunk holes. Mounting fasteners are included.

Required Tools

High speed drill, 1/4" carbide drill bit, silicone sealant and denatured alcohol.

Installation of the soap dish

1. Use the soap dish as a template and transfer the hole locations to the wall. See Figure 1.
2. Drill 1/4" holes at each location. See Figure 2.
3. Push nylon anchors into the holes.
4. Apply a 1/4" dab of silicone sealant to the back of the soap dish. See Figure 3.

fig.2


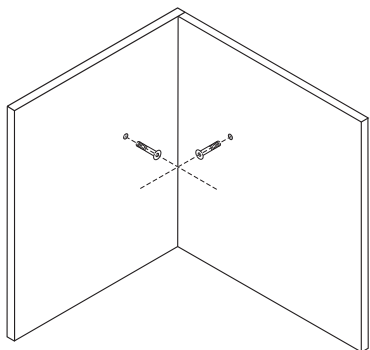


fig.3

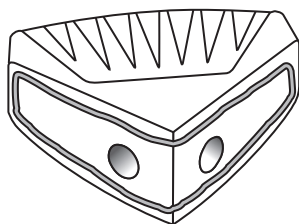


IPC.729/REV.1

Installation Instructions

Lippert® Soap Caddy

Please read all instructions
before installing products.

fig.4

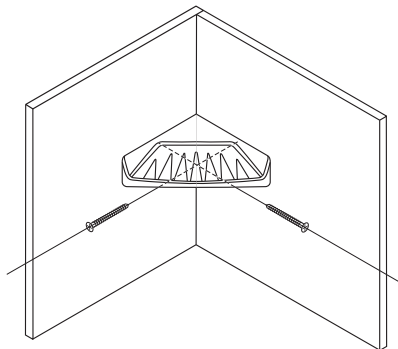

5. Align soap dish with the anchors and attach soap dish to the wall with Phillips head screws. See Figure 4.
6. Apply screw caps by firmly pressing the point of the screw cap into the drive slot of the screw. Tap lightly with hammer if needed. See Figure 5.
7. Apply silicone sealant around the soap dish. Clean up excess with denatured alcohol. See Figure 6.

fig.5

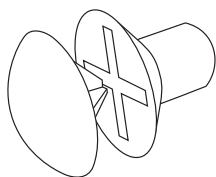


fig.6

