

# Installation Instructions

## Lippert® Lotus Lav and Prism® Round Vessel Bathroom Sinks

Please read all instructions  
before installing products.

fig.1

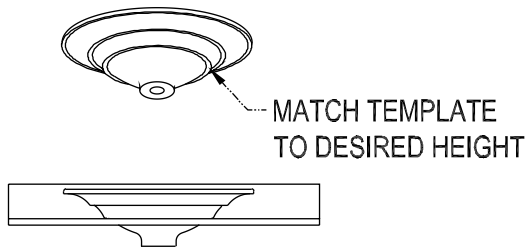


fig.2

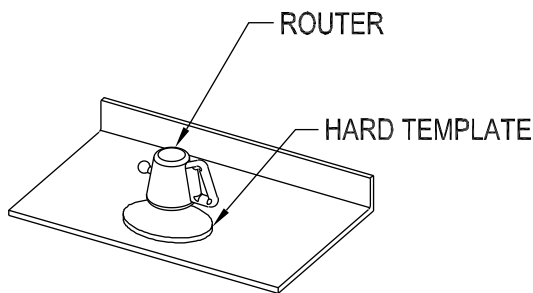


fig.3


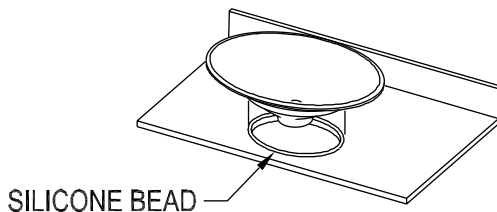


fig.4

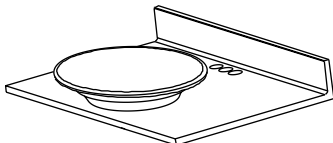

1. Choose the correct template for your sink. The Lotus Lav allows for the customer to select the height at which the sink will be mounted. Choose the correct template for that height. See Figure 1.

Transfer the template to plywood or masonite to create a hard template. Cut out the plywood or masonite allowing for your saw blade or router bit width. A smooth accurate template is required for a proper fit.

2. Cutout Position - A suggested location for the cutout is centered front to back allowing for faucets. Customer preference may change location.
3. Cut opening with a router bit using the template as a guide. See Figure 2.
4. Basin Installation - Clean the outside of the sink with denatured alcohol. Apply a bead of silicone around the edge of the cutout. See Figure 3.
5. Position the sink in the vanity top, centering it in the cutout. Remove excess sealant with denatured alcohol. Allow Sealant to cure for 24 hours.
6. Cut holes in the vanity top for faucet. See Figure 4.
7. Attach drain assembly to sink and faucet to vanity top following the plumbing fixture installation instructions.

IPC.726/REV.1