

Prism®, Illusion™& Lippert® Vanity Tops

FIG.1

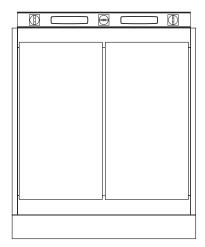


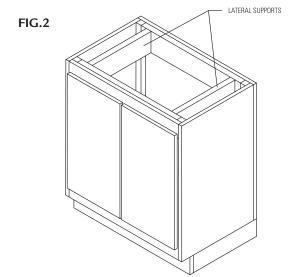

NOTE: Before installation, check material completely to ensure that it was not damaged in transit. Check size, color and style/model to confirm the product matches the order. Verify that the vanity top is the correct size for the cabinet

- 1. Verify that the cabinet or wood frame is level and flat. See Figure 1.
- 2. Wall to wall installation Measure and check the dimension with the top. Cut or sand edges to fit. Sanding may be needed to fit to uneven walls.
- 3. Two section tops that are ordered with "Jobsite Butt Fit" Each section is up to 1" longer to allow for a perfect field fit. Trim extra material with a belt sander and #24 or #36 sandpaper or a saber saw.
- 4. Saw counter top on backside or use wide masking tape to protect finished surface from scratches or chipping.
- 5. Only sand or saw edges that will be concealed after installation. DO NOT cut or sand exposed (finished) edges. Sanding or cutting exposed edges will; damage the gel coat on Lippert vanity tops. Always support and protect the material when sanding or cutting
- 6. Space lateral (front to back) supports 24" or less. See Figure 2.

Prism®, Illusion™& Lippert® Vanity Tops

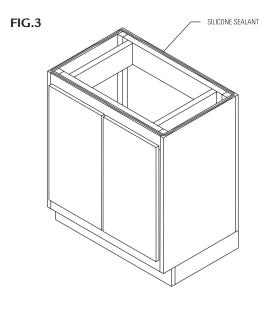

- 7. Apply a small bead of clear silicone sealant to the top edge of the cabinet or frame. See Figure 3.
- 8. Carefully lower the vanity top into position and press firmly into place. See Figure 4.
- 9. Bond side splashes to the vanity top and tool the seams with silicone sealant. See Figure 5.
- 10. Seal and carefully tool all joints with silicone sealant to provide a smooth contoured joint.

