


Installation Instructions

Concealed Mount Photopolymer Signs


FIG. 1

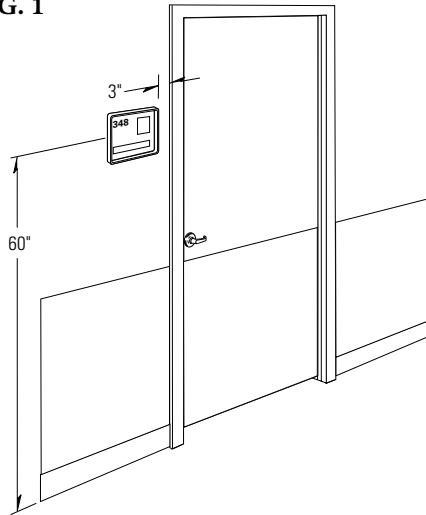

1. DETERMINE SIGN LOCATION ON WALL. (See Figure 1)


- a. The Americans with Disabilities Act (ADA) and Building Codes regulate the placement of signage in buildings. Follow building codes when installing signage. ADA recommendation: 4.30.06 Mounting Location and Height. Where permanent identification is provided for rooms and spaces, signs shall be installed on the wall adjacent to the latch side of the door. Where there is no wall space to the latch side of the door, including at double leaf doors, signs shall be placed on the nearest adjacent wall. Mounting height shall be 60 inches above the finished floor to the centerline of the sign. Mounting location for such signage shall be so that a person may approach within 3 inches of signage without encountering protruding objects or standing within the swing of a door.

FIG. 2

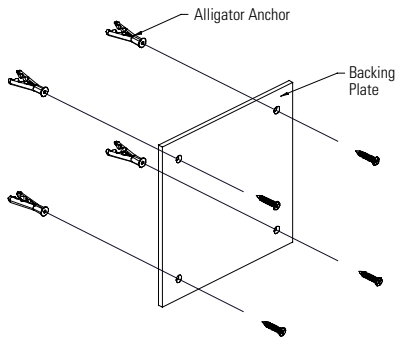


2. Mount signage level, plumb and at the required height. Use the backing plate as a template and mark the hole locations on the wall.
3. Drill 1/4" holes at each mark and insert alligator anchors into the holes.
4. Attach the backing plate to the wall with fasteners. See Figure 2
5. Remove the release liner from the back of the sign panel. Position the panel over the backing plate making sure the edges are flush. Press into place. See Figure 3

FIG. 3

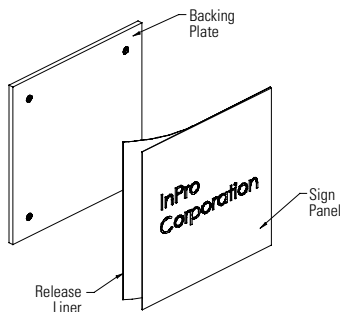

IPC.949/REV.1

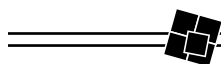

Installation Questions?
Contact our Installation Hotline 866.EZINPRO
For Sales & Customer Service call 800.222.5556

INPRO
SIGNSCAPE
SIGNAGE and WAYFINDING