

Prism[®], Illusion[™] & Lippert[®] Detached Apron

FIG.1

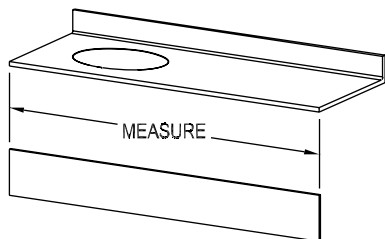


FIG.2

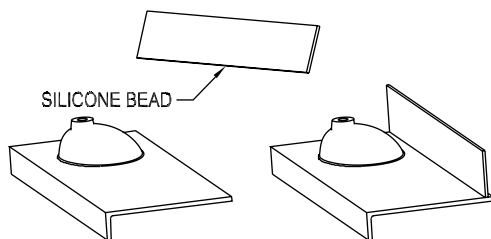


FIG.3


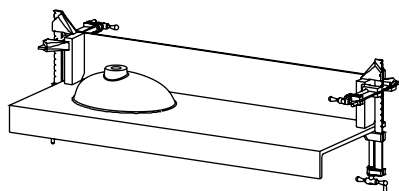


FIG.4



1. Cut apron to the required length if needed.
Determine the position on the bottom of the vanity top.
See Figure 1.
2. Apply a small bead of clear adhesive to the edge that will
mate with the bottom of the vanity top.
See Figure 2.
3. Position the apron in place and clamp it to blocking that
will hold the apron perpendicular for 24 hours.
See Figure 3.
4. Apply a 1/2" bead of clear adhesive to the seam at the
back of the apron. See Figure 4.

FIG.5 - COMPLETED INSTALLATION

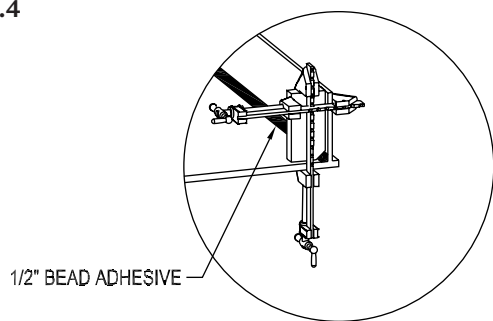