


# Installation Instructions

## Framed Wall Mount Signage

FIG. 1

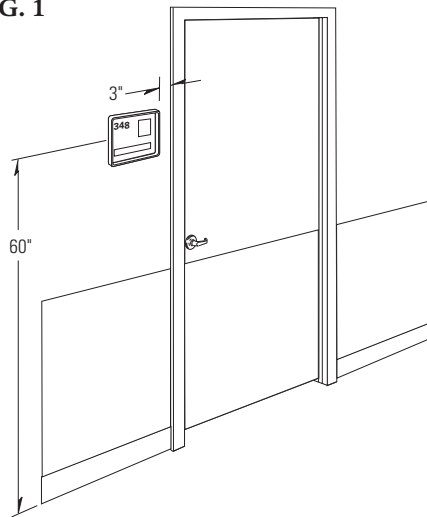

### 1. DETERMINE SIGN LOCATION ON WALL. (See Figure 1)

- The Americans with Disabilities Act (ADA) and Building Codes regulate the placement of signage in buildings. Follow building codes when installing signage. ADA recommendation: 4.30.06 Mounting Location and Height. Where permanent identification is provided for rooms and spaces, signs shall be installed on the wall adjacent to the latch side of the door. Where there is no wall space to the latch side of the door, including at double leaf doors, signs shall be placed on the nearest adjacent wall. Mounting height shall be 60 inches above the finished floor to the centerline of the sign. Mounting location for such signage shall be so that a person may approach within 3 inches of signage without encountering protruding objects or standing within the swing of a door.

### 2. INJECTION MOLDED, VINYL & ALUMINUM FRAMES (See Figure 2)

- Mark holes on the wall using the signage frame as a template.
- Drill 1/4" holes for the Alligator anchors and push the anchor into the holes.
- Insert and screw the #8 x 1" Philips pan head screws into the Alligator anchors leaving enough room for the sign frame to slide over the fastener head.
- Slide the frame over the fastener and tighten the fasteners.  
Note: Larger frames will be provided with additional mounting holes on the horizontal sections of the frame. Use these holes to securely attach the frame to the wall.

FIG. 2


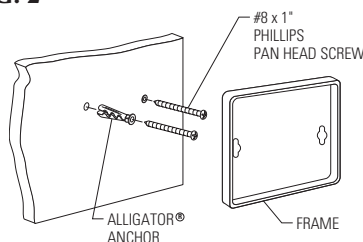



FIG. 3

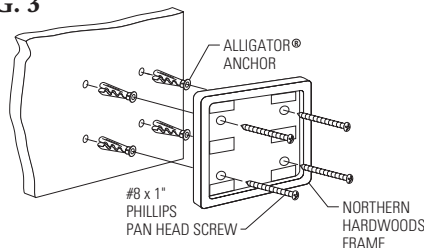

### 3. NORTHERN HARDWOODS FRAMES. (See Figure 3)

- Mark holes on wall using the signage frame as a template.
- Drill 1/4" holes for Alligator anchors and push the anchors into the holes.
- Mount wood frame to the wall with #8 x 1" Phillips pan head screws screwed into the Alligator anchors.

FIG. 4

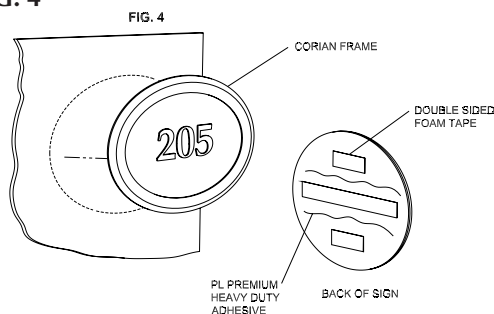


### 4. LARGER SIGN AND PRISM® SIGNS (See Figure 4)

- The wall must be dry, well sealed and free of dirt, loose paint, wax and grease.
- Mark the location of the sign on the wall.
- Sign is applied using a combination of PL Premium Heavy Duty Adhesive and double sided foam tape. Apply beads of PL Premium between the strips of foam in a zigzag pattern. Remove release liner from the double sided foam tape.
- Position the sign on the wall making sure that the sign is level.
- Press the sign to the wall making firm contact between the adhesive/foam tape and the wall surface.


# Installation Instructions

## Framed Wall Mount Signage


**FIG. 5**

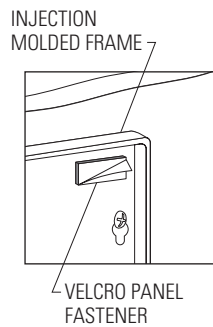

**FIG. 6**

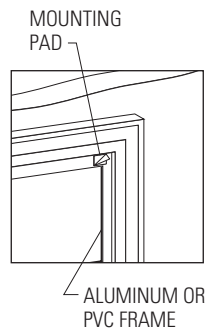


**FIG. 7**

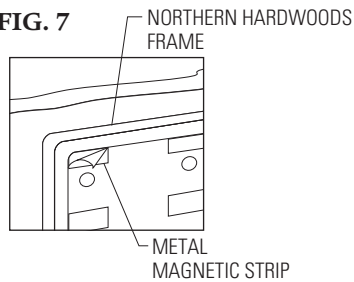


### 5. ATTACHING THE SIGN PANEL TO THE FRAME

- For injection molded frames - remove the release liner from the velcro panel fastener snaps located in the frame. (See Figure 5)
- For extruded aluminum and vinyl frames - remove the release liner from the mounting pads located on the frame. (See Figure 6)
- For Northern Hardwoods - remove the release liner from the metal magnetic strip. (See Figure 7)
- Properly align the sign panel in the frame and apply firm pressure for 3 seconds over the velcro panel fastener snaps/mounting tabs/magnetic strips to secure the sign panel in the frame.  
Warning: Failure to apply firm pressure may result in sign panel delamination from frame. (See Figures 8a, 8b & 8c)
- To remove sign panel, use the suction cup and sign panel removal label. (See Figure 9)
- To replace window sign insert, use the window sign removal tool. (See Figure 9)

**FIG. 8a**

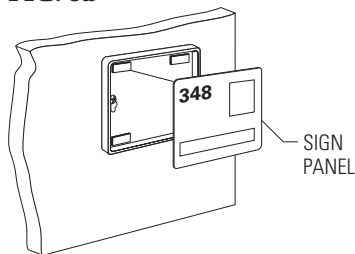


**FIG. 8b**

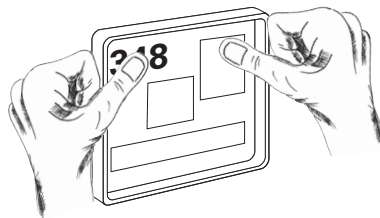


Apply firm pressure for 3 seconds on sign panel at fastener locations

**FIG. 8c**

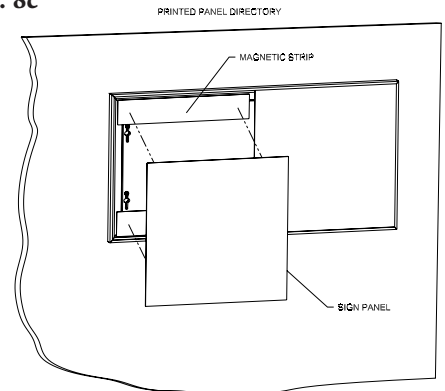

**FIG. 9**

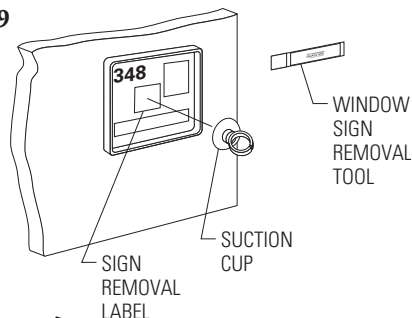

**WARNING:** Failure to apply firm pressure may result in sign panel delamination from frame.

### Installation Questions?

Contact our Installation Hotline 866.EZINPRO  
For Sales & Customer Service call 800.222.5556

**INPRO**  
**SIGNSCAPE**  
SIGNAGE and WAYFINDING