


Installation Instructions

Unframed Wall Mount Signage


FIG. 1

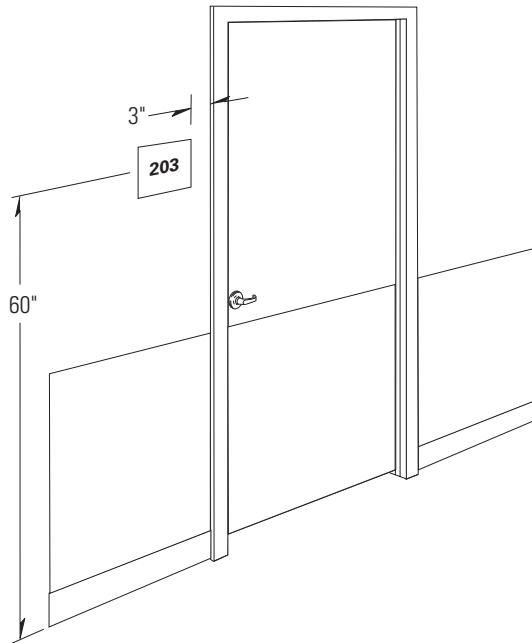

1. Determine the sign location on the wall. (See Figure 1)

- a. The ADA (Americans with Disabilities Act) and Building Codes regulate the placement of signage in buildings. Following building codes when installing signage. The following recommendation is from the ADA: 4.30.06 Mounting Location and Height. Where permanent identification is provided for rooms and spaces, signs shall be installed on the wall adjacent to the latch side of the door. Where there is no wall space to the latch side of the door, including at double leaf doors, signs shall be placed on the nearest adjacent wall. Mounting height shall be 60 inches above the finished floor to the centerline of the sign. Mounting location for such signage shall be so that a person may approach within 3 inches of signage without encountering protruding objects or standing within the swing of a door.

FIG. 2

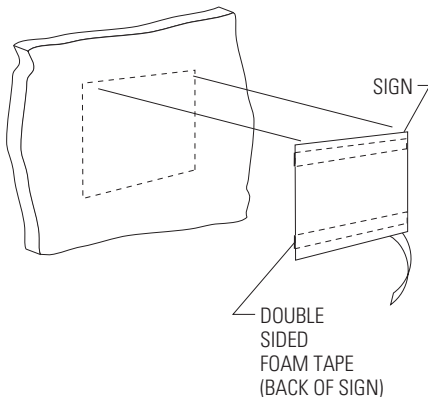

2. DOUBLE-SIDED FOAM TAPE (See Figure 2)

Note: When adhering to textured or difficult surfaces, such as glazed block or wallpaper, use IPC #535 Heavy-Duty Adhesive to adhere signs.

- a. The wall must be dry, well sealed and free of dirt, loose paint, wax and grease.
- b. Mark the location of the sign on the wall.
- c. Remove the release liner from the double sided foam tape on the back of the sign.
- d. Position the sign on the wall making sure that the sign is level.
- e. Press the sign to the wall making firm contact between the foam tape and the wall surface.




Installation Questions?

Contact our Installation Hotline 866.EZINPRO
For Sales & Customer Service call 800.222.5556

Installation Instructions

Unframed Wall Mount Signage


FIG. 3

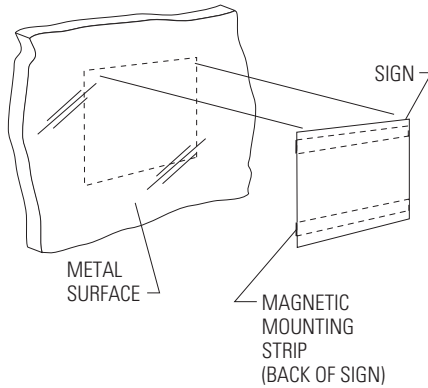

3. MAGNETIC MOUNTING STRIPS (See Figure 3)

- The wall must be dry, well sealed and free of dirt, loose paint, wax and grease
- Mark the location of the sign on the metal surface.
- Position the sign making sure that the sign is level.
- Press the sign to the surface.


FIG. 4

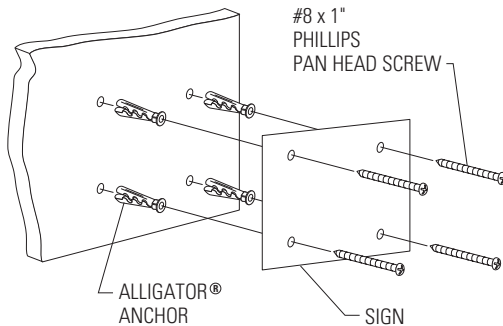

4. SCREW MOUNT (See Figure 4)

- The wall must be dry, well sealed and free of dirt, loose paint, wax and grease
- Determine the sign location on the wall.
- Use the sign as a template for mounting hole location. Transfer the mounting holes to the wall with a marker.
- Drill 1/4" holes on the wall for the Alligator anchors and push the anchor into the holes.
- Attach sign to the wall with #8 x 1" Phillips pan head screws into the Alligator anchor.

FIG. 5

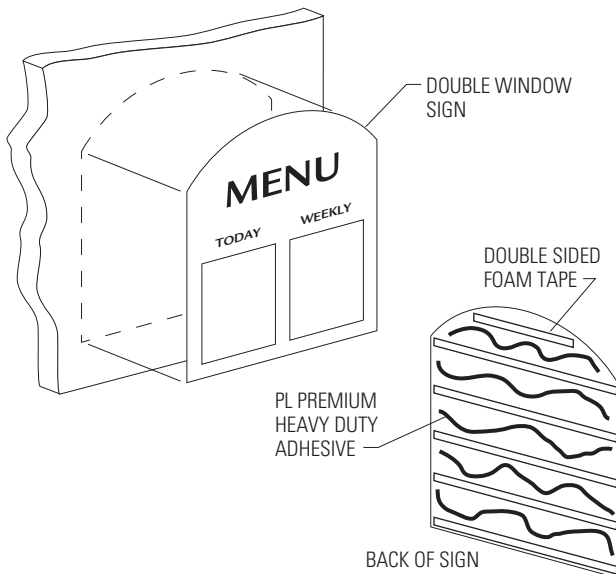

5. PRISM® SIGN, TODAY'S DIRECTION SIGN, TRIPLE WINDOW SIGN, STAFFING INDICATOR SIGN, DOUBLE WINDOW SIGN (See Figure 5)

- The wall must be dry, well sealed and free of dirt, loose paint, wax and grease.
- Mark the location of the sign on the wall.
- Sign is applied using a combination of PL Premium Heavy Duty Adhesive and double sided foam tape. Apply beads of PL Premium between the strips of foam in a zigzag pattern. Remove release liner from the double sided foam tape.
- Position the sign on the wall making sure that the sign is level.
- Press the sign to the wall making firm contact between the adhesive/foam tape and the wall surface.

Installation Questions?

Contact our Installation Hotline 866.EZINPRO
For Sales & Customer Service call 800.222.5556