


# Installation Instructions

## Ultra and Whisper Cube Tracks with the Locking Switch Unit


FIG. 1

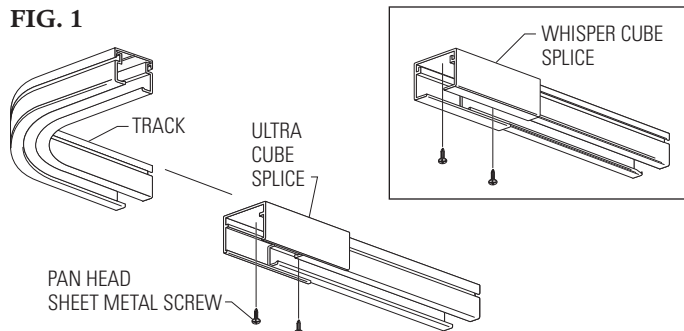

**Note: Verify the drop ceiling is installed and functioning properly before installing track.**

1. Layout track sections and bends on the floor. Join bends to straight sections of track with a splice. Attach splice to track with sheet metal screws. Trim track sections as required by layout (See Figure 1).


FIG. 2

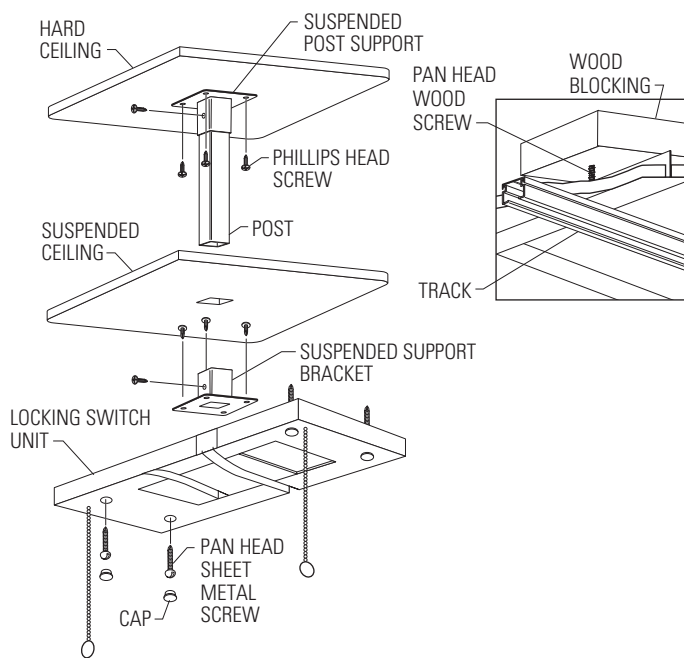

2. Mount Locking Switch Unit to ceiling with one of following methods (see Figure 2):  
**Option 2a.** With wood\* or sheet metal blocking, attach the Locking Switch Unit with screws through the ceiling tile and into the blocking.  
**Option 2b.** Use a support set for reinforcement by mounting the Locking Switch Unit to a hard ceiling above the suspended ceiling.  
**2b1.** Attach top support bracket to the hard ceiling with the appropriate fasteners for the substrate e.g. drywall screws on drywall.  
**2b2.** Cut post to appropriate length and attach it to the top support bracket.  
**2b3.** Cut square holes through the ceiling for the posts. Screw the bottom support bracket to the post.  
**2b4.** Screw the Locking Switch Unit to the bottom support bracket.

3. Snap covering caps into screw holes to hide screws.

FIG. 3

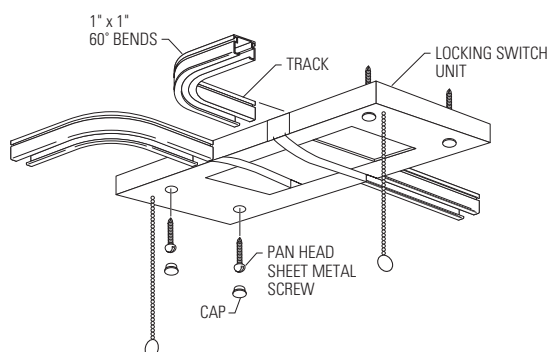

4. Slide track sections and 1" x 1" 60° bends (ordered separately) into Locking Switch Unit (see Figure 3).

Attaching rest of track:

See Ultra and Whisper Cube regular track or track with Gridclips Installation Instructions.

*\* Check your local fire codes for maximum amount of wood allowed when using wood blocking.*