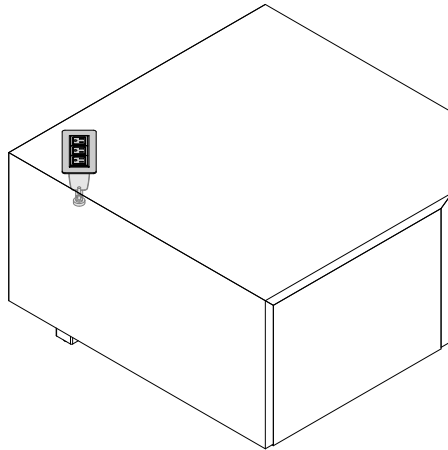
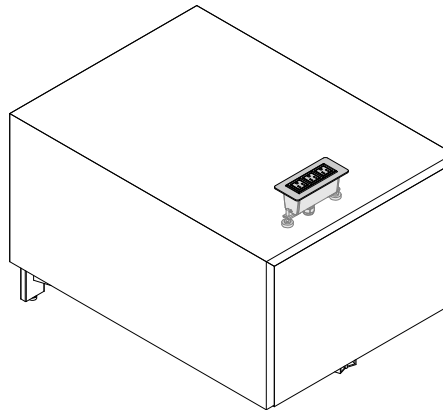
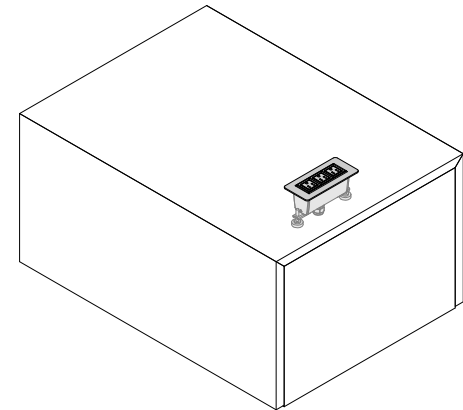


CORNER BENCH BRIDGE**END BENCH BRIDGE****IN-LINE BENCH BRIDGE**

If you have a problem, question, or request, call
your local dealer, or Coalesse at 1.800.627.6770
Or visit our website: www.coalesse.com

© 2011 Coalesse
San Francisco, California U.S.A.
Printed in U.S.A.

1. Place the bench bridge on its side, on a protected surface.

2. Slide the RPT mounting bolts toward the center of the unit (2a) and then drop the RPT unit and cord into the hole (2b).

3. Locate the circular hole on the bottom of the bench bridge and pull the cord through it.

4. Reach into the circular hole and follow the cord until you feel the RPT.

5. Locate the mounting bolts and slide them outward (5a) and then tighten them against the wood panel until the unit is held securely in place (5b).

