

2930 South Fairview Street Santa Ana, CA 92704 Phone: 714 668 3660 Fax: 714 668 1107 alllighting@earthlink.net http://www.alllighting.com

SP-105/106/107/ 108/109/110/ 114/115

INSTALLATION SHEET


Safety, Warnings and Suggestions


- ¹ Avoid installing fixtures in locations where water collects and stands for prolonged periods.
- ² Make sure that electrical power is disconnected before any work is performed.
- ³ All wiring and installation should meet local, state and national electrical codes.















SP-105 SP


SP-107

SP-108

SP-109

SP-110

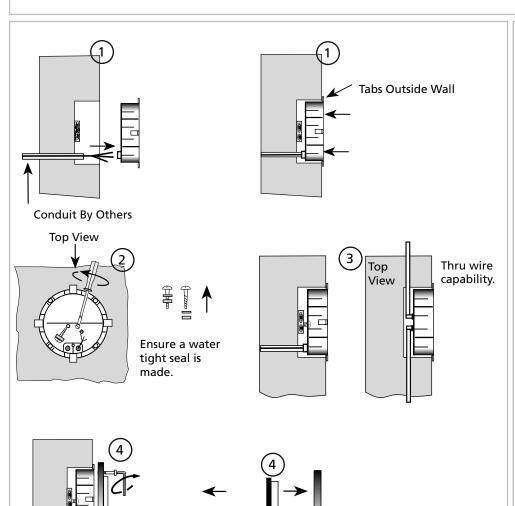



SP-115

- 1) Attach wood block to rear of wall opening. Connect conduit to provisions provided at rear of back box. Make sure outside tabs are flush to wall surface.
- 2) Attach back box to wood block with (2) #10 wood screws.
- 3) Make all necessary wire connections using UL listed wire nuts.
- 4) Install face plate onto back box using skt cap screws provided.

Caulk small gap between wall and faceplate if required.