
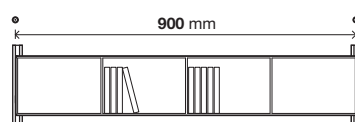
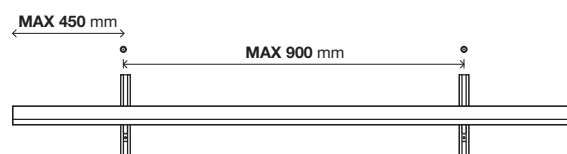
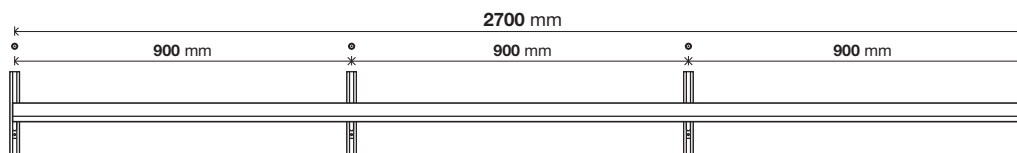
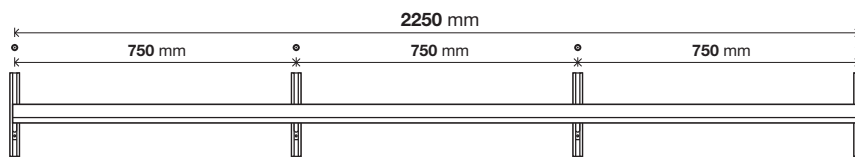
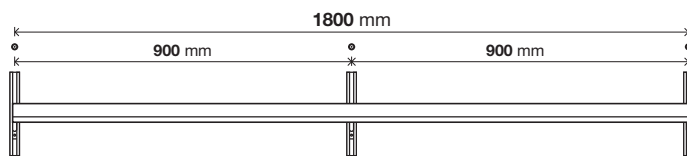
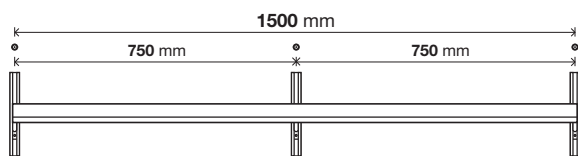
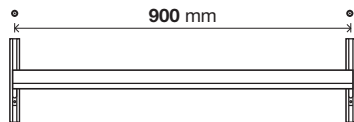


1

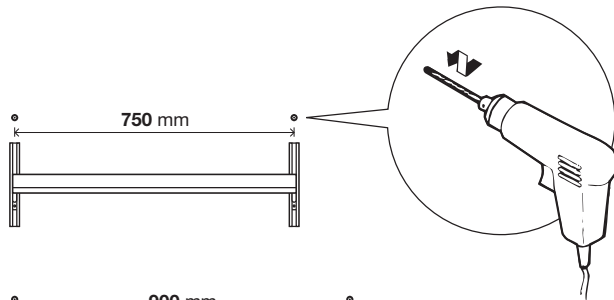

A

Before assembling the bookshelf, choose the position on the wall where it will be placed.

B

If the arrangement includes flush shelves, it is essential to respect the space between uprights as shown in the figure. It is advisable to first attach the outer uprights with the correct interval and then proceed with the inner ones.

C

If it is an arrangement where the shelves extend past the uprights, you can place the uprights as you choose. Remember however that the distance between the uprights must not exceed 900 mm and the part of the shelf that extends past the uprights must not exceed 450 mm.

D

If the arrangement includes a CD rack, the distance between the uprights must be 900 mm.

## FASTENING THE UPRIGHTS TO THE WALL

2


**A**

Place the upright on the wall. Use a level to keep it vertical and mark the places to drill on the wall.

**ATTENTION:** Before continuing, make sure that the upright is facing the right way by checking the position of the block.


**B**

Make a hole using a Ø8 drill bit.

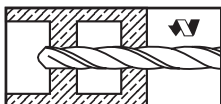


**C**

Install the insert. **ATTENTION:** the inserts provided are suitable for full or perforated walls. Kristalia will not be held liable for the suitability of the inserts on other types of walls.

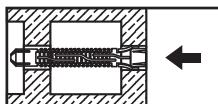

**D**





Place the upright to be attached and insert the anchoring screws.

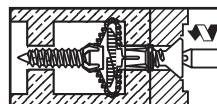


**E**

Repeat the same operations for the other uprights.

For proper alignment of the structure, we recommend the utmost the care in making the holes, using a level and a straightedge.

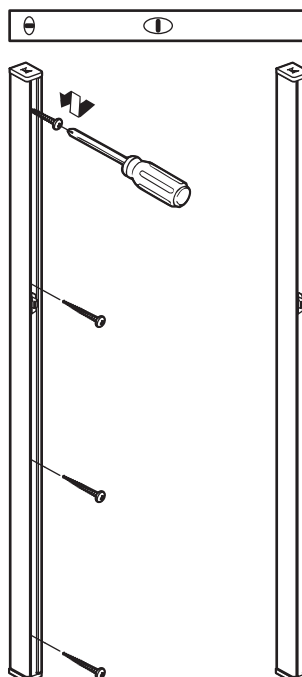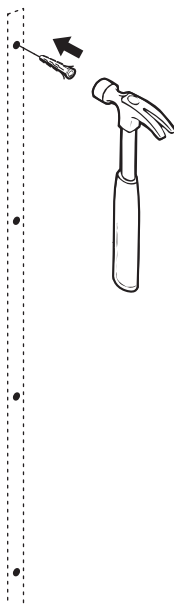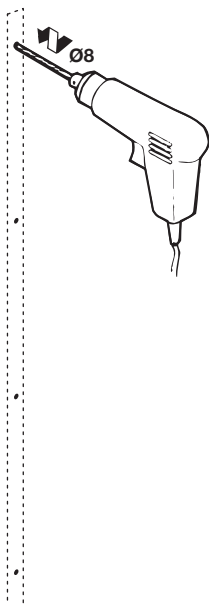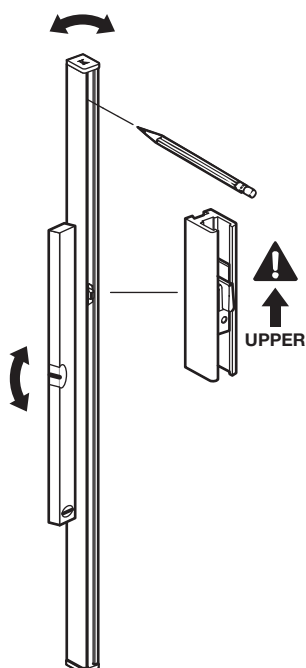

If the arrangement includes supports, they must be installed before fastening the uprights to the wall. Put the upright in place and fasten it with just one screw at the bottom using an Allen wrench. The upper hole will be used to attach the upright to the wall.

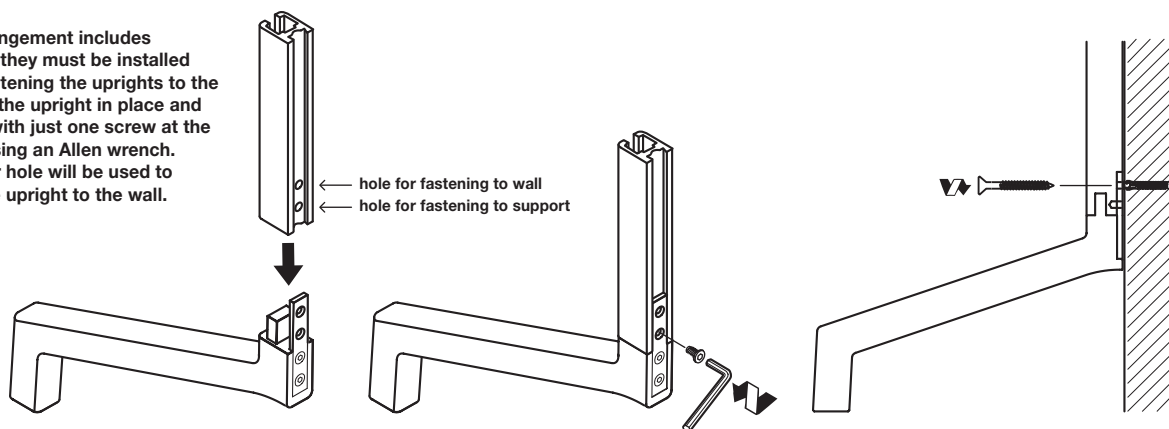



## INSTALLATION OF THE SHELF SUPPORTS ↘

3

A

After attaching the uprights to the walls, proceed with the assembly of the shelf supports on the previously installed blocks.


This assembly does not require tools.

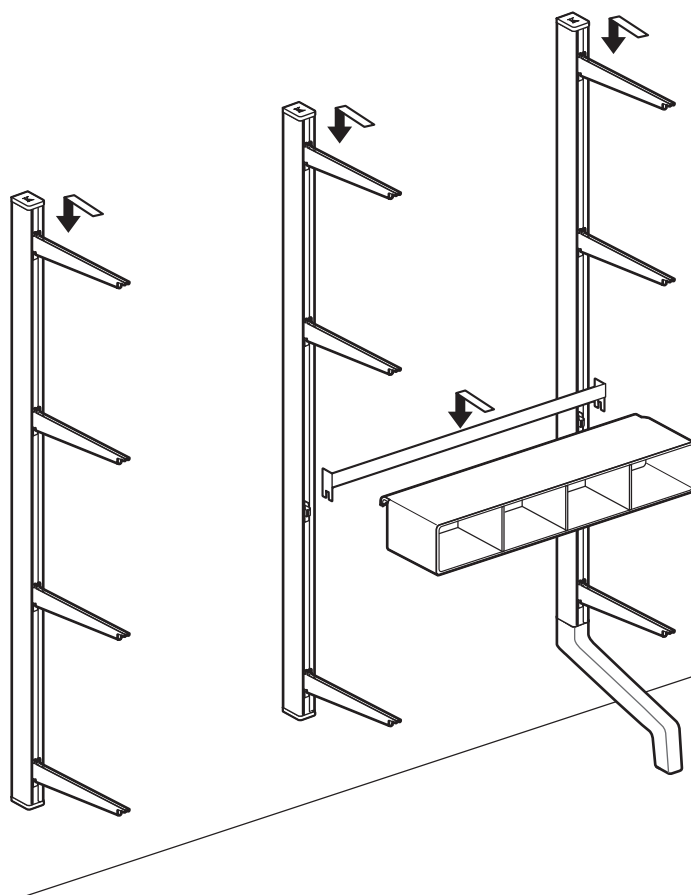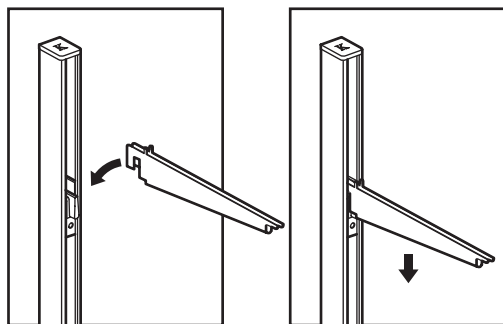


4




If the arrangement includes end side panels, they must be fastened before installing the shelves on the wall.  
Place the end panels near the two hollow places and insert them using a rubber mallet.

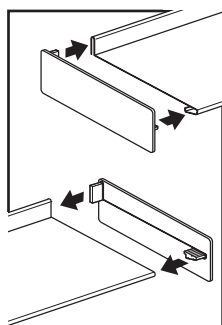




If end side panels are not included, there are plastic plugs to be inserted in the front slot of the side.

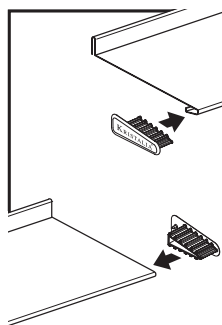

Install the shelf by raising it and pushing it all the way in so that it hooks onto the fastening pegs located on the back edge of the shelf supports.

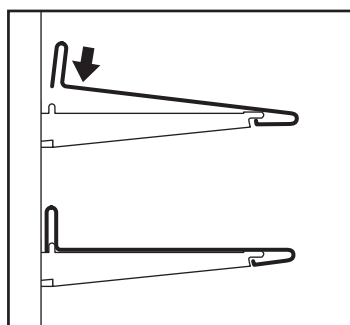

To level the shelves, loosen the dowel on the shelf support block. Manually ensure the shelf is completely aligned, then tighten the dowels again.

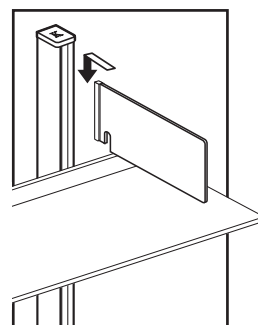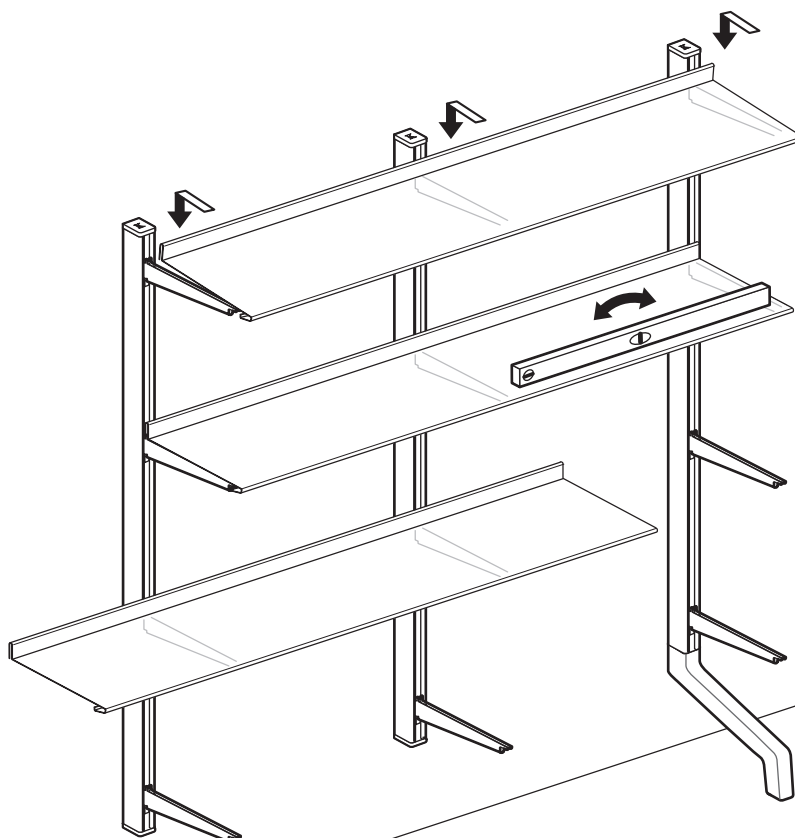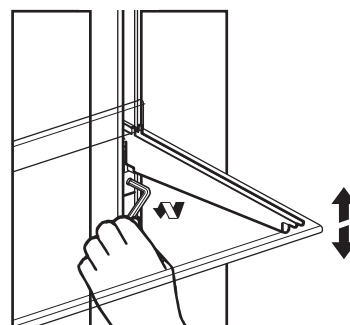

Insert the bookend in the upright slot and push down on it.  
This installation does not require any tools.