



Chicago Plenum/ Gasketed Electrical Cover Plate

This instruction is valid for all R1 and R2 ultra shallow recessed fixtures

Warning: Before starting any work ensure that all sources of power are turned off. All work must meet local/national codes and be performed by a certified electrician. Do not mount fixtures vertically.

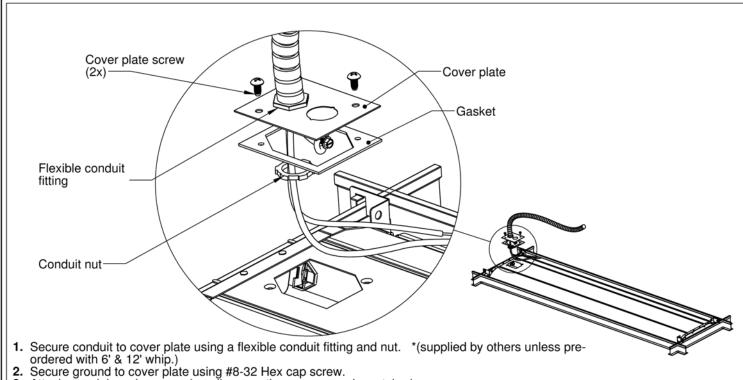

- 3. Attach remaining wires ensuring all connections are properly matched.

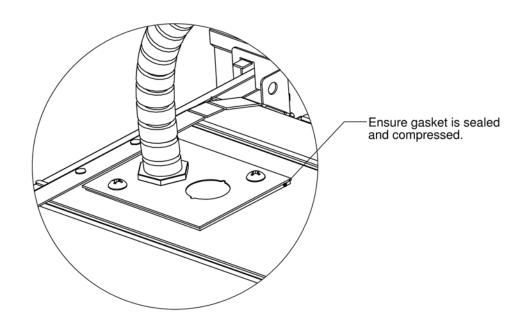

- 1. Secure cover plate to housing using both cover plate screws.
- 2. Ensure gasket is wrinkle free and fully compressed.

Corelite 4675 Holly St Denver, CO 80216 P: 303-393-1522 www.corelite.com

Cooper Lighting 1121 Highway 74 South Peachtree City, GA 30269 P: 770-486-4800 www.cooperlighting.com

