

# Two-Circuit MonoRail FreeJack Connector

700MO2CHED\_

1.6



## GENERAL PRODUCT INFORMATION:





This product is suitable for indoor dry locations only.

This product should be used with Tech Lighting Two-Circuit MonoRail system only.




## Install the FreeJack Connector onto the Two-Circuit MonoRail

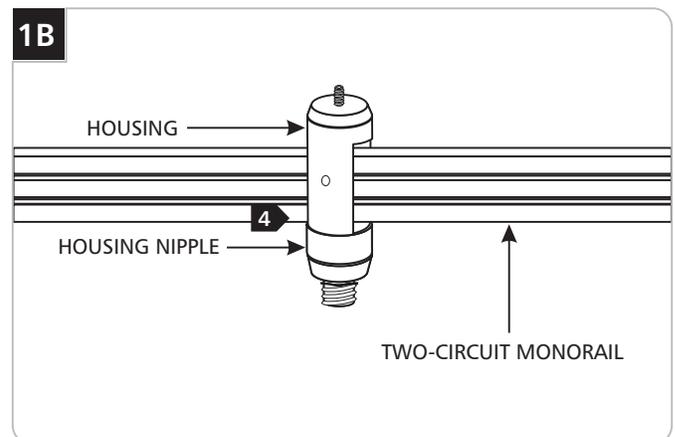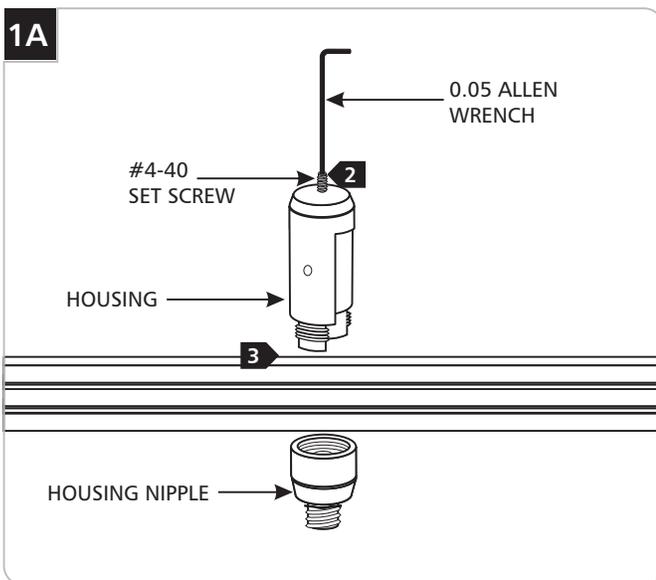


- 1** Turn the power to the Two-Circuit MonoRail off.
- 2** Back out the #4-40 set screw on top of the Two-Circuit MonoRail with the 0.05 Allen wrench.
- 3** Place the housing onto the Two-Circuit MonoRail.


- 4** Screw the housing nipple to the housing tight. Make sure not to cross thread the housing nipple to the housing.

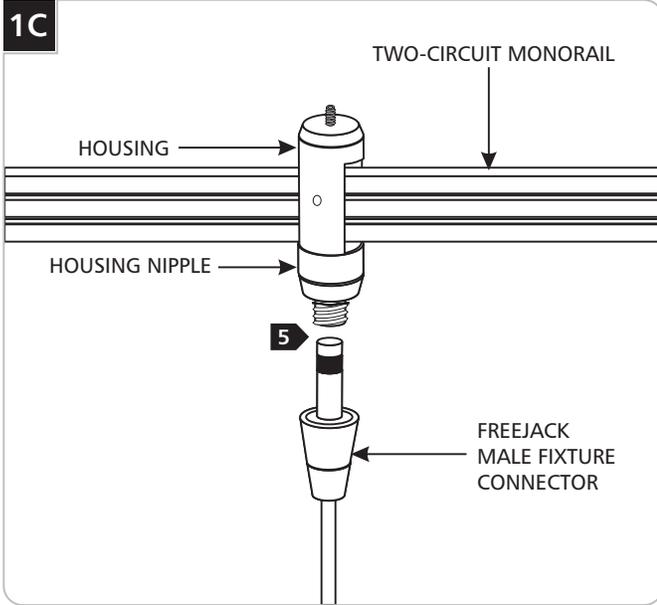

**5** Screw the FreeJack male fixture connector onto the housing nipple.

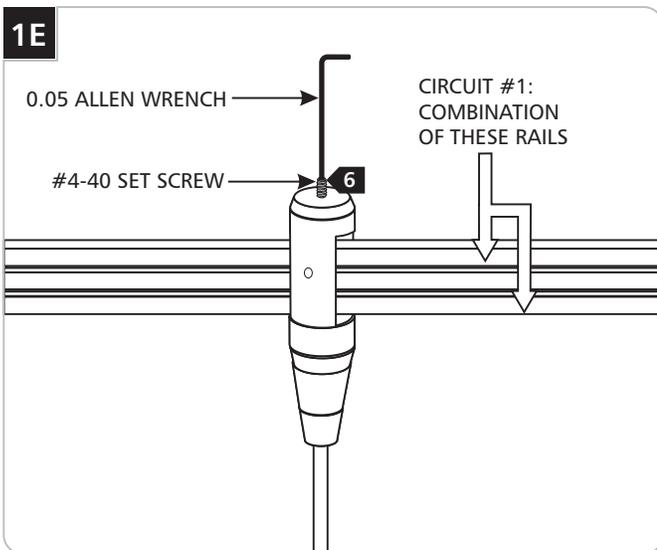

**6** Select circuit #1 by fastening the #4-40 set screw on top of the housing very tight with the 0.05 Allen wrench.

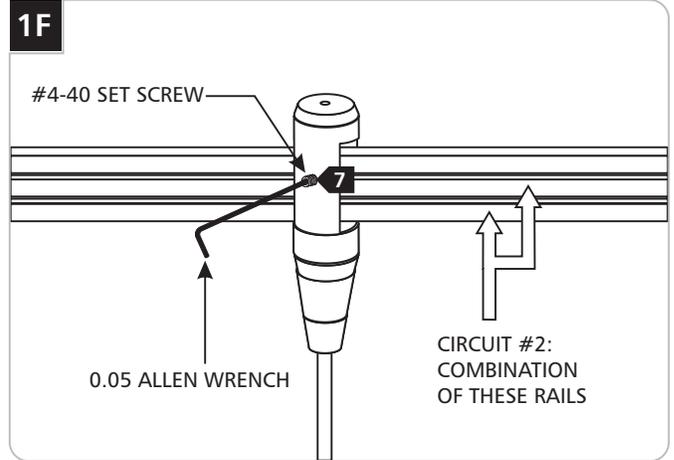

**7** When using circuit #2, remove the #4-40 set screw from top of the housing and screw it into the side with the 0.05 Allen wrench very tight.

**NOTE:** Never use more than one set screw to select a circuit on the Two-Circuit MonoRail connector.

**NOTE:** Do not load either circuit over the maximum system rating.

**SAVE THESE INSTRUCTIONS!**



7400 Linder Ave, Skokie, IL 60077  
847.410.4400

[www.techlighting.com](http://www.techlighting.com)

© 2008 Tech Lighting, L.L.C. All rights reserved. The "Tech Lighting" graphic is a registered trademark of Tech Lighting, L.L.C. Tech Lighting reserves the right to change specifications for product improvements without notification.  
A Generation Brands Company