

NARROW PLATE LATCHSET INSTALLATION TEMPLATE


NOTE: Template may not be true-to-size. Please use for reference purposes only. DO NOT drill until measurements are verified.

CAUTION: DOOR AND FRAME MANUFACTURERS

When door gasketing or silencers are used, proper allowances must be made for strike location to maintain a common centerline with lock and door so that the bolt will freely enter strike.

USE LATCH
FACEPLATE AS
A TEMPLATE

DRILL 1" DIA. HOLE

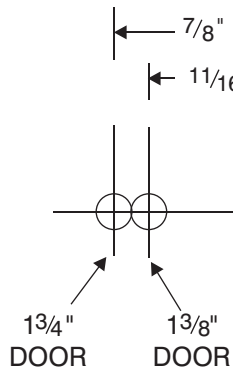

DRILL 3/4" DIA. HOLE

LATCHBOLT
FOR LEVER OR KNOB

2 3/8" B.S.

2 3/4" B.S.

38"
FROM
FLOOR

3 3/8" CC

IMPORTANT:


Drill 1" Diameter hole.
3 3/4" Deep for 2 3/8" B.S.
4 1/8" Deep for 2 3/4" B.S.

IMPORTANT:

NOTE: DO NOT DRILL
IF PRIVACY BOLT IS
NOT BEING USED.

1 3/4" DOOR
1 3/8" DOOR

DRILL 1" DIA. HOLE



DRILL 3/4" DIA. HOLE

PRIVACY BOLT
ONLY DRILL IF USING
PRIVACY BOLT

USE PRIVACY BOLT
FACEPLATE AS
A TEMPLATE

FOLD ALONG DOOR EDGE



CEDAR GROVE, NJ 07009

OM-NPLT

Rev. 12/29/10