


j-cap:

- 1) Examine trim to assure quantity and quality is as ordered. The installer must supply the adhesive to adhere the **j-cap** and drywall compound. The adhesive used to adhere the **j-cap** should be a craft-type contact cement or a 1/2" double-faced film tape.
- 2) With a pencil, lightly mark the perimeter of the area to receive the trim and wallcovering on the wall.
- 3) Measure and cut the trim to size using a miter saw with a carbide tip blade. Cut the ends of each piece to a 45° angle. The longest leg of the trim will face the new wallcovering side.
- 4) Apply craft-type contact adhesive or double-faced tape to the backside of the longest leg and adhere to the wall. Follow the manufacturer's directions.
- 5) With a broad knife, feather drywall compound to the highest point on the long leg of the trim. See *graphic*.
- 6) Follow wallcovering installation instructions. For best results, apply wallcovering; trim the wallcovering, leaving approximately 1/8" extra material around the perimeter; and tuck exposed edges into the 1/16" opening.

Profile View

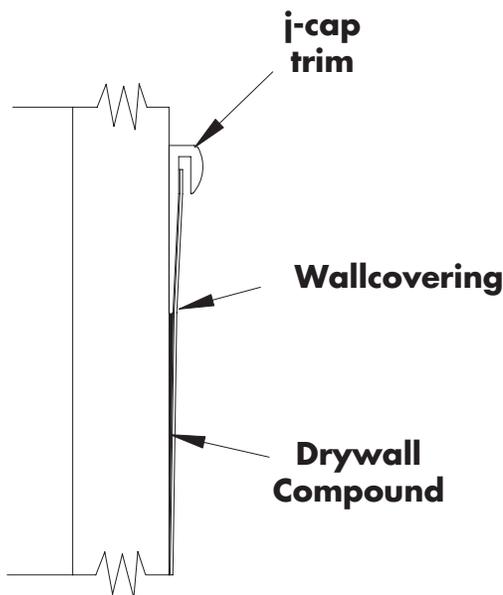

j-trim:

- 1) Examine trim to assure quantity and quality is as ordered.
- 2) Follow **tac-wall**® installation instructions for "Installing **tac-wall** as a notice board." At this point, only cut material to size and acclimate.
- 3) Measure and cut the trim to size using a miter saw with a carbide tip blade. Cut the ends of each piece to a 45° angle. The longest leg of the trim will face the inside of the frame.
- 4) Dry fit the trim pieces to the **tac-wall** on the floor, assuring a good finished appearance.


For 4' x 8' or smaller tackboards:

- 5) Apply a small bead of L910 linoleum flooring adhesive to the interior of the trim. Immediately position trim pieces onto **tac-wall** and hold into position with masking tape. Allow adhesive to cure between trim and **tac-wall**. Follow the **tac-wall** installation instructions and apply the panel to the wall.

For larger installations:

- 6) Follow **tac-wall** installation instructions, leaving 1-1/4" around the perimeter without L910 adhesive. Apply a small bead of L910 to the interior and back of the trim and position. While wet, clean excessive adhesive with soap and water. Peel back an edge of the **tac-wall** material and slide the trim into place. Press firmly to assure a good bond. Install remaining pieces in the same fashion. For best results, install trim pieces immediately after installing **tac-wall** panel(s).

Profile View

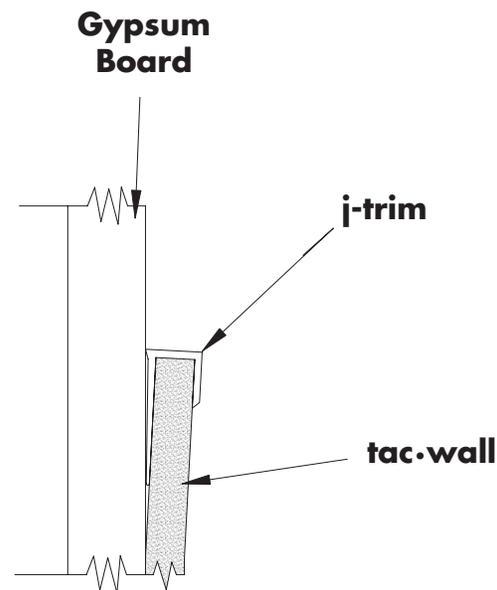

j-cap & j-trim installation instructions

www.walltalkers.com

walltalkers

a division of RJF International Corporation

3875 Embassy Parkway

Fairlawn, OH 44333

PH: 800.820.9255 • Fax: 330.668.7703

© RJF International Corporation

7075JCT1111 11/03