



E-10291 Chinese Pictured

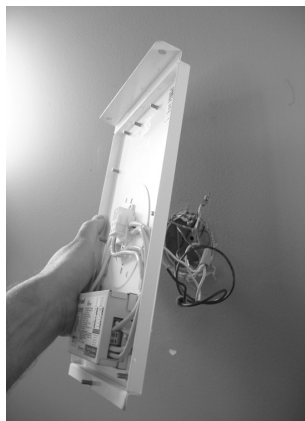


Figure 1

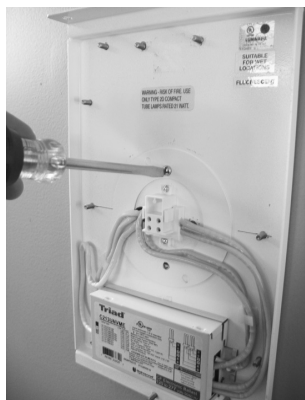


Figure 2



Figure 3

Instructions for Installation:

E-10247, E-10266, E-10291

Lamping Specifications:

Fluorescent 120v-277v

One, CFS16W/GR10q-4

Fluorescent Dimming 120v or 277v

One, CFQ/TR 18W

IMPORTANT | CAUTION
READ ALL INSTRUCTIONS THOROUGHLY.
TURN OFF POWER AT CIRCUIT BREAKER OR
FUSE BOX BEFORE PROCEEDING.

Step 1 Turn off power at Junction box.

Step 2 Remove fixture backplate from the decorative cage assembly and make wire connections. Connect black fixture wire to black supply wire at J-box (load). Connect the white fixture wire to the white supply wire at J-box (neutral). Connect copper fixture wire to green screw or ground wire at J-box. (See Figure 1)

Step 3 Push all connections into junction box and attach the fixture backplate to the junction box with screws. (See Figure 2)

Step 4 Apply a premium waterproof caulking to the edge of the backplate at the wall to prevent weather or moisture from entering the connections at the junction box. Leave a small gap (approx. 1/4" to 1/2") at the bottom of the backplate to allow for moisture or water to escape. (See Figure 3)

Step 5 Install lamp per relamp label recommendations.

Step 6 Install the decorative cage assembly on the backplate by aligning the standoffs in the cage housing with the holes in the backplate. It will be necessary to tilt the cage assembly at an angle to align the standoffs and then lower the cage into position. (See Figure 4)

Step 7 Secure the cage assembly onto the backplate with the decorative knob. (See Figure 5)

Step 8 Install lower perforated metal diffuser and secure into position with cap head machine screws. (See Figure 6)

Step 9 Restore power to the circuit.

IMPORTANT! AT ALL TIMES WIRING
TO BE DONE PER NATIONAL
ELECTRIC CODES (NEC) OR
APPLICABLE LOCAL CODES

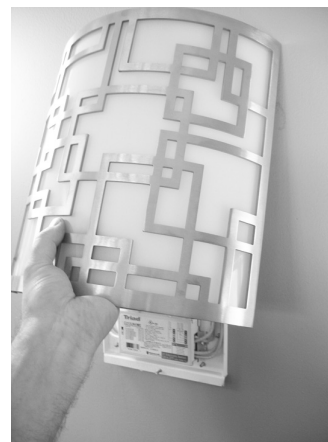


Figure 4

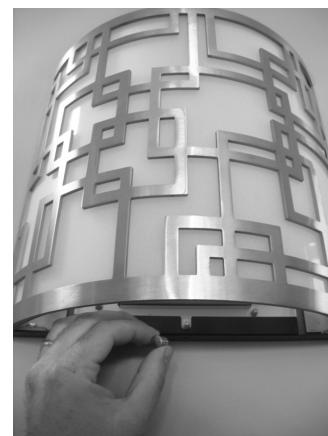


Figure 5

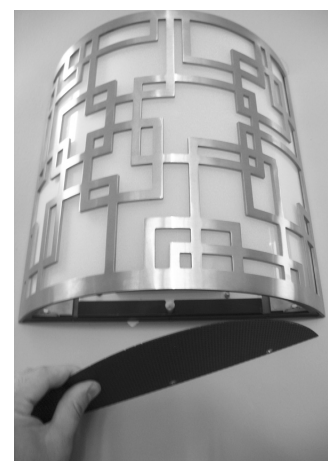


Figure 6