


Stationary IV Pendant


Installation Instructions

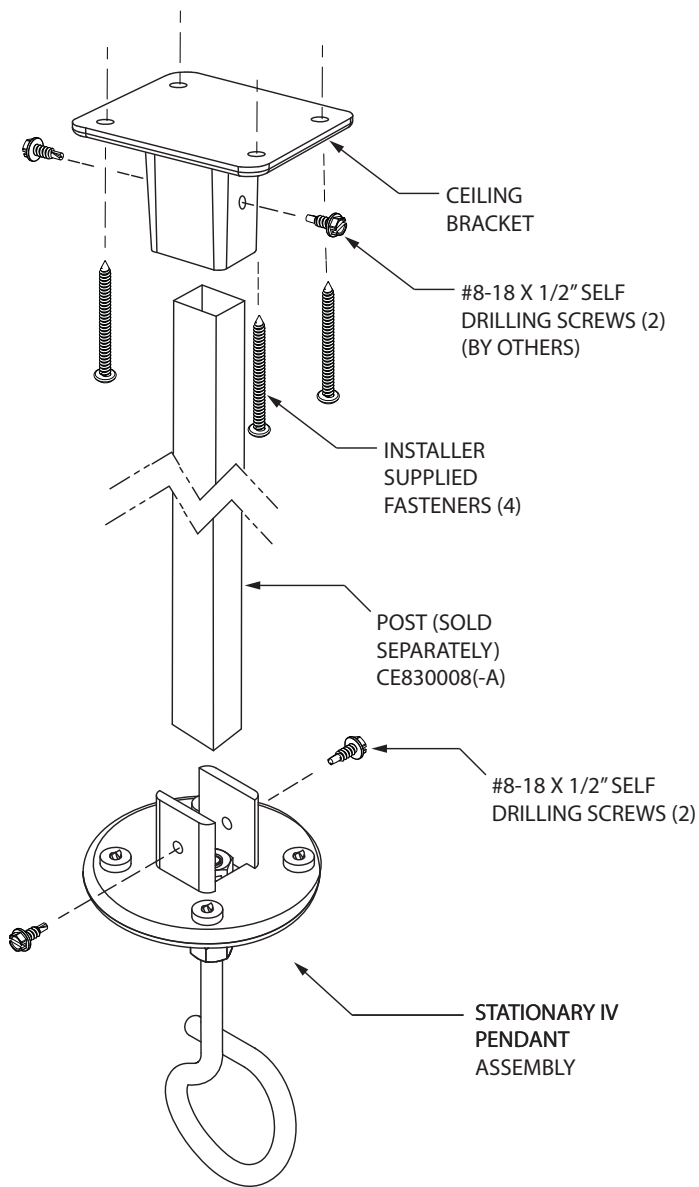

1. Attach ceiling bracket to the ceiling. Use the bracket as a template and transfer the hole locations to the ceiling. Attach the bracket to the ceiling using installer supplied fasteners appropriate for the type of ceiling.
2. Cut post to the required length and attach it to the ceiling bracket using 2, #8 self-drilling screws. (by others)
3. Attach Stationary IV Pendant Assembly to the bottom of the post using 2, #8 self-drilling screws.
4. Attach IV Bag Holder to the Stationary IV Pendant Hook.

Optional Drops:

- CE950408
- CE950486 - 6" Carriage Drop Hook
- CE950409 - 12" Carriage Drop Hook
- CE950496 - 18" Carriage Drop Hook
- CE950410 - 24" Carriage Drop Hook

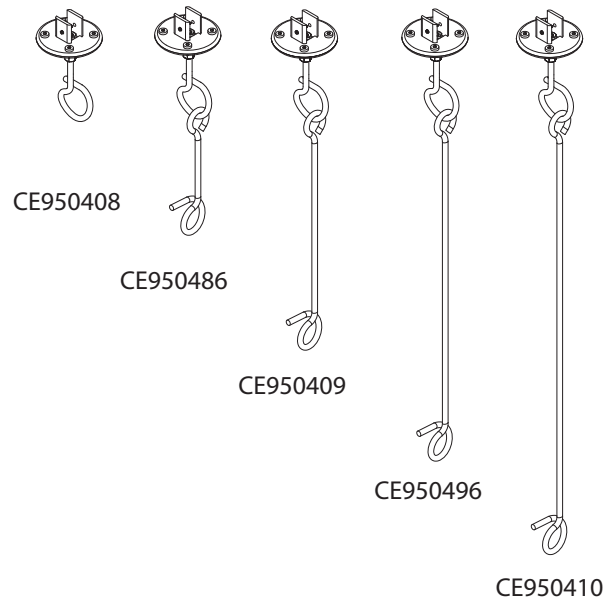

IPC.1974/REV1

Installation Hotline • 866.EZINPRO
 Inprocorp.com • 800.222.5556 • 262.679.9010
 World Headquarters S80 W18766 Apollo Drive, Muskego, WI 53150 USA

CLICKEZE®
 PRIVACY SYSTEMS
 A DIVISION OF INPRO®