


Assembly Instructions


Perry Glide

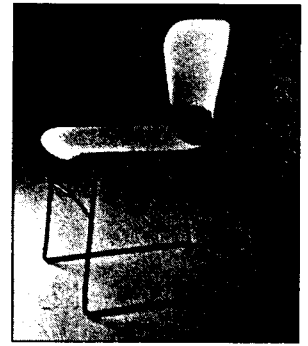


March, 1993

KI
1330 Bellevue Street
P.O. Box 8100
Green Bay, Wisconsin 54308-8100

TEL (414) 468-8100
FAX (414) 468-0280

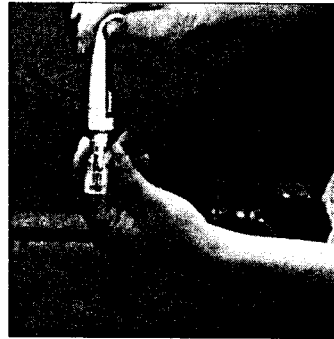


1. Hold glide upright with the bottom flat surface in the palm of your hand. Lay a thin bead of glue down middle of the inside of the glide.

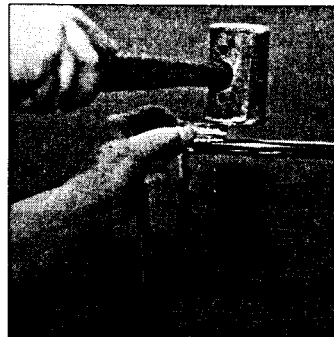


2. Place the glide on the chair frame 1/2" from where the frame begins to curve. With a mallet, pound one side of the glide onto the chair frame.



3. Use the mallet to pound the other side of the glide onto the frame until the glide is level.

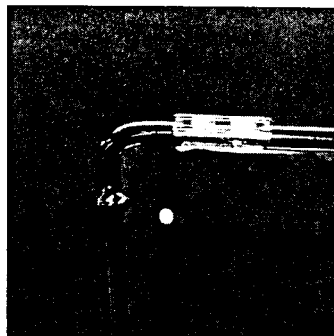

4. Set the frame on the floor and let glue dry. Allow to dry for five minutes. (If glide is not level, step on frame above the glide until the glide levels out.)

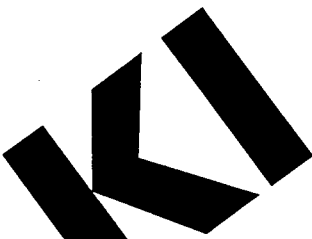

Assemble units as described herein only. To do otherwise may result in instability. All screws, nuts and bolts must be checked periodically after assembly. **Failure to assemble properly, or to secure parts may result in assembly failure and injury.** Illustrations and specifications are based on current product information at the time of this printing.