

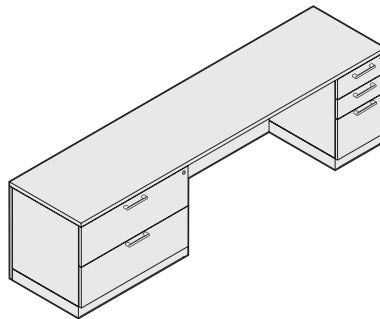
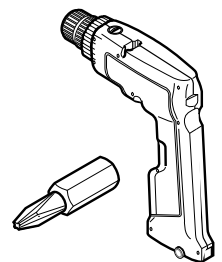
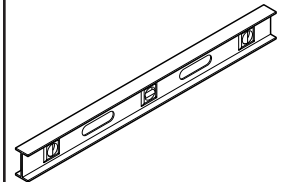
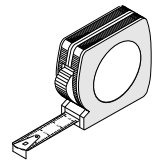
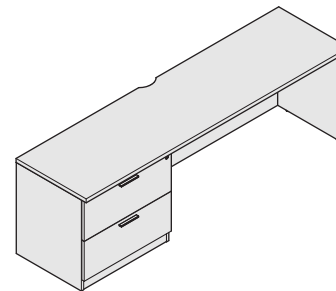


Two Pedestal  
Kneewell Credenza  
(page 2)

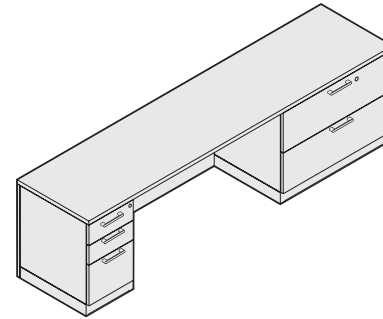

End Panel / Pedestal  
Kneewell Credenza  
(page 3)


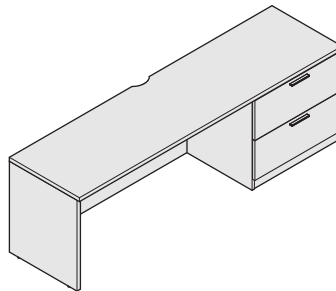


If you have a problem, question, or request, call  
your local dealer, or Steelcase Line 1 at  
888.STEELCASE (888.783.3522)  
for immediate action by people who want to help you.  
(Outside the U.S.A., Canada, Mexico, Puerto Rico,  
and the U.S. Virgin Islands, call: 1.616.247.2500)  
Or visit our website: [www.steelcase.com](http://www.steelcase.com)  
© 2004 Steelcase Inc.  
Grand Rapids, MI 49501  
U.S.A.  
Printed in U.S.A.

## TWO PEDESTAL KNEESPACE CREDENZA

**Note:** For more detailed information on installing pedestals, refer to assembly direction 939500237.

1. Remove drawers to gain access to remove screws holding pedestals to worksurface.
2. Reconfigure pedestals from one side to the other.
3. Secure with screws that were removed in step 1.
4. Reinstall drawers into pedestals.

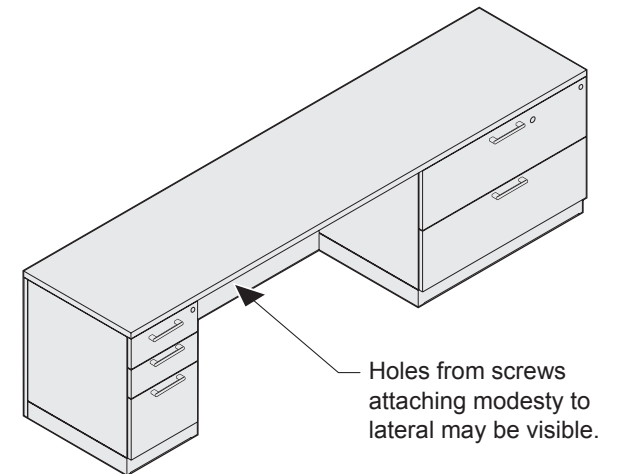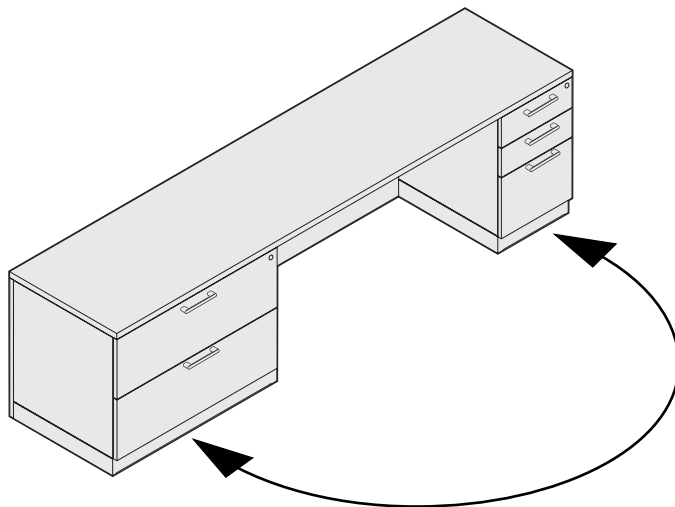





Credenzas with storage are modular and may be reconfigured. Remove pedestals and switch from one side to the other. Screws that attach modesty panel to unit may need to be removed.

## END PANEL / PEDESTAL KNEESPACE CREDENZA

1. Remove drawers to gain access to remove screws holding pedestal to worksurface.
2. Remove end panel.
3. Switch pedestal to opposite end and position new end panel.
4. Secure components with screws that were removed in steps 1 and 2.
5. Reinstall drawers into pedestal.

**Note:** For additional information on connecting an end panel with a back panel, go to page 4.

*Storage units may be reconfigured, but End Panels are left or right handed and can't be used in the opposite position. A new End Panel or L-Panel of the opposite hand will need to be ordered.*

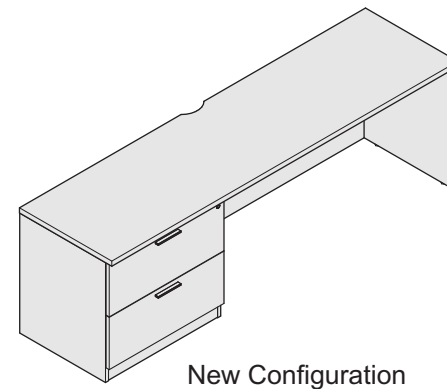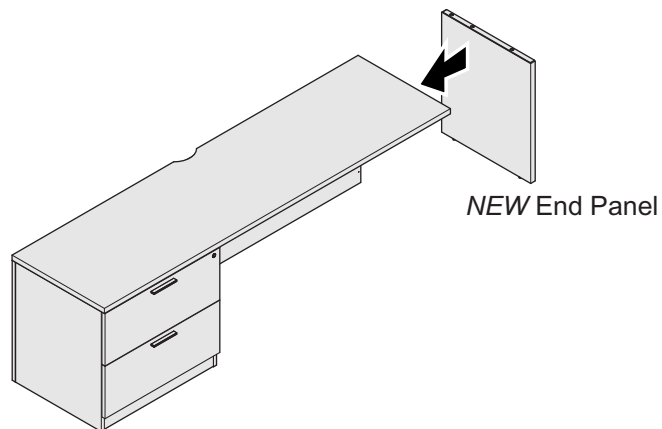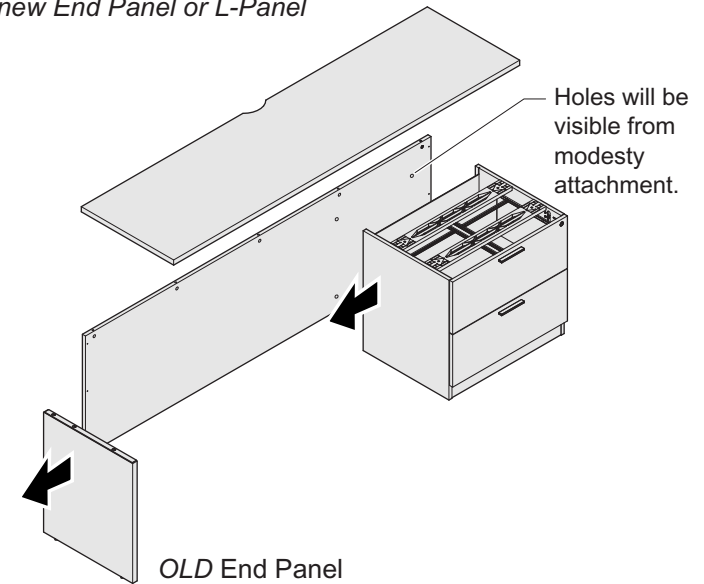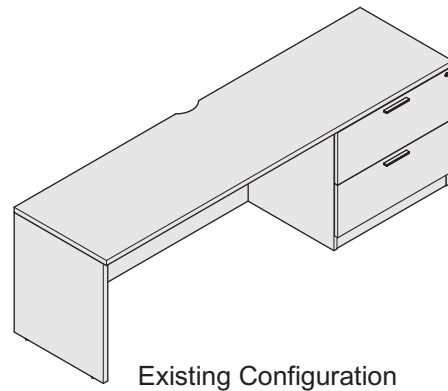

## CONNECT AN END PANEL TO A BACK PANEL

1. Carefully turn worksurface over onto carpet or other clean, soft material.
2. Insert cam pins into pilot holes in the bottom of worksurface as shown.
3. Insert (3) shoulder screws into holes in the back panel.
4. Align back panel with end panel (4a) and insert the shoulder screws into the clips (4b). With screw head inserted into clip push back panel downward (4c) until it is secured (4d).

