



# Fluent

## Suspended Overhead Storage

### Tools Required

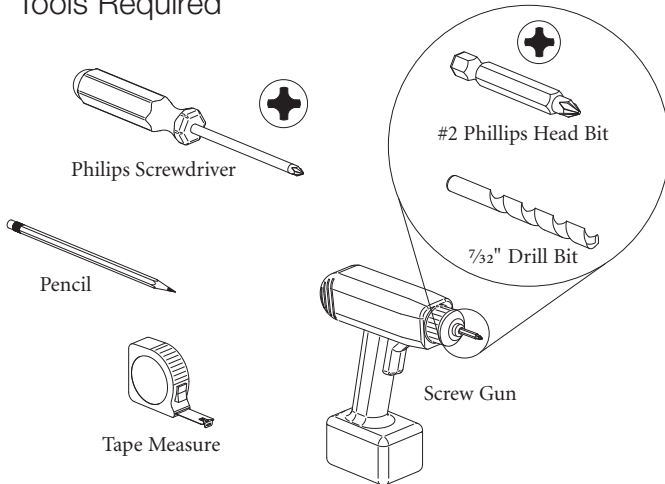

### Package Contents

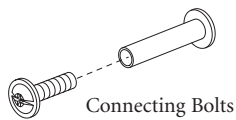

### Installation

1. A suspended overhead storage unit mounts between two set-on storage units or between a set-on storage unit and a vertical storage unit. Align the units in their desired position. Adjustable shelf holes have been pre-bored on a 1 1/4" boring pattern into the inside end panel of each cabinet. Using a 7/32" drill bit, bore a through-shelf hole from the suspended storage unit into the adjoining unit. (Figure A).
2. Align connecting holes in storage units and attach together using the eight (8) provided connecting bolts, four per side. Insert half of a connector bolt into one connecting hole, and insert the other half into the opposite connecting hole. Tighten all bolts securely, making sure set-on-storage unit and overhead storage units are flush against each other with no gaps. (Figure B).
3. A suspended unit should not be connected to another suspended unit! (Figure C).

Figure A

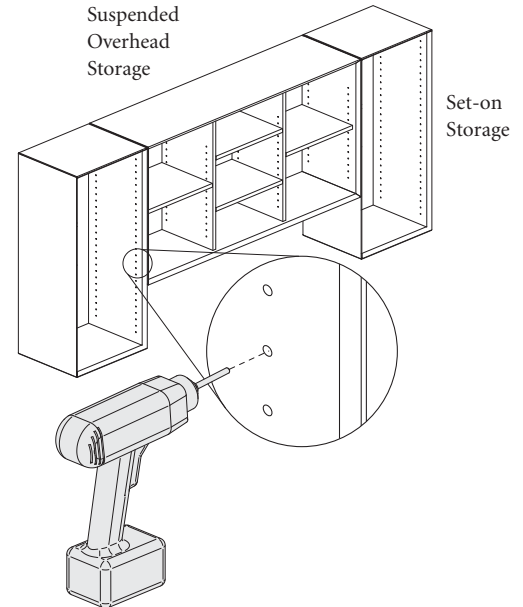


Figure B


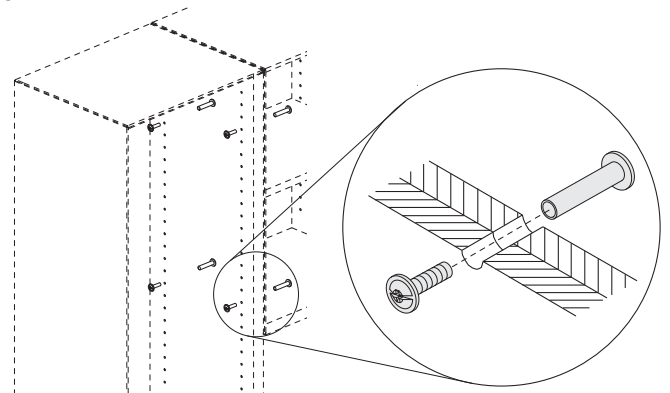


Figure C

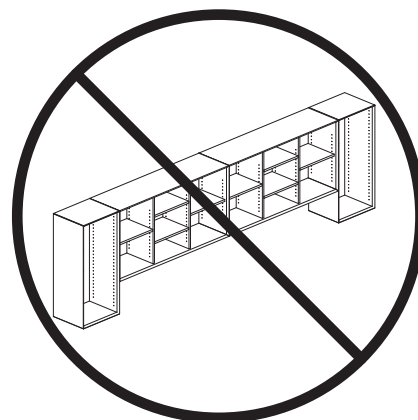

Proper product installation, in accordance with these instructions, is the responsibility of the installing agent. If you have any questions concerning these instructions, please call Kimball Office Customer Service.

Kimball<sup>®</sup>Office