

Undersurface Cable Manager

Tools Required

- Cordless Drill
- #2 Phillips Screwdriver Bit

Package Contents

- (4) #8 x 3/4" Flat Head Phillips Wood Screws

Installation

1. Determine location under worksurface for mounting the Undersurface Cable Manager.
2. Install four #8 x 3/4" Flat Head Phillips Wood Screws. (Figure A)
3. Position cable in desired location on the cable manager and push the cable upward until the loops close and retain the cable. (Figure B)
4. Cable loops on the wire manager can be removed to allow for larger or multiple cables. To remove a loop, twist the loop 90 degrees and then pull down.
5. Place additional Undersurface Cable Managers as needed Approximately 24" apart. (Figure D)
Note: Install close to the end of worksurfaces when using with ganged worksurfaces.

Figure A

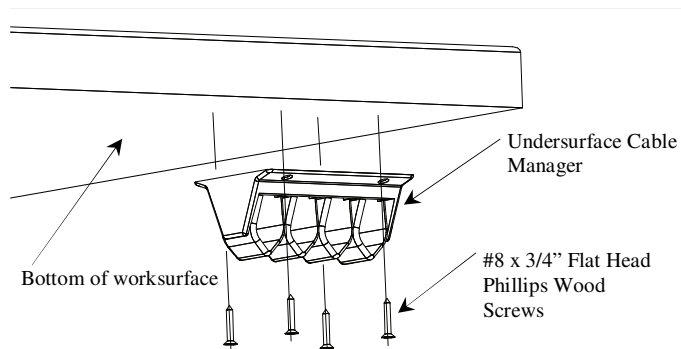


Figure B

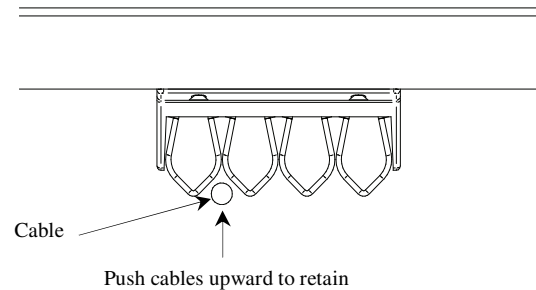


Figure C

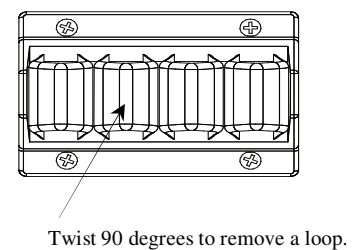


Figure D

