

Universal

Tackboards and/or Powered Tackboards

Tools Required

- Drill/Screw Gun
- #2 Phillips Head Bit
- Level
- Small Blade Screwdriver

Hardware Required

- #8 x 5/8" Flathead

Installation

1. Tackboards can be attached to any highback organizer to provide a tackable surface. Tackboards can also be wall mounted. The tack panel is provided with routed channels on the back side to help manage cords. (Figure A).
2. Insert a screw into the hole of each loose Dual Lock™ pad, 4 or 6, as required. (Figure B).
3. Press pads with screw protruding against the pads which are already mounted to the back of the tackboard, locking the pads together. Position tackboard on mounting surface, making sure it is level. Apply pressure on board over pads to mark surface with screw points. (Figure C).
4. Carefully detach pads with small blade screwdriver and fasten in locations previously marked in step 3. Position tackboard against mounting surface, making sure it is level, and engage until each pair of pads snap together.
5. **Wall Mount Caution:** Pads should be located on wall studs, or secured to wall with anchors (not provided).

Figure A

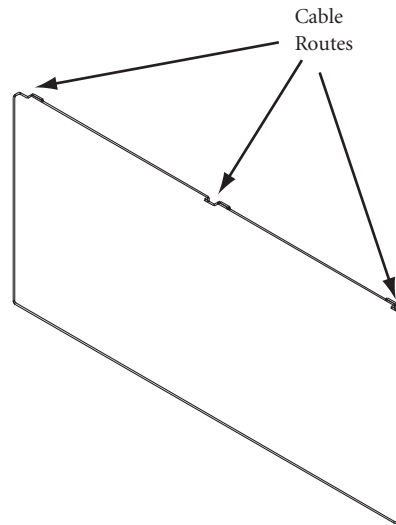


Figure B

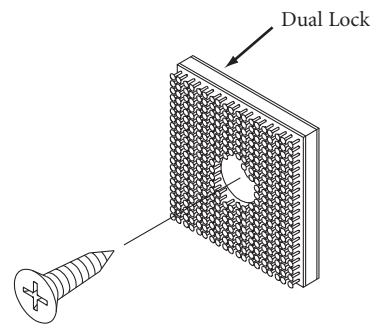


Figure C

