Priority Page 1 of 1

Above Surface Storage

Tools Required

■ Scissors or Utility Knife ■ Pencil

Package Contents

■ Shelf Supports ■ Double-sided Tape (installed on unit)

Installation

Caution: The tape is a very strong adhesive and bonds instantly to any surface.

 To securely attach a storage unit to a worksurface, position the storage unit on top of the worksurface and mark its location. Remove the film backers from the double-sided tape and adhere the unit to the worksurface. (Figure A). The worksurface MUST be clean, dry and free of any dirt or film to assure adequate adhesion. (Figure B).

Figure A


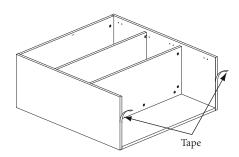


Figure B

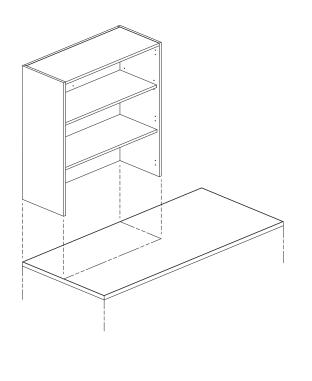

Kimball Office