


Perch ganging instruction

Tools Required

- Cordless Drill/Driver
- #2 Phillips Bit
- 16 x #8x3/4" Phillips Flathead Woodscrews
- 2 x Pairings Perch ganging brackets

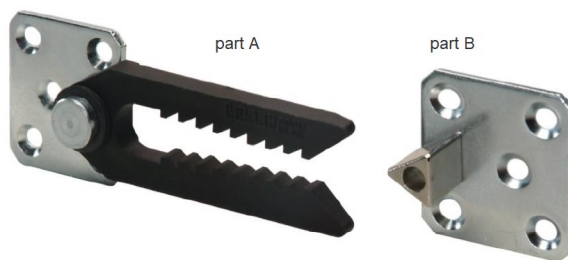

Installation

1. Put the units that are being ganged on the back/side next to each other.
2. Locate the cutouts in the spacers.
3. Attach bracket part A inside of the cutout and flush with the edge of first Perch.
4. Attach bracket part B to the second Perch following the same guidelines. (Shape of the cutout will help to locate two bracket parts relatively to each other).
5. Attach another ganging bracket pair to the opposite side of Perch units.

Figure A

