

Storage Cubby for Xsite and Wall Mounted Traxx

Tools Required

- Tape Measure
- Level
- Screwdriver

Hardware Required

- Support Blocks

Installation

1. Attach Support Blocks to each vertical frame members that will be behind the storage cubby after final installation.
2. Peel back off of the adhesive tape and attach it to the frame 6" down from the bottom outer edge of Traxx to bottom of the block.
3. Make sure the blocks are facing in the direction the cubby will rest. (Figure A)
4. Install Xsite tiles. (Figure B)
5. Storage cubbies are mounted using a series of upper tabs and integral flanges which are riveted to the back of cubby. (Figure C).
6. Tilt the cubby and slide the upper tabs into the extrusion slot and push cabinet up against the upper edge of the extrusion slot. While holding the cubby against the edge of the extrusion slot, rotate the cubby allowing the integral flanges to swing into the same extrusion slot. Allow the cubby to lower until the integral flanges rest against the lower extrusion slot edge. Ensure that all tabs and integral flanges are inside the extrusion slot. (Figure D).
7. To raise the front of cubby for leveling, loosen screws and slide bracket towards the back. To lower front of cubby, slide bracket towards the front. Tighten screws when cubby is level. (Figure E).

Figure A

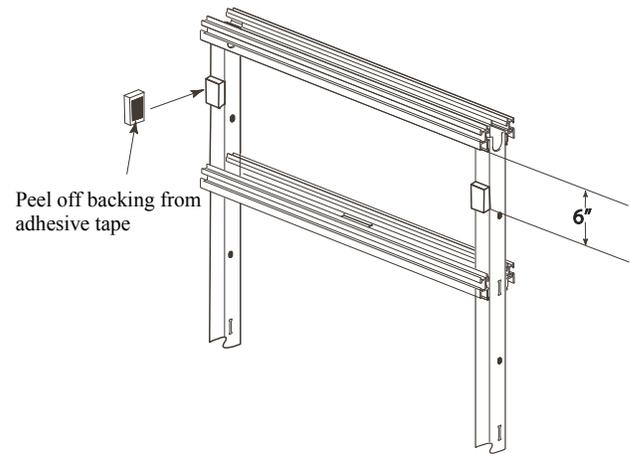


Figure B


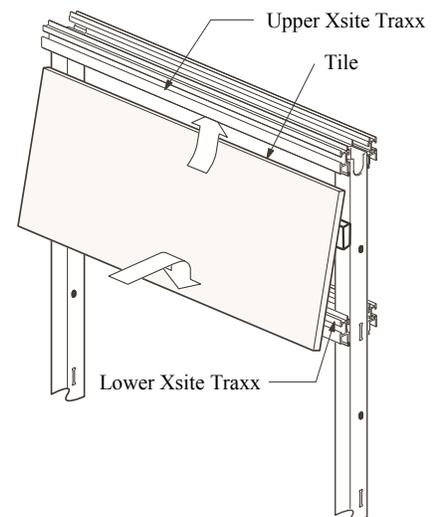


Figure C

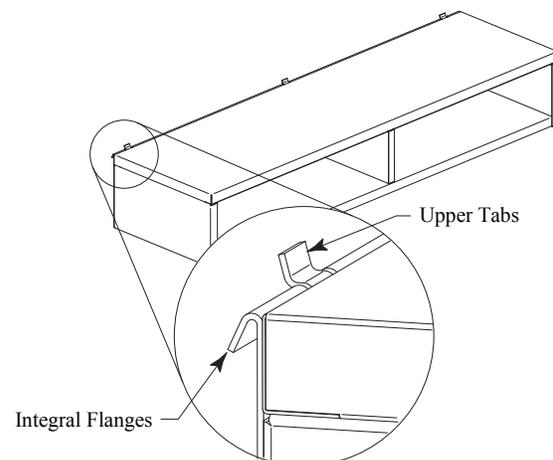

Storage Cubby for Xsite and Wall Mounted Traxx

Installation Continued

Figure D

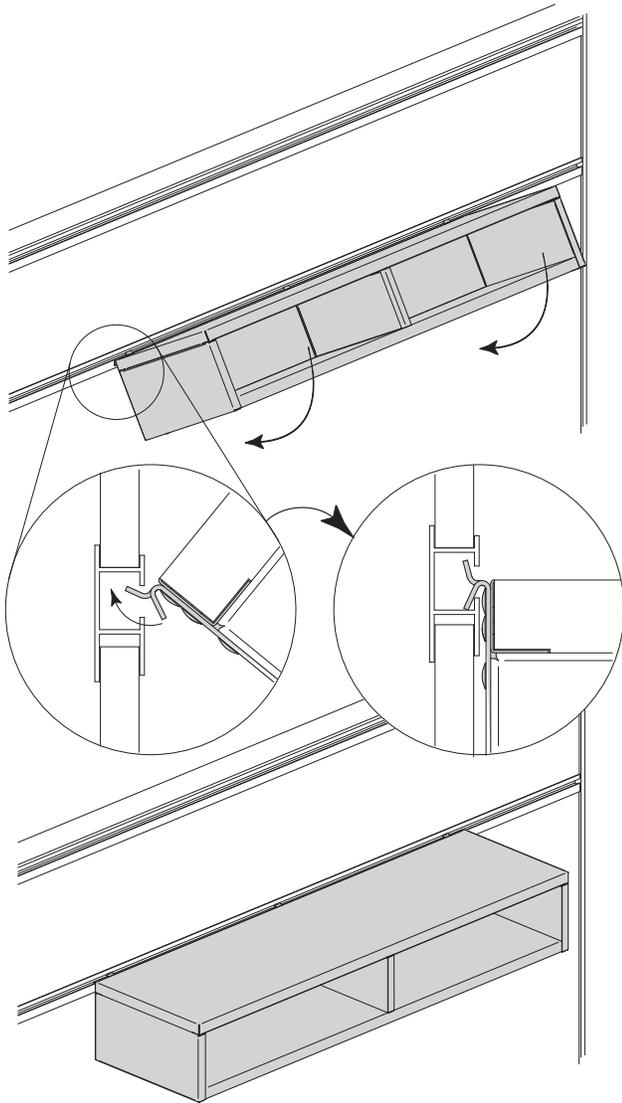


Figure E

