

Technology Tray

Tools Required

- Cordless driver with magnetic post and following tips
#2 Robertson square

Hardware Required (Included)

- 2 - #8- 3/4" Panhead wood screws for each End Trim and Extended Connectors.

Installation

1. Unpack Technology Tray components and hardware.
2. Install Technology Tray by sliding the open hem in the tray over the Lower Crossrail or in to the Accessory Rail. Slide the cutouts over any electrical receptacles. See Figure A and B.
3. Install any Corner trims or Spanners by sliding the open hem over the Lower Crossrail.
4. Install any End Caps or Extended Connectors by first sliding the open hem in the tray over the crossrail or in to the cross rail then affix the front to the underside of the worksurface using the provided #8 X 3/4" wood screws.

Figure A

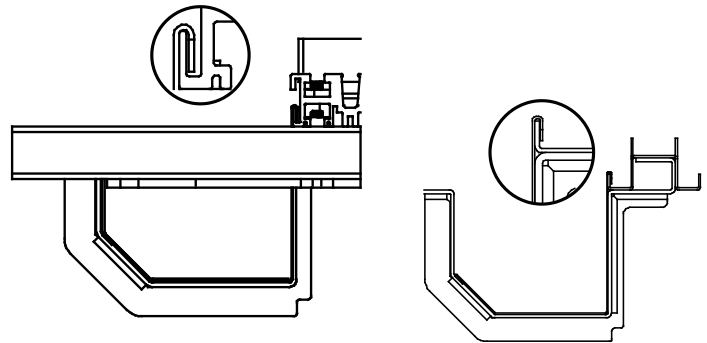


Figure B

