


Assembly Instructions ■

Aristotle™ Casegoods
Suspended D-Top with Modesty Panel

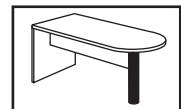

February 2008



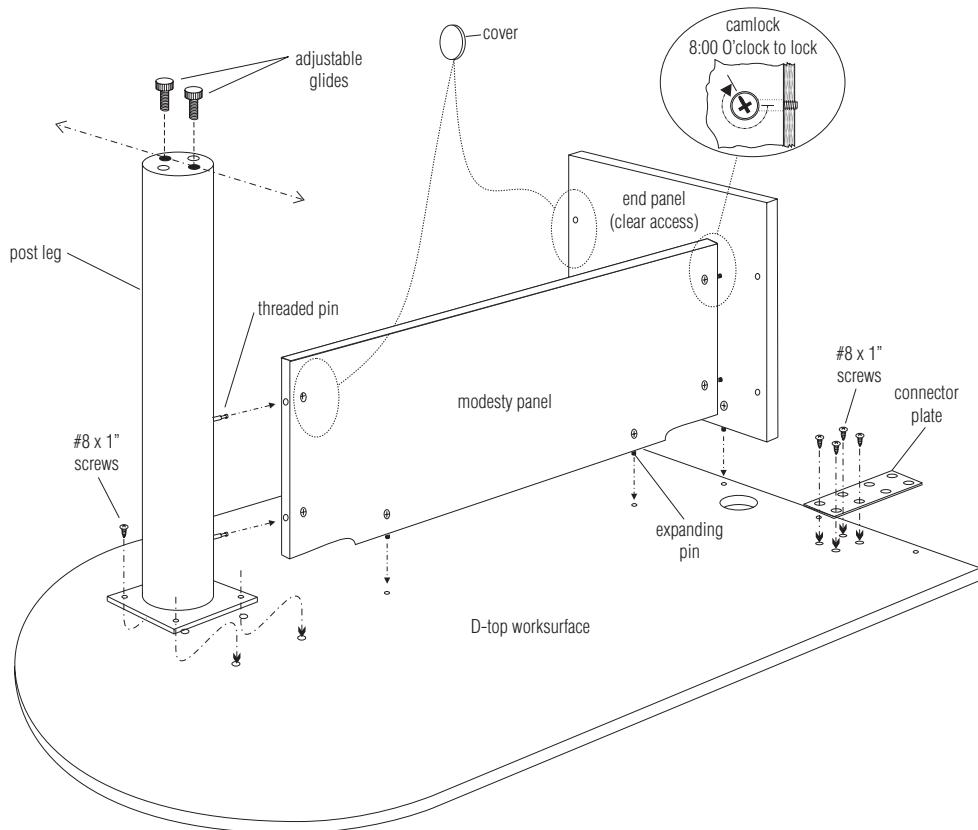


Figure 1

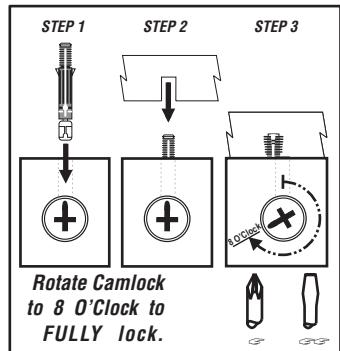

Detail A

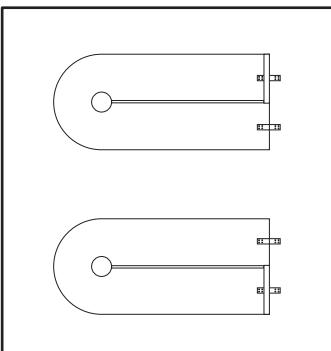

Detail B

7HP9 - Hardware Pack		
	Cover	10
	Camlock (extra)	1
	Expanding Pin	9
	Threaded Pin	2

Post Leg - Hardware Pack		
	#8 x 1" Screws	4
	Adjustable Glide	2
	6" Diameter Post Leg	1

7HP2 - Hardware Pack		
	#8 x 1" Screws	16
	Connector Plate	2

CAUTION
Assemble units as described herein only. To do otherwise may result in instability. All screws, nuts and bolts must be tightened securely and must be checked periodically after assembly. Failure to assemble properly, or to secure parts may result in assembly failure and injury.

1. Carefully unpack all parts and place worksurface face down on a soft protective surface. Identify parts below from the "Hardware Pack" diagrams, Figure 1 & Detail A.
2. Screw threaded pins into post leg (Figure 1). **Do not secure to modesty panel or worksurface at this time.**
3. Press expanding pins into modesty panel and end panel at camlock locations as illustrated (Figure 1 & Detail A, step 1).
4. Mate end panel to modesty panel at expanding pin locations (camlocks in modesty panel should face inward, toward user's position). Follow steps 2 & 3 of Detail A to twist camlocks and secure end panels together (Figure 1 & Detail A).
5. Carefully set modesty panel/end panel assembly onto underside of worksurface, placing all expanding pins of panels into camlock holes at underside of worksurface. Follow steps 2 & 3 of Detail A to twist camlocks and secure all together (Figure 1 & Detail A).
6. Attach post leg by first mating the threaded pins into camlocks of modesty panel. Follow steps 2 & 3 of Detail A to twist camlocks and secure all together (Figure 1 & Detail A). Align four mounting holes of post leg with pre-drilled holes in the worksurface and secure using four #8 x 1" screws (Figure 1 & Detail B).
7. Twist two adjustable glides into the post leg so they are perpendicular to the modesty panel, as indicated by arrow (Figure 1).
8. Align four mounting holes of connector plates with pre-drilled holes in the worksurface and secure using four #8 x 1" screws (Figure 1 & Detail B).
9. Stick covers over all camlocks and unused expanding pin holes (Figure 1).

