

Assembly Instructions

Aristotle™ Casegoods

Bridge Return

February 2008



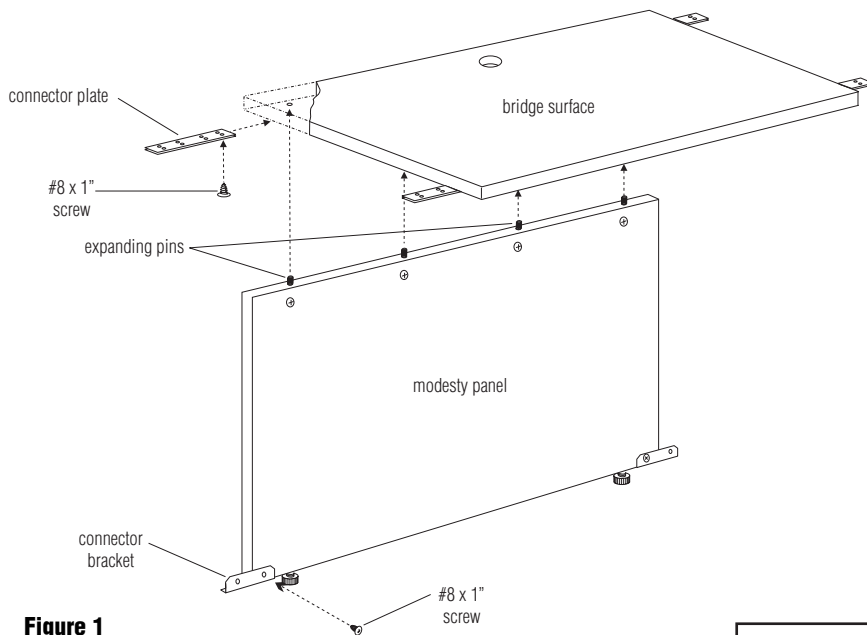


Figure 1

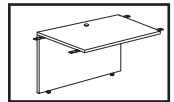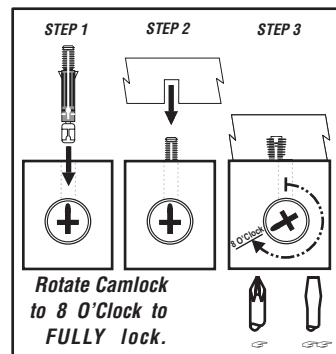

Detail A

7HP6 - Hardware Pack		
	Cover	5
	Camlock (extra)	1
	Expanding Pin	5
	#8 x 1 inch Screws	36
	Connector Bracket	2
	Connector Plate	4


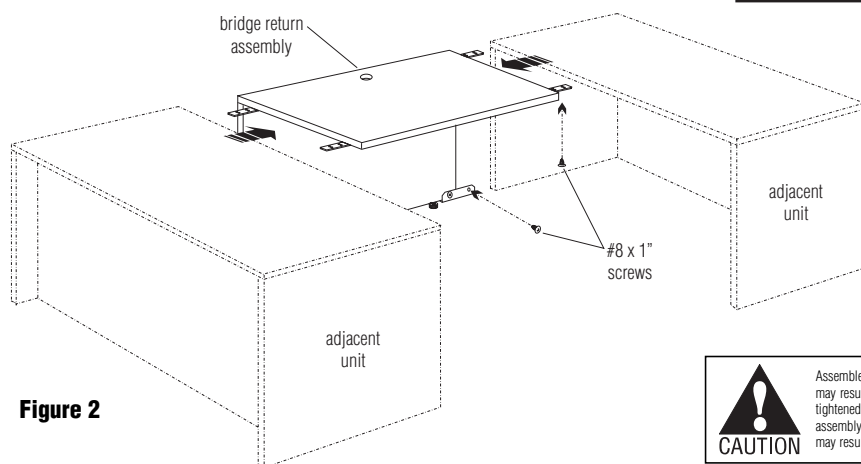


Figure 2



1. Identify parts from the "Hardware Pack" diagram below Figure 1. Press expanding pins into top of modesty panel as illustrated (Figure 1 and Detail A, step 1).
2. Attach the connector plates to the underside of the bridge surface using four #8 x 1" screws (Figure 1).
3. Set bridge surface on to modesty panel, mating expanding pins into holes at underside back of bridge surface. See Detail A, steps 2 & 3 to secure bridge surface to modesty panel (Figure 1 & Detail A).
4. Attach connector brackets to both sides of modesty panel using #8 x 1" screws (Figure 1).
5. Using #8 x 1" screws attach assembled bridge return to adjacent units at connector plates and connector brackets (Figure 2).

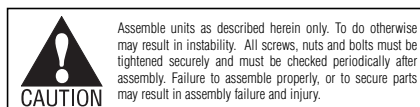