



If you have a problem, question, or request, call your local dealer, or Steelcase Line 1 at **888.STEELCASE** (888.783.3522) for immediate action by people who want to help you. (Outside the U.S.A., Canada, Mexico, Puerto Rico, and the U.S. Virgin Islands, call: 1.616.247.2500) Or visit our website www.steelcase.com

Si vous avez un problème, question, ou la demande, appellent votre revendeur local, ou Ligne 1 de Steelcase à **888.STEELCASE** (888,783,3522) pour l'action immédiate par les personnes qui veulent vous aider. (en dehors des Etats-Unis, Canada, Le Mexique, Porto Rico, et Les ÉTATS-UNIS. Les Îles Vierges, appel: 1,616,247,2500) Ou visiter notre website www.steelcase.com




Si usted tiene un problema, pregunta, o la petición, llama a su distribuidor local, o Línea 1 de Steelcase en **888.STEELCASE** (888,783,3522) para la acción inmediata por la gente que desea ayudarlo. (fuera de los E.E.U.U., Canadá, Méjico, Puerto Rico, y Los E.E.U.U.. Islas de la Virgen, llamada: 1,616,247,2500) O visite nuestro website www.steelcase.com

©1998 Steelcase Inc.
Rapids Grand, MI 49501
U.S.A.
Les ETATS-UNIS.
Los E.E.U.U.

Printed in U.S.A.
Imprimé aux Etats-Unis.
Impreso en los E.E.U.U.

Avenir®

PAB-8-Attaching Old And New Style Panels Of The Same Height In-Line And At Angles, For Power Panel Only

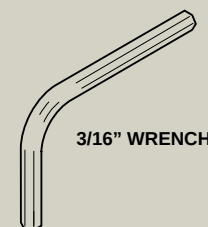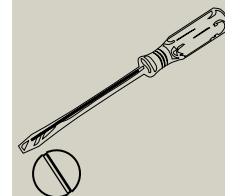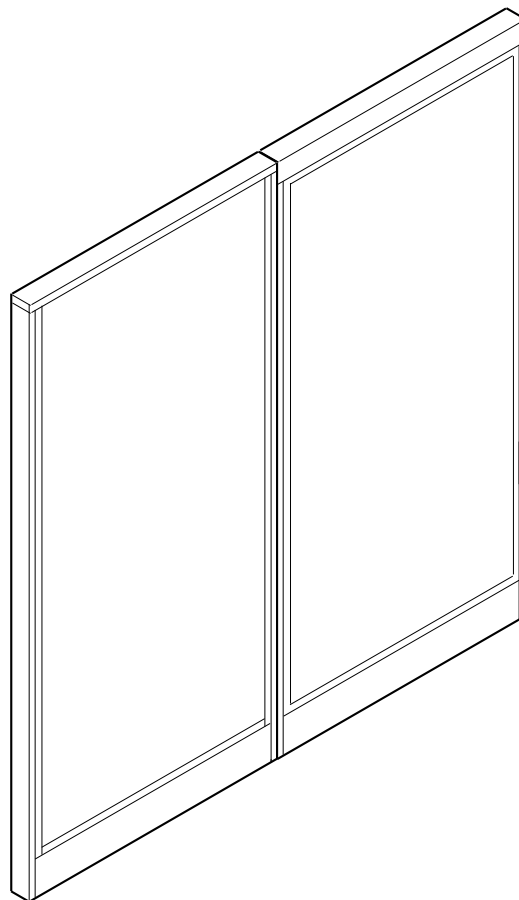

3/16" WRENCH

1
of
2

NOTE: For the basic assembly of your panels, refer to Steelcase Installation Direction #93-9500720-P.

939500725 Rev A



Lateral File Attachment

1. Remove base cover (power panel only) with label attached by pulling outward at the extreme ends. Remove tape leaving end caps up. Place panel to file and adjust glides to make sure the panel top is level with the top of file. After height is correct, remove top cap by pulling straight up.

2. Assemble lower attachment straps to old style panel with (1) bolt each. Make sure offset hole is to the inside edge of straps and secure with (1) bolt each strap.



NOTE: If the new style panel is to be placed at an angle, use the proper strap noted.

3. Align top of panels and secure upper attachment straps with (4) bolts.


NOTE: If the new panel is to be placed at an angle, use the proper strap noted.

4. Replace top cap and bottom slide base.

1.

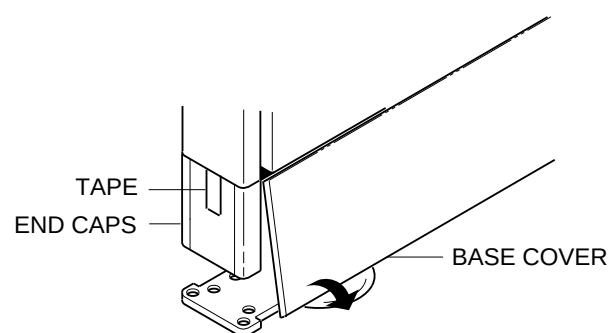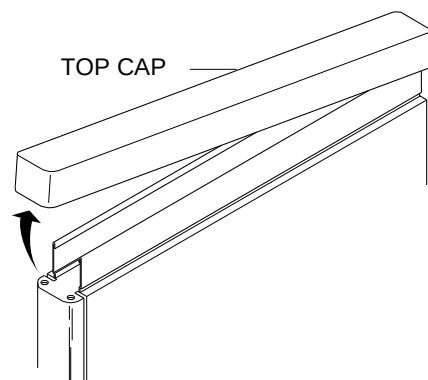

2.

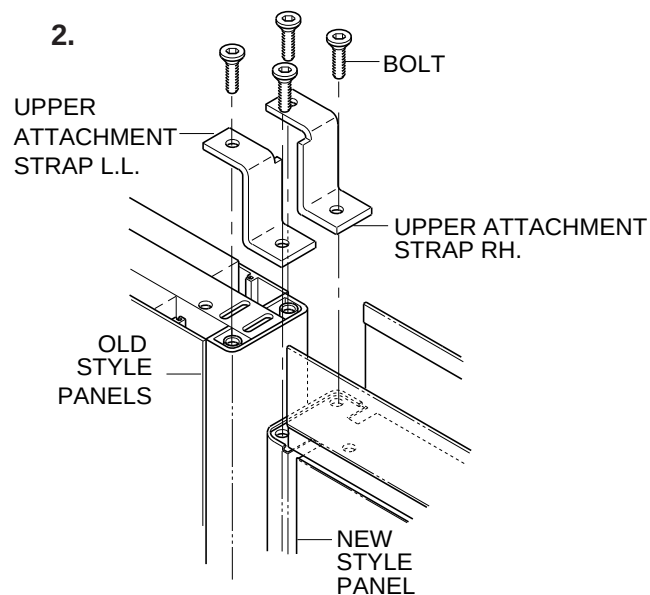

3.

