



- 1** Insert stanchion posts into utility rail.

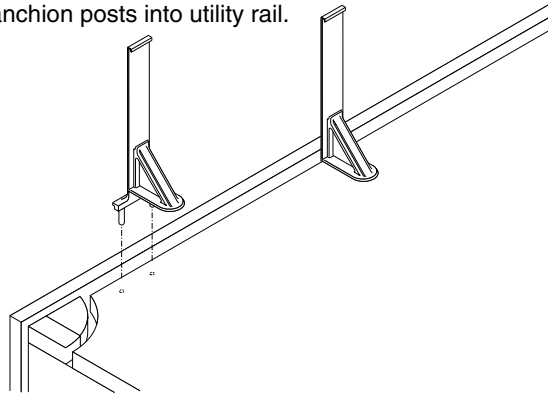

- 2** Attach Slatwall.

**a**  
Slide top portion of Slatwall  
into mounted bracket.

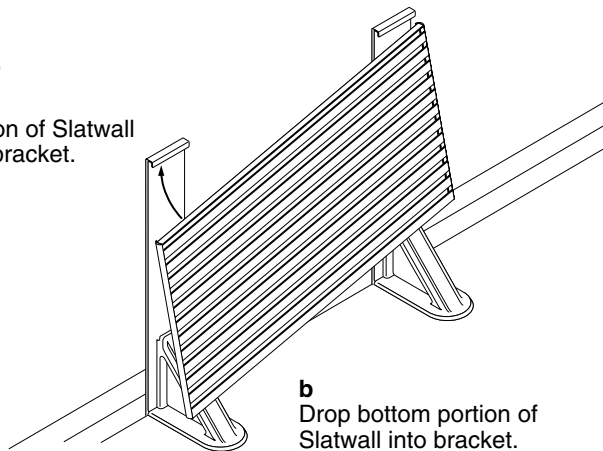

**b**  
Drop bottom portion of  
Slatwall into bracket.

If you have a problem, question, or request, call  
your local dealer, or Steelcase Line 1 at  
**888.STEELCASE** (888.783.3522)  
for immediate action by people who want to help you.


(Outside the U.S.A., Canada, Mexico, Puerto Rico,  
and the U.S. Virgin Islands, call: 1.616.247.2500)

Or visit our website: [www.steelcase.com](http://www.steelcase.com)

© 2015 Steelcase Inc.  
Grand Rapids, MI 49501  
U.S.A.

Printed in U.S.A.

- 3** Note:  
For proper installation,  
Slatwall hooks should  
be upward.

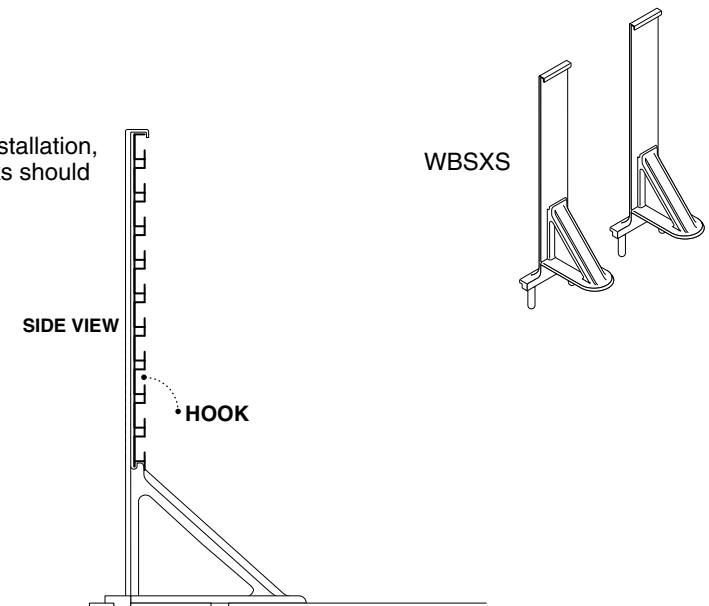

- 4** Insert screws provided into top of each bracket to prevent  
accidental dislodgment.

