

# Senator

## Component Lateral File, Pedestals, and Storage Unit

### Tools Required

- Level
- 3/16" Drill Bit
- Power Screwdriver
- Tape Measure
- #2 Phillips Head Bit

### Package Contents

- 16 #8 x 1 1/2" Panhead Screws

### Installation

1. The component assembly uses a combination of modular storage components and a component top which is ordered separately. (Figure A). Remove shipping screws that secure drawers and discard. Remove drawers from pedestals by untying the anti-tip interlock cord. Review cord attachment before removing drawers as cord must be re-tied.

**Note:** When drawers are re-installed make sure they are returned to the same locations.

2. Place worksurface upside down on a clean, soft surface. Position pedestals upside down on underside of worksurface so they are flush with the back of the top and equal distance from side to side. (Figure B). If a kneespace credenza is being created, hold 1 1/2" from each end of the top.
3. Attach pedestal to underside of worksurface utilizing pre-bored holes of cleats/stretcher rails and provided #8 x 1 1/2" panhead screws (eight screws per pedestal). (Figure B).
4. Carefully turn unit upright. Re-install drawers to original locations and re-tie anti-tip cords. Level unit.

**Caution:** Failure to re-install anti-tip cords could result in units tipping over, resulting in injury. Extra caution should be given to the 4-high lateral unit.

Figure A

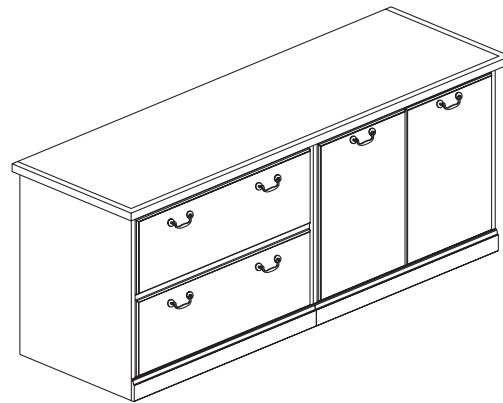


Figure B

