### Casegoods Assembly Instructions

# President/Senator/Innsbruck/Osterley Park

Page 1 of 1

## Highback Organizer

Tools Required

■ Tape Measure

### Package Contents

Double-sided Adhesive Tape (1 roll)

#### Installation

- The highback organizer comes pre-assembled in a carton. It is typically placed on the worksurface of a furniture unit. Place the highback organizer in the desired location. (Figure A).
- 2. The highback is held in position with a double-faced adhesive tape. Keeping the highback in the desired location, carefully tilt the unit back or forward and apply a strip of adhesive tape to the bottom side of each end panel. Remove the peel-coat from the adhesive tape. Return the highback to the upright position and secure into place. (Figure B). *Caution: The tape has a very strong adhesive and bonds instantly to any surface it is applied to.*


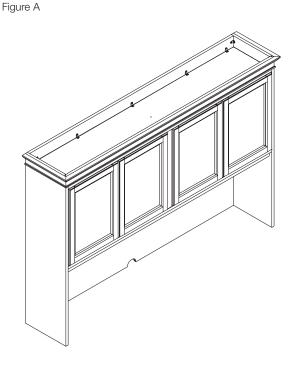


Figure B

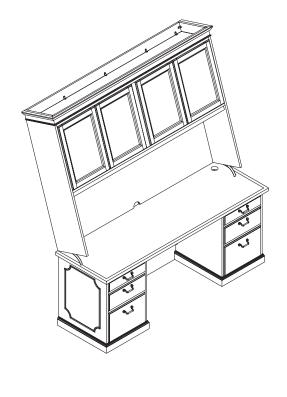

**Kimball**<sup>®</sup>Office

Proper product installation, in accordance with these instructions, is the responsibility of the installing agent. If you have any questions concerning these instructions, please call Kimball Office Customer Service.

#### Part No. 1847191 Revision B-06