

President

Center Drawer

Tools Required

- Phillips Screwdriver
- Tape Measure or Ruler

Package Contents

- Center Drawer Assembly

Installation

1. Attach cam to lock by placing desk in the locked position and sliding the cam over the lock tailpiece. (Figure A).
2. Turn key to unlocked position and secure cam to lock tail piece by installing set screw.

3. Center the drawer (side to side) in kneespace. Locate the drawer (front to back) $\frac{1}{4}$ " from lock mounting rail.

Note: Be sure that the drawer slides are in the fully closed position when locating center drawer.

4. Install (1) #8 x $\frac{5}{8}$ " Phillips flathead screw into each rear mounting pad. (Figure B).
5. Pull center drawer out until fully extended, and install remaining screws into mounting pads.

Figure A

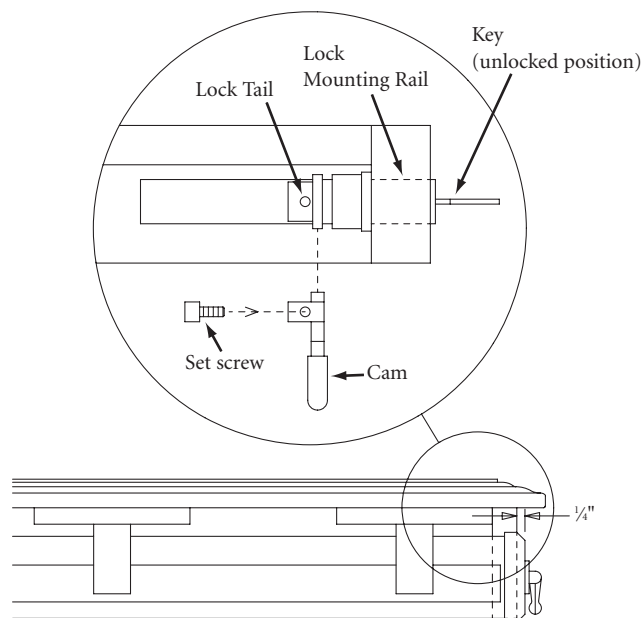


Figure B

