

## Spacer Attachment

### Tools Required

- Cordless Drill
- #2 Phillips head bit

### Hardware Included

- #8 x 2" panhead screws 2 per spacer

### Installation

1. Align spacers on pedestal with pre-drilled holes. (figure A)
2. Place worksurface onto pedestal as not to move spacers fasten pedestal to worksurface with #8 x 2" panhead screws from underside of pedestal. (figure B)

Figure A

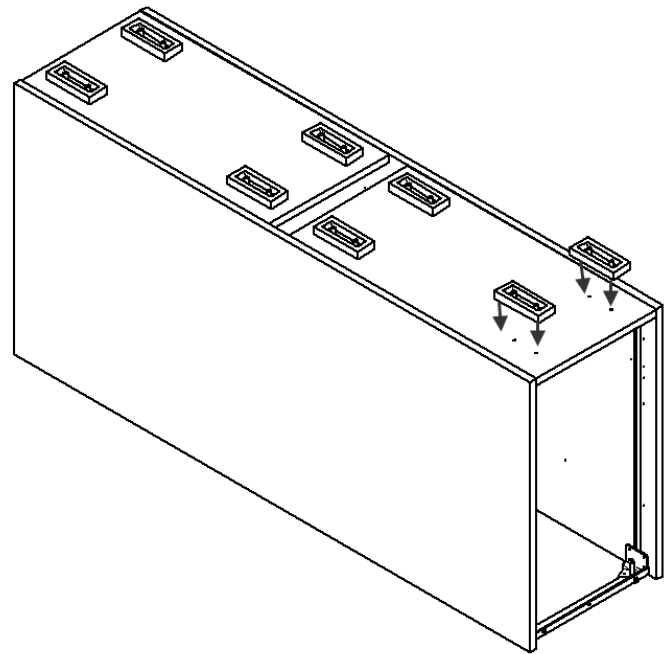


Figure B

