

## Upmount Overhead Connection

### Tools Required

- Screwdriver
- Cordless Drill
- 7/32" drill bit

### Hardware Included

- Connecting Bolts

### Installation

1. Place units on clean soft surface in their aligned and desired position. Adjustable shelf holes have been pre-bored on a 1 1/4" boring pattern into the inside end panel of each cabinet. Using 7/32" drill bit, bore through shelf hole from the storage unit into the adjoining unit. (Figure A)
2. Align connection holes in storage units and attach together using the eight (8) provided connecting bolts, four per side. Insert half connector bolt into one hole, and the threaded bolt into the opposite hole. Tighten all bolts securely, making sure units are flush against each other with no gaps. (figure B)
3. Can mount with cabinets facing the same direction or opposite direction.

Figure A

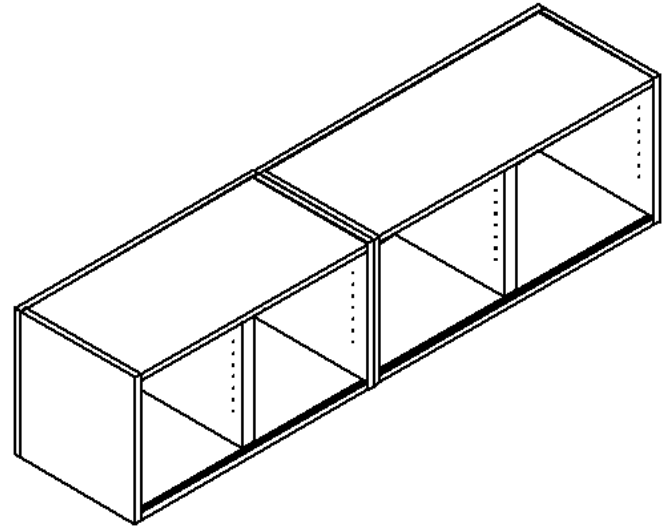


Figure B

