

Resin Privacy Screen

Tools Required

- Cordless Drill
- #2 Philips Head Bit
- Tape Measure
- 3/32" Allen Wrench/Driver
- 1/8" Drill Bit

Hardware Required

- #8 x 3/4" Phillips Flathead Screw
- Set Screw

Installation

Important:

- Resin Privacy Screens 72" or longer are to be handled with 2 people.
- Fastening Freestanding Screen Bracket Worksurface is optional.
- Surface-Mount Screen Bracket can be installed above or below Worksurface, and can be inset from edge of Worksurface as desired, with the exception of Worksurfaces with a Knife Edge, which should be inset a minimum of 1/2" from edge of Worksurface when used on top of Worksurface.

- The number of Screen Brackets per Resin Privacy Screens is as follows:

- 22" - 54"W Resin Privacy Screens require 2 Screen Brackets.
- 60" - 78"W Resin Privacy Screens require 3 Screen Brackets.
- 84" - 90"W Resin Privacy Screens require 4 Screen Brackets.

1. Remove protective film from both sides of Resin Privacy Screen.
2. Place Resin Privacy Screen in approximate location on worksurface as desired, then lay flat on Worksurface.
3. Locate Screen Brackets approximately 6" in from each end of Resin Privacy Screen, and any remaining Screen Brackets centered. Fasten Screen Brackets to Worksurface with #8 x 3/4" Phillips Flathead Screw (1 - 2 per Screen Bracket). (Figures A, B, C and D)
4. Place Resin Privacy Screen into Screen Brackets. Center Resin Privacy Screen in Screen Brackets and tighten Set Screws. (Figures A, B, C and D)

Tips

1. Surface-Mount Screen Brackets can also be installed on Top Caps. 1/8" pre-drilled holes required.

Important figures shown on next page.

Figure A

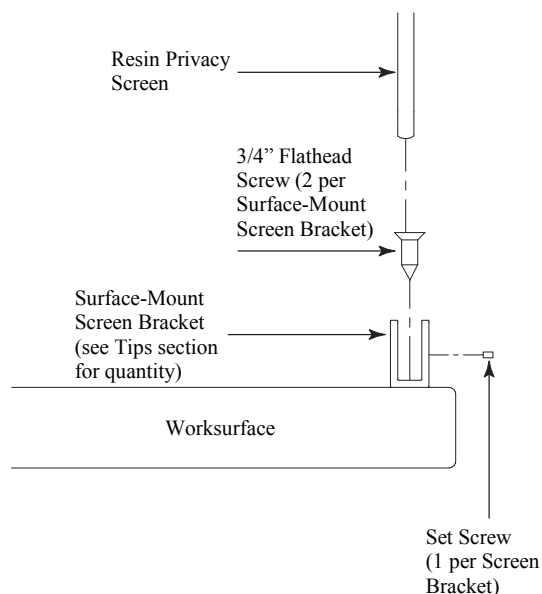


Figure B

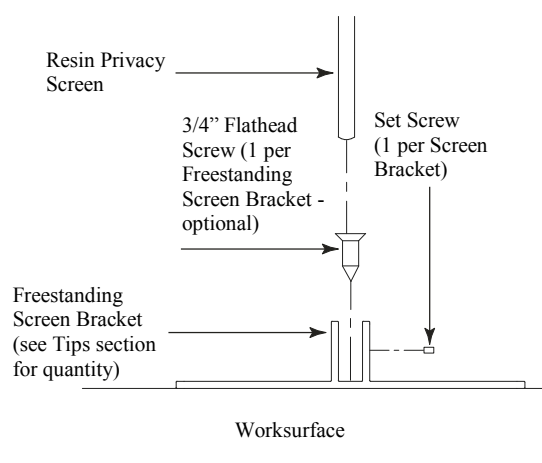


Figure C

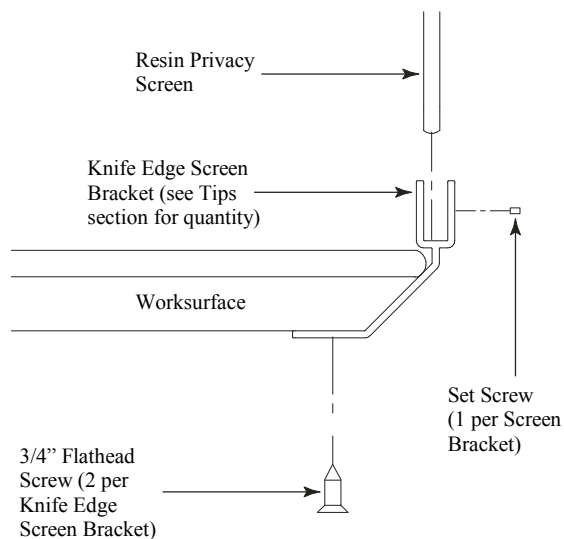


Figure D

