

Benching Component/ Cushion Top Attachment

Tools Required

- Cordless Drill
- #2 Phillips head bit

Hardware Included

- #8 x 5/8" panhead screws
- L brackets

Installation

1. Position pedestal upside-down on underside of worksurface or cushion. The pedestal should be positioned so the sides are 5/64" from edge of worksurface or cushion and 5/64" from the back edge, (figure A)
2. Attach L brackets to worksurface or cushion and end panels using #8 screws provided. (figure B)

Figure A

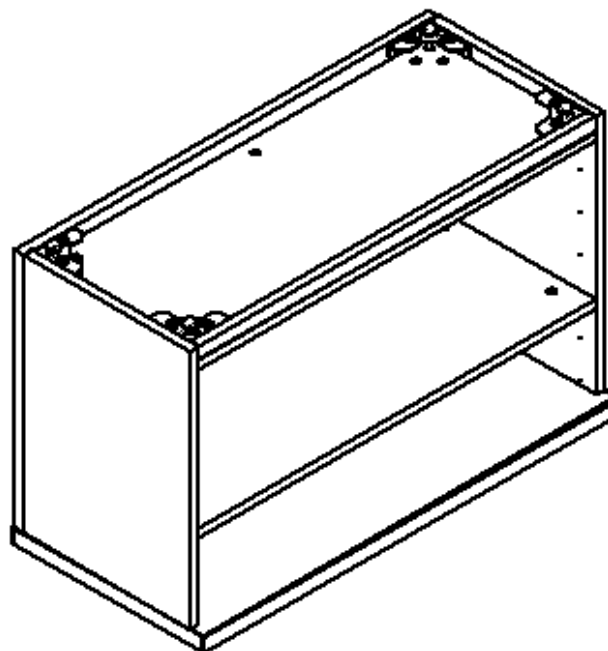


Figure B

