

Back panel Attachment

Tools Required

- Cordless Drill
- #2 Phillips head bit

Hardware Included

- #8 x 5/8" panhead screws
- L brackets

Installation

1. Position back panel in opening, hold back panel flush with outside edge of end panels.
2. Attach L brackets inside surface of end panels and inside surface of back panel using #8 x 5/8" panhead screw.

Figure A

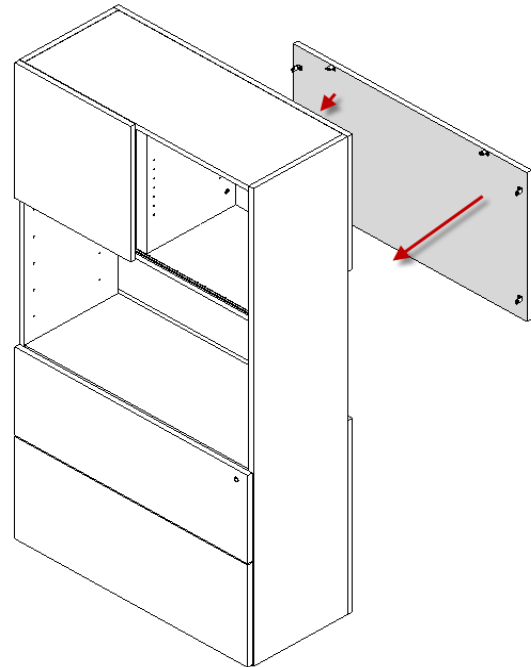


Figure B

