

Stanchion to Pedestal and End Panel

Tools Required

- Cordless Drill
- #2 Philips Head Bit
- Tape Measure

Hardware Required

- #8 x 5/8" Phillips Panhead Screw

Installation

Stanchion to Pedestal:

1. Remove drawers and lay Pedestal onto side on clean flat surface.
2. Position Stanchion onto Pedestal as shown in Figure A. Stanchion is to be centered in open area at top of Pedestal, and widest portion of Stanchion should rest on edge of Pedestal, both as shown in Figure B. Gap between Stanchion and Pedestal is 3/4" on each side.
3. Fasten Stanchion to Pedestal using #8 x 5/8" Phillips Pan-head Screws (14 per Stanchion).

Stanchion to End Panel:

1. Position Stanchion onto End Panel as shown in Figure C. Top 4 holes are pre-drilled and should be used for proper location.
2. Fasten Stanchion to End Panel using #8 x 5/8" Phillips Panhead Screws (14 per Stanchion).

Tips

1. Pedestal Spacer is 3/4" thick, and can be used for centering Stanchion to Pedestal.

Figure A

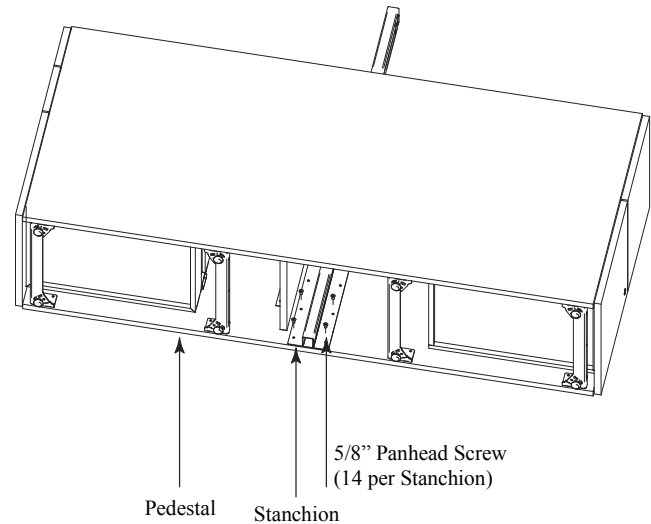


Figure B

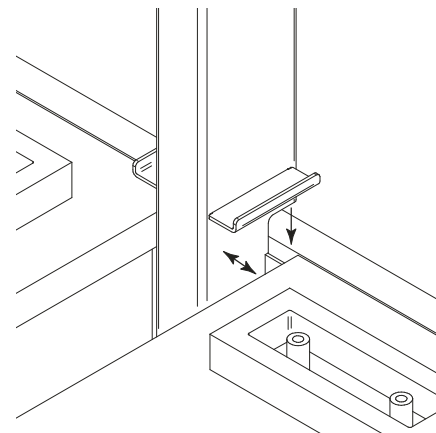


Figure C

