

Desk Surround for use with Height Adjustable Table

Tools Required

- Cordless Drill
- #2 Phillips head bit
- Level

Hardware Included

- #8 x 5/8" panhead screws
- L brackets
- #8 x 1" panhead screws

Installation

1. Place 2 desk surround end supports in desired location. (Figure A)
2. Attach modesty panel to the desk surround end supports with L-brackets using #8x 5/8 panhead screws. Modesty position is flush on with top of pedestal and inset from approach side 5 9/16". (Figure B)
3. Remove leg leveler from adjustable height base, insert flat bracket into leg leveler, screw leveler back into base. (Figure C)
4. Place height adjustable base centered in opening. (Figure D)
5. Place the worksurface on the height adjustable base. Worksurface should overhang end supports 1/16" on sides and front edge and attach to adjustable base with #8 x 1" panhead screws. (Figure E)
6. When installation is complete worksurface will float above the end supports 1 3/16" when height adjustable base is in it's lowest position.
7. Worksurface and height adjustable table sold separate.
8. Place end panel in correct location flush with side of worksurface. Tilt end panel and adjustable height base back so you can screw the flat bracket to bottom of end panel with #8 x 3/4" pan head screw. (Figure F)

Figure A

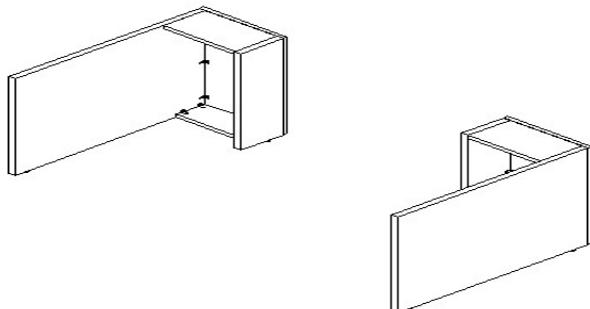


Figure B

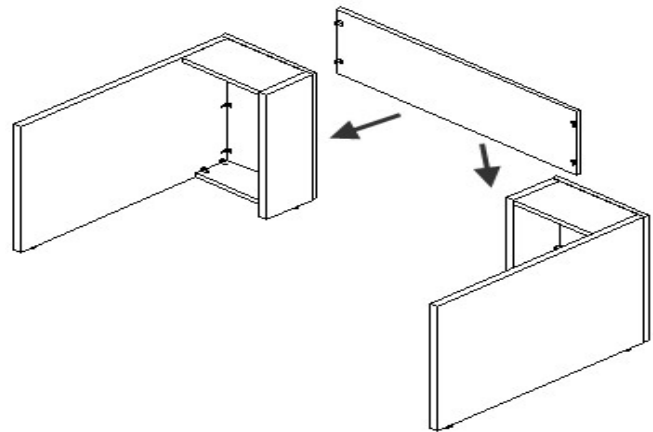


Figure C

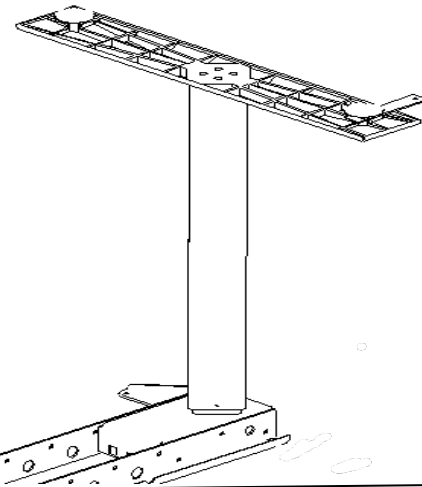


Figure D

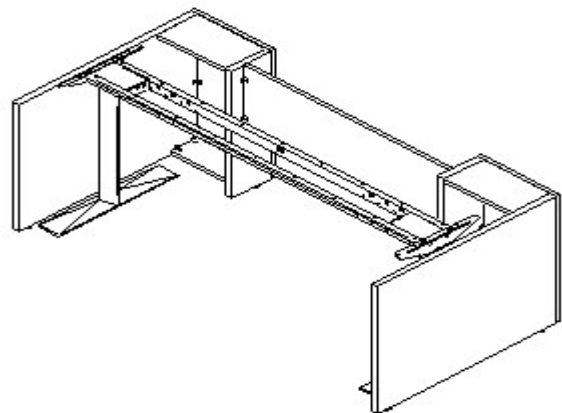


Figure E

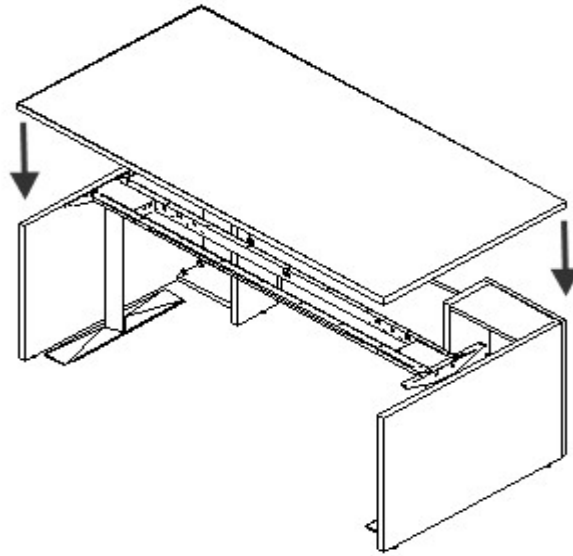


Figure F

