

Tiles

Tools Required

- Cordless Drill
- #2 Phillips Head Bit

Hardware Required

- #6 x 3/8" Phillips Panhead Sheetmetal Screw
- 10-24 x 1/4" Phillips Flathead Screw
- L Bracket
- Foam Tape

Installation

Important:

- All fasteners using tapped holes should be started by hand to prevent cross-threading.
- When installing Upmount Shelves or Cabinets, Overhead Stanchion Bracket must be installed **prior** to installing Tiles.
- Tiles are to be installed by 2 people.

1. After ensuring U-Leg Frame is completely assembled and secure, insert Overhead Stanchion Bracket into Stanchion (Figure A), then fasten with 10-24 x 1/4" Phillips Flathead Screw (4 per Overhead Stanchion Bracket) as shown in Figure A. Also see Figure E for each possible orientation.
2. Prior to assembling Tile to U-Leg Frame, lay each Tile face down on clean flat surface and attach all provided L Brackets to Tile Pan using #6 x 3/8" Phillips Panhead Sheetmetal Screws (2 per L Bracket), paying careful attention to orientation of L Brackets shown in Figure B.
3. If assembly is to be used with Shelf or Overhead, align and apply Foam Tape to top of each Tile, avoiding any overhang of tape off of edges.

Important: Provided Foam Tape is **not** used with Top Cap, which comes with separate adhesive fastener.

4. Using 1 person at each end of Tile, lift Tile into place by resting on Mounting Tabs and bring flush to Stanchion, paying careful attention that scribed arrow is facing up. (Figures A, B and D)
5. After ensuring first Tile is secured, repeat step 4 on other side of Stanchion with mating Tile.
6. Align remaining holes on each L Bracket pair and complete assembly using #6 x 3/8" Phillips Panhead Sheetmetal Screws (1 per L Bracket pair). (Figure C)

Important: All L Brackets must be fastened together as described in step #6 on both top and **bottom** of Tile for proper assembly.

Important tips and figures shown on next page.

Figure A


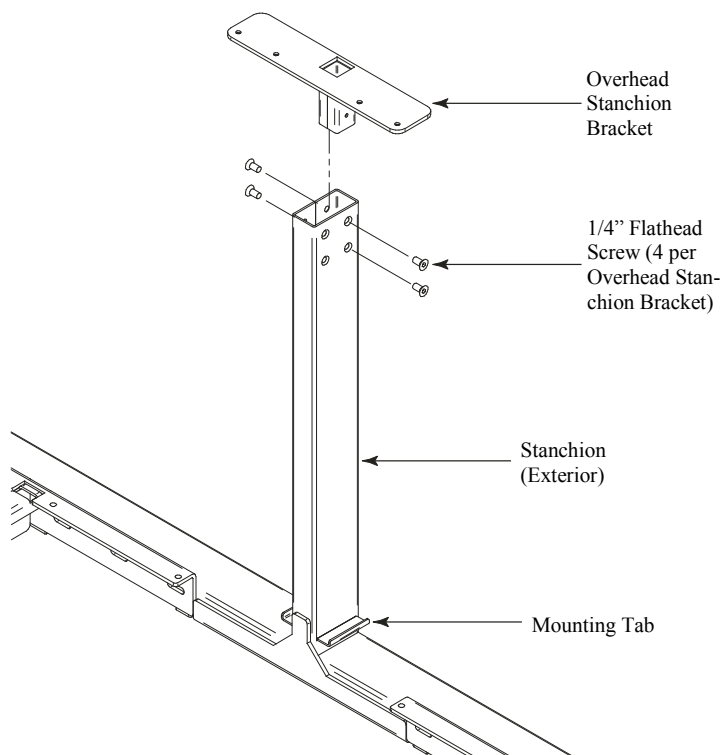


Figure B

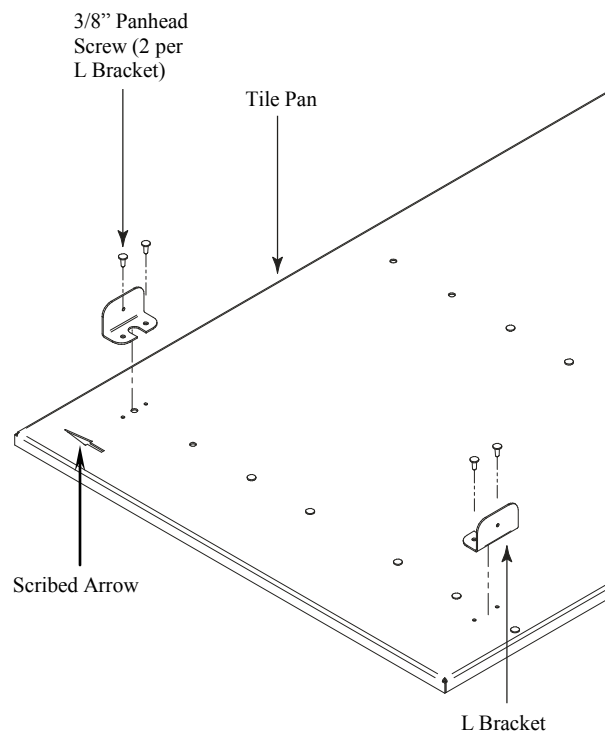

Tips

1. When Overhead Stanchion Brackets are installed with U-Leg Frames that contain a Mid or Shared U-Leg Frame, 2 Overhead Stanchion Brackets will share same Stanchion, and should face outward from one another when installed. (Figure E)
2. Tiles have small amount of adjustment in lengthwise direction after being fully assembled to U-Leg Frame. After completion of assembly, ends of Tiles should be brought flush with edge of Stanchion by hand adjustment. Tiles on Mid U Leg Frames share common Mounting Tab. Seam between Tiles should be centered on shared Mounting Tab and align with seam between Overhead Stanchion Brackets.

Figure C

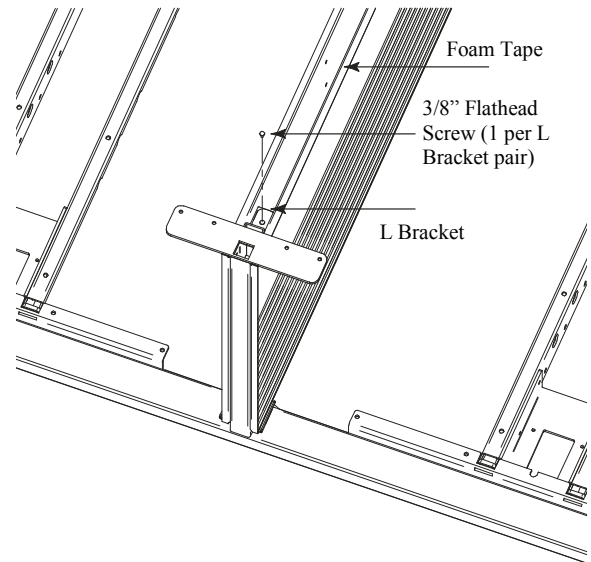


Figure D


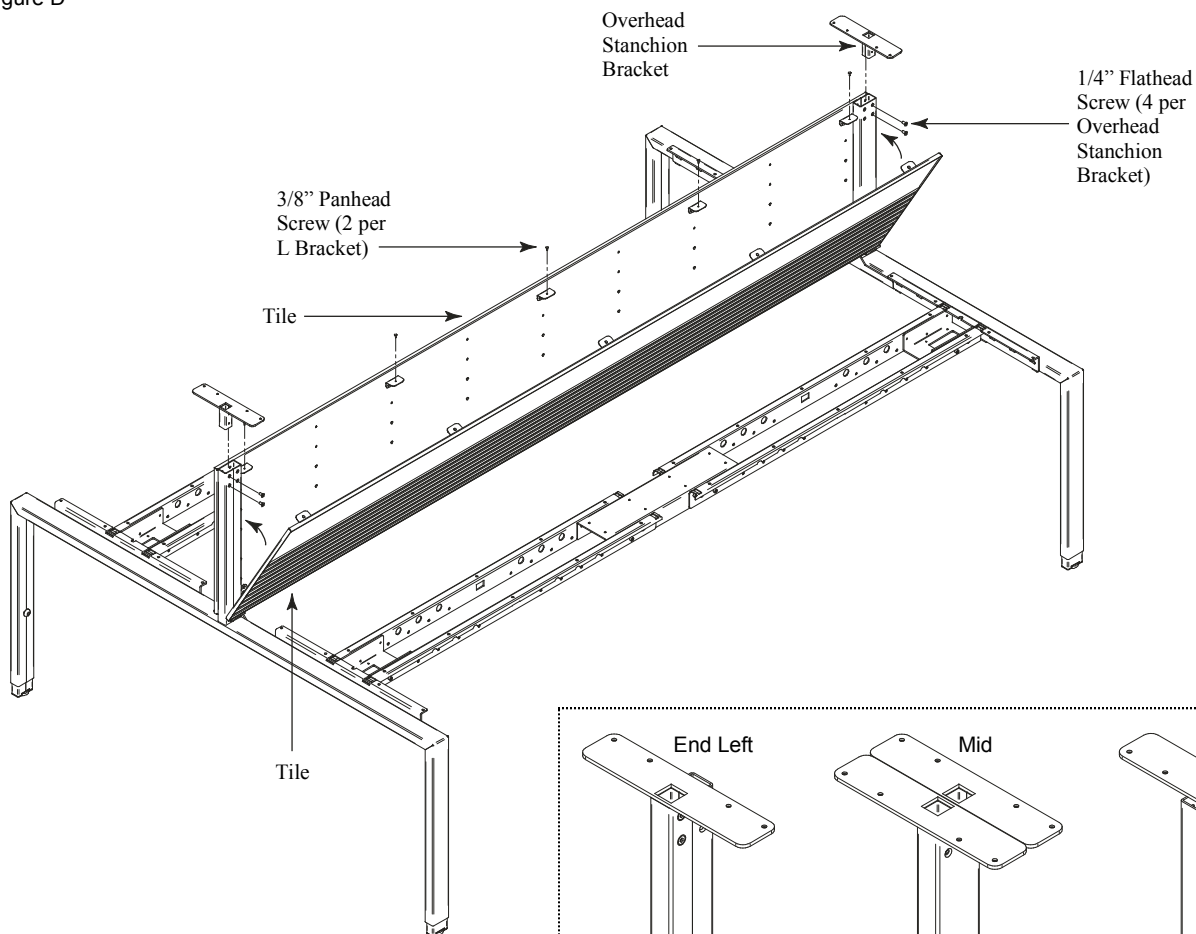


Figure E

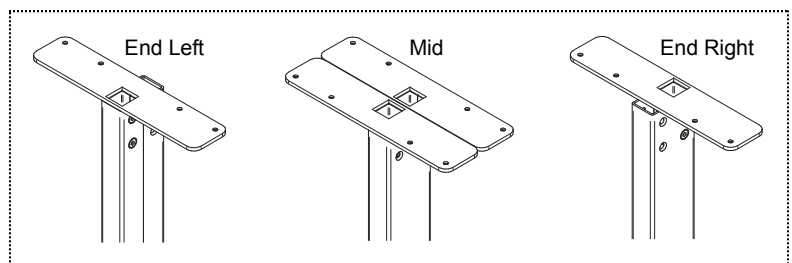

Proper product installation, in accordance with these instructions, is the responsibility of the installing agent. If you have any questions concerning these instructions, please call Kimball Office Customer Care.

Kimball®Office