

Worksurfaces to U-Leg, Open-Frame Leg, T-Leg Bases, Post-Leg Bases or Storage

Tools Required

- Cordless Drill
- #2 Phillips Head Bit
- Tape Measure

Hardware Required

- #8 x 1" Phillips Panhead Screw

Installation

Important:

- Worksurfaces should always be installed with a minimum of 2 people.
- Worksurfaces assembled to Frames or Bases 36" or less in depth can be installed face-down on clean flat surface if preferred. Otherwise, Worksurfaces assembled to Frames or Bases larger than 36" in depth must be assembled right-side-up.

1. Properly align Worksurface to Frame or Base as shown in Figures A and B for T-Leg Bases, or Figures C, D and E for U-Leg or Open-Frame Leg Bases. Then fasten with #8 x 1" Phillips Panhead Screws, ensuring all available holes have been used. (review all applicable Figures)
2. When Worksurfaces are used as a Return, Extension or Bridge, install Flat Brackets (**ordered separately**) according to Priority Desk, Bridge and Credenza Assembly Instructions 2008510 for each adjoined surface.

2. (continued) All Worksurfaces are to be fully positioned prior to beginning assembly to Frame or Base.
Important: When installing Worksurfaces, Extensions or Bridges, installation of Worksurfaces is **not** complete without completing step 2, and will not be properly secured until doing so!

Important assembly tips and figures shown on next page.

Figure A - Front View of T-Leg Base

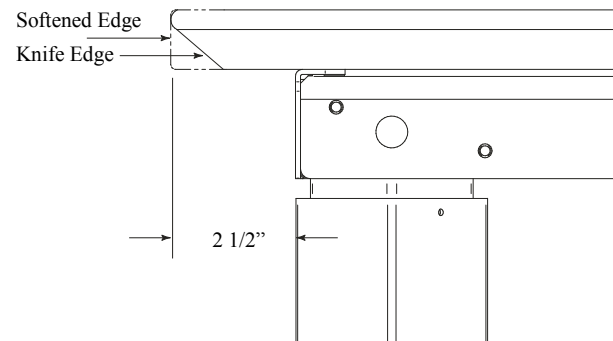


Figure B

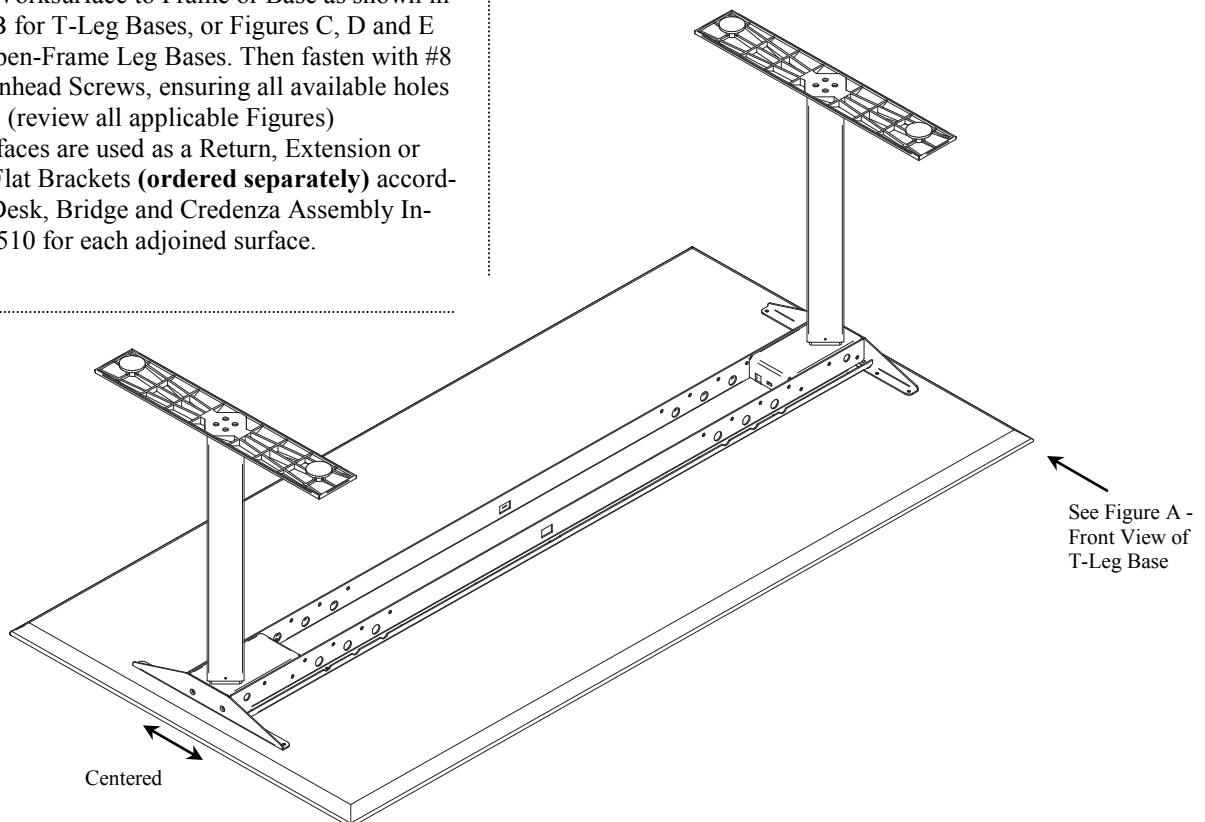


Figure C - Front View of U-Leg and Open-Frame Legs

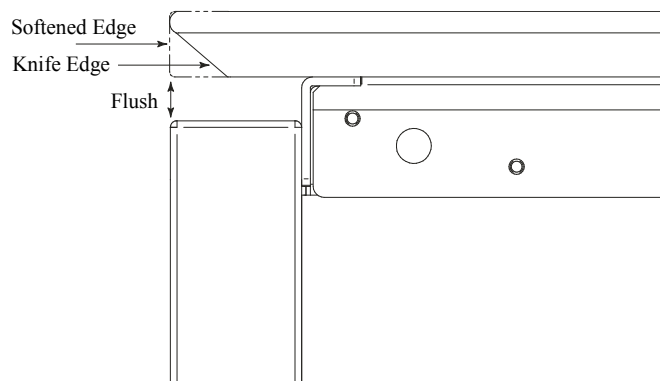


Figure D - End View of U-Leg and Open-Frame Legs

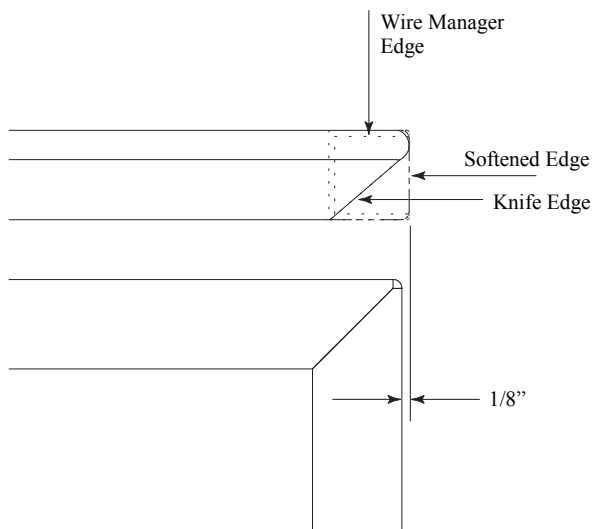


Figure F


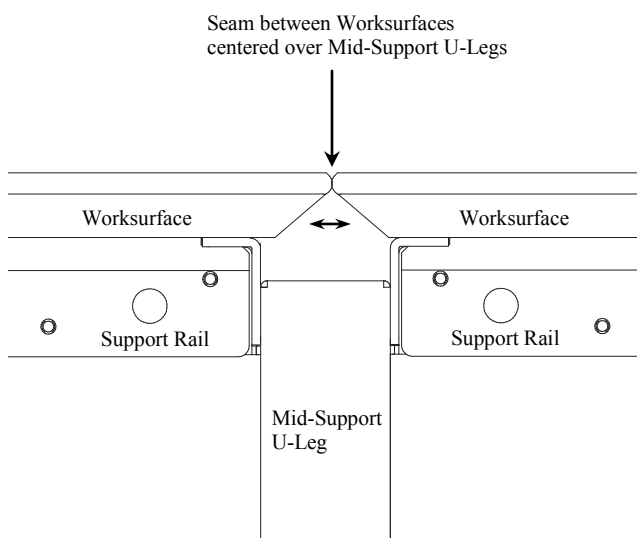


Figure E

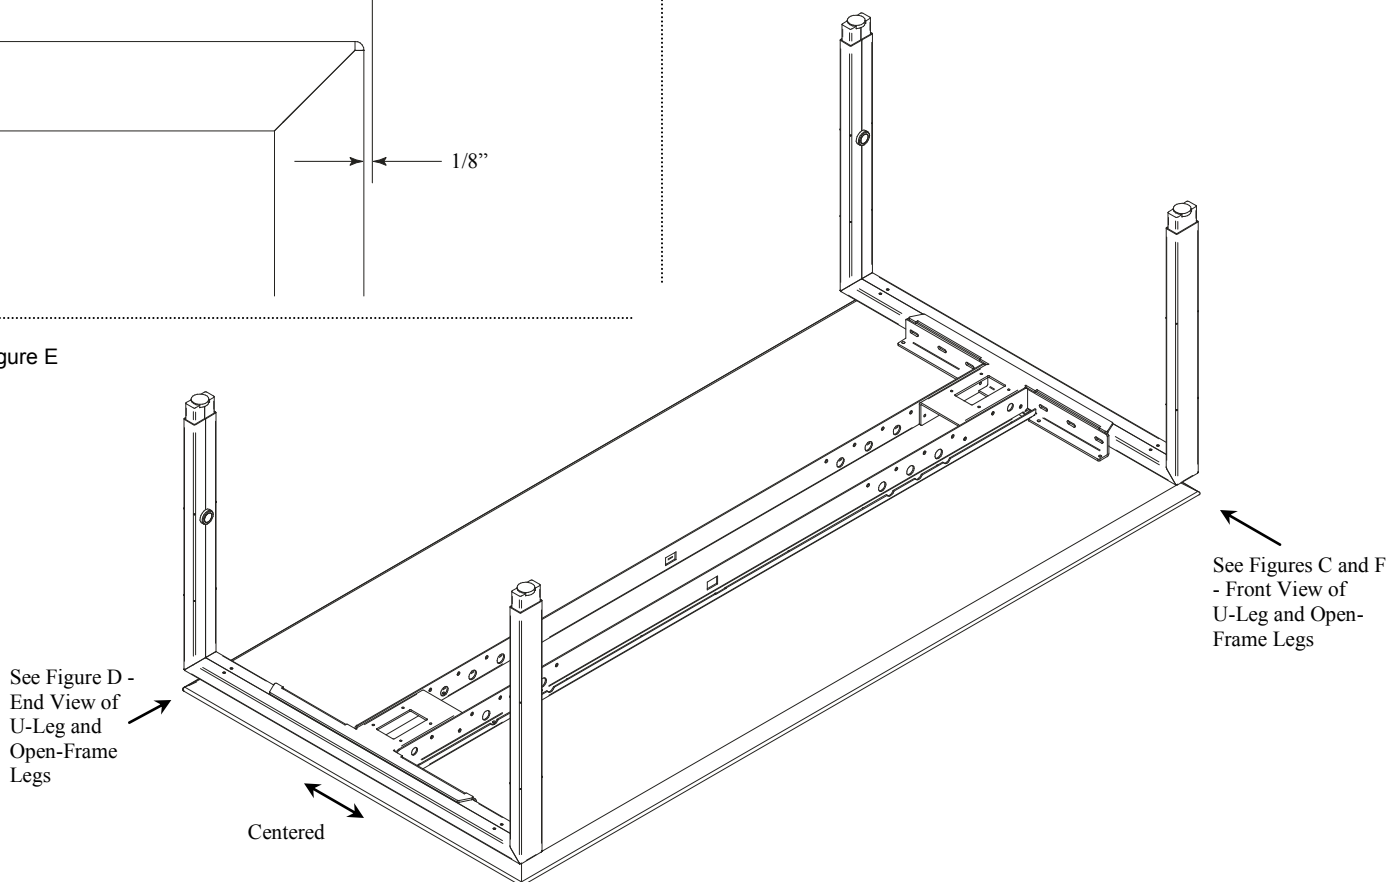

Installation - Storage

Important: Prior to assembling Worksurfaces over Storage, see Priority Starter Bracket for Storage, End Panel and Wall Mount Assembly Instructions 2383877 to ensure proper installation.

1. When assembling Worksurfaces over Storage, properly align Worksurface to Storage as shown in Figures G and H, and fasten with #8 x 1" Phillips Panhead Screws, ensuring all holes have been used.

Important: For Pedestals, separately supplied screws must be used to attach Worksurfaces to Pedestals, which are included with Pedestals.

Tips

1. The edge or extent of any surface is considered the same regardless of edge treatment. (Figures A, C and D)

Important assembly instructions and figures shown on next page.

Figure G

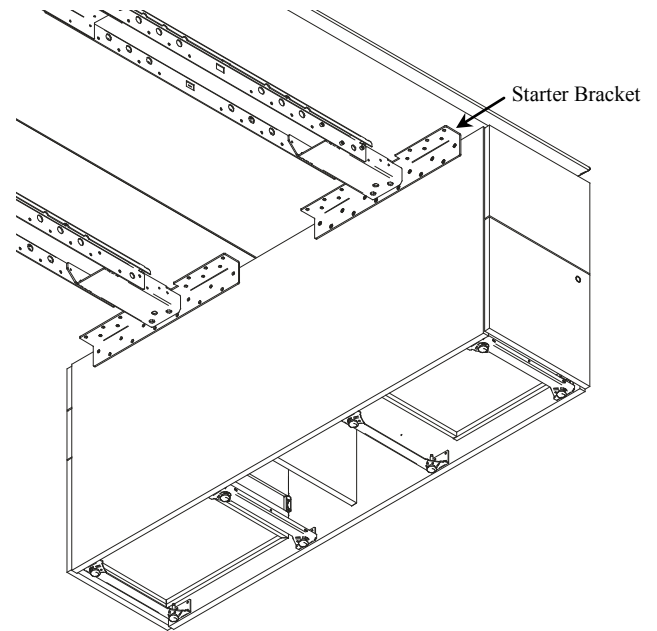


Figure H

