

Facet Table Base

Tools Required

- Allen wrench (included)

Hardware Included

- Set screws
- Double sided adhesive tape

Installation

1. Place ends of frame upside down, insert horizontal tube into end frames. (Figure A)
2. Aline pre-drill holes in end frame and horizontal tube. Fasten together with set screws. (Figure B)
3. Turn base upright. (Figure C)
4. Attach double sided tape to top and bottom sides of 4 spacers. (Figure D)
5. Place worksurface on base and apply direct downward pressure to top of worksurface to adhere to the base.

Note: Double sided adhesive tape not required for glass tops.

Figure A

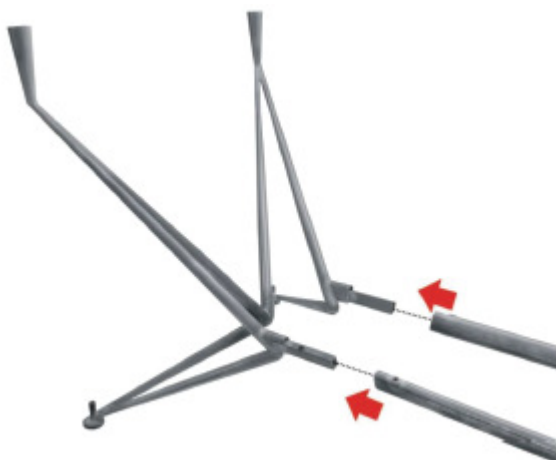


Figure B



Figure C

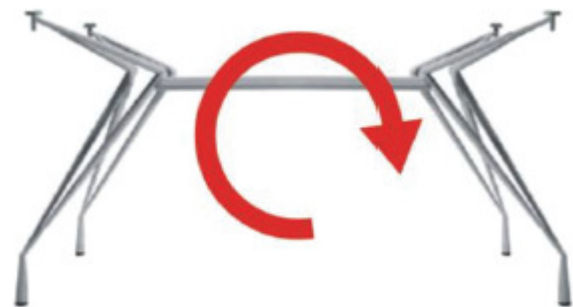


Figure D

