




JumpSeat® Wall Commercial Assembly Instructions

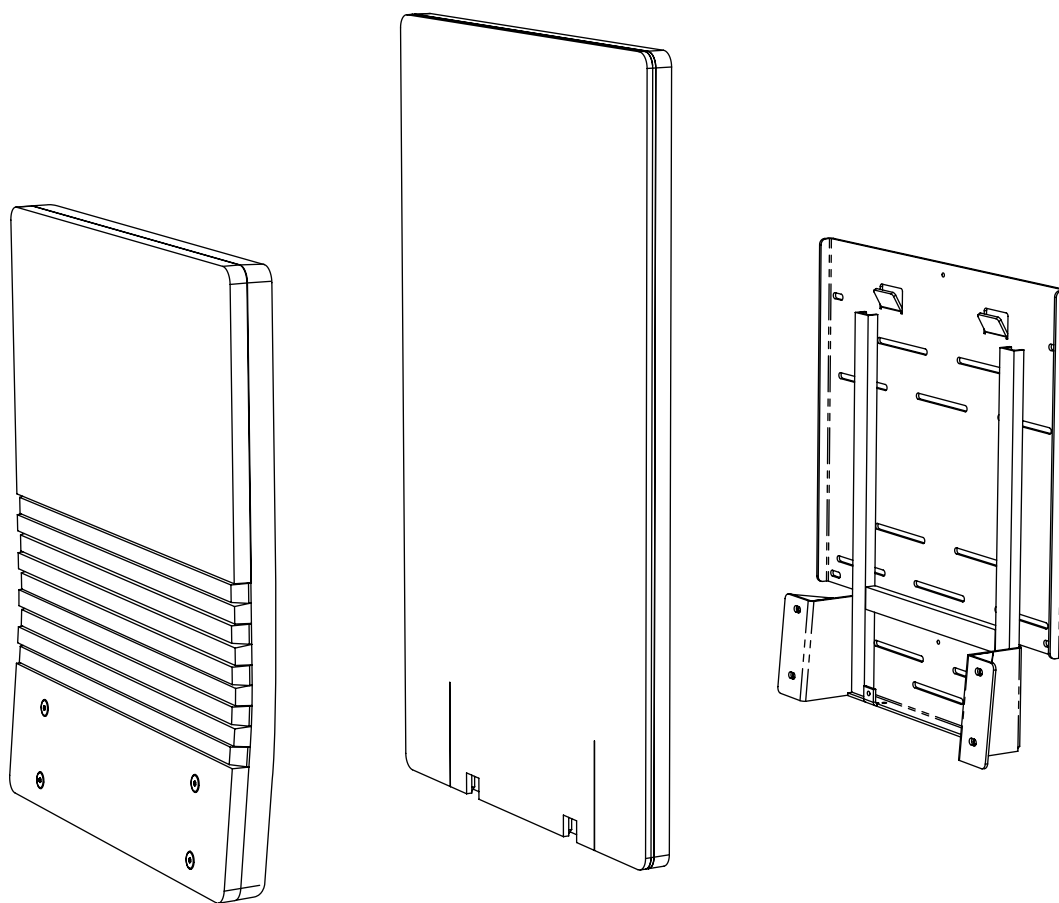

TOOLS REQUIRED

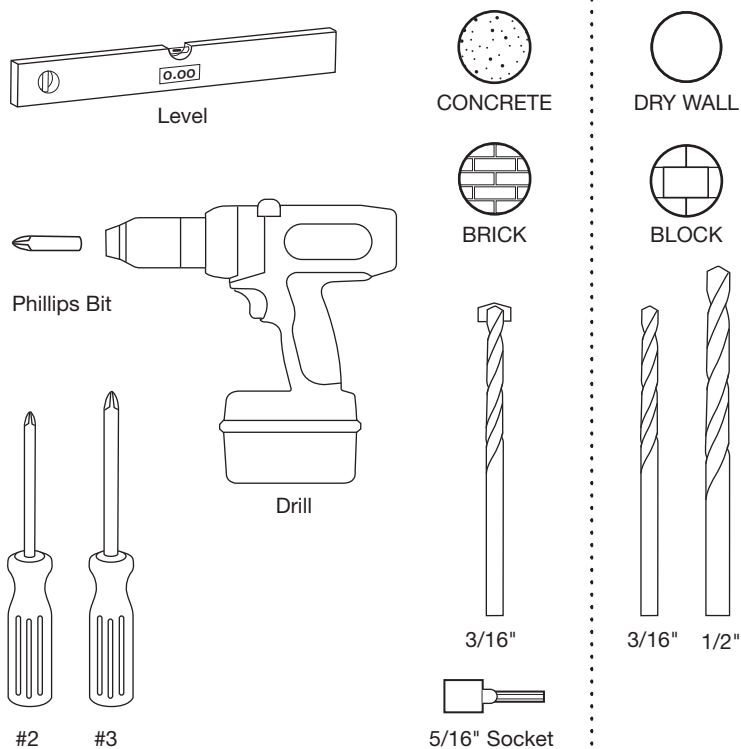

HARDWARE INCLUDED

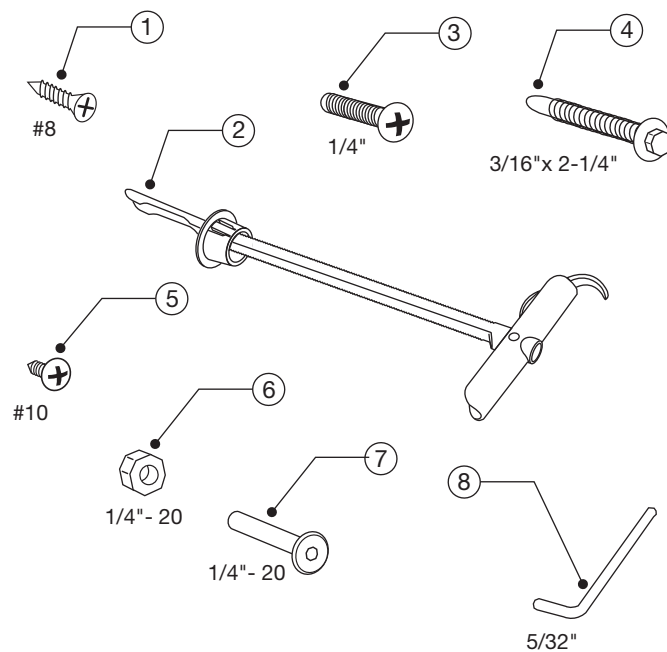


JumpSeat® Wall


Commercial Assembly Instructions




PLYWOOD REINFORCED DRY WALL

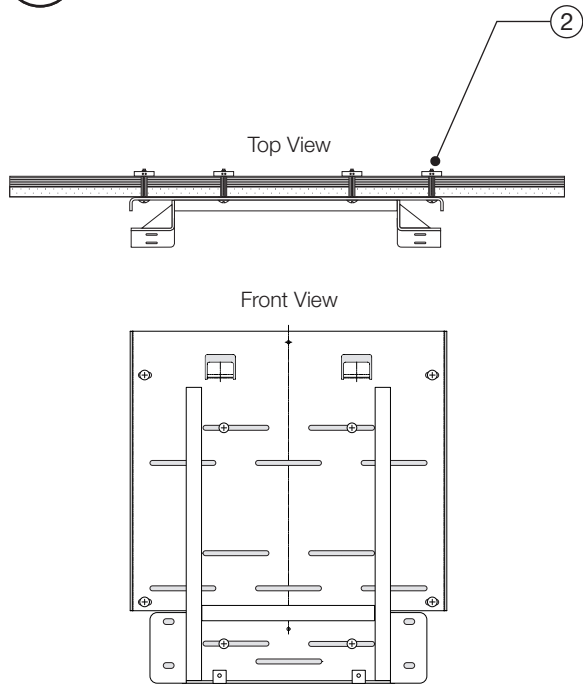


BLOCK WALL

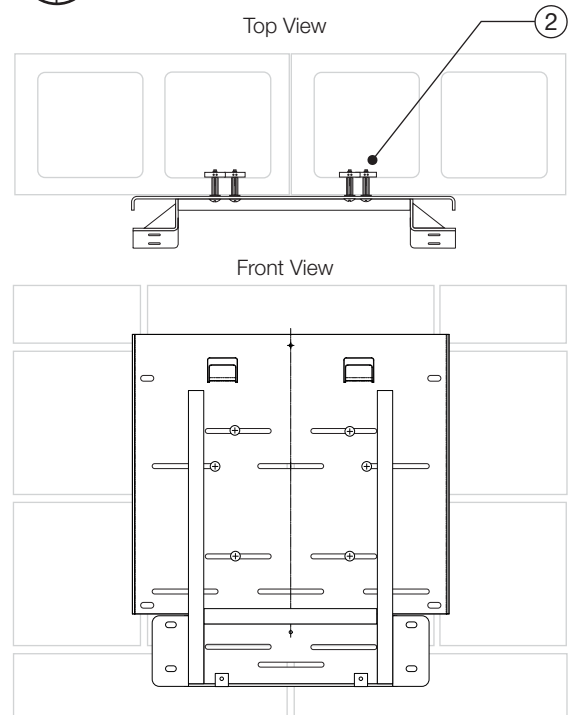






BRICK WALL

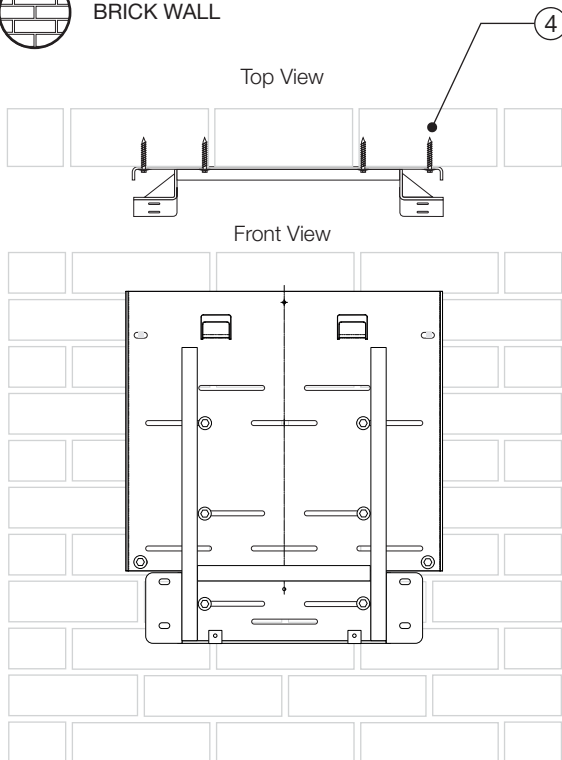





CONCRETE WALL

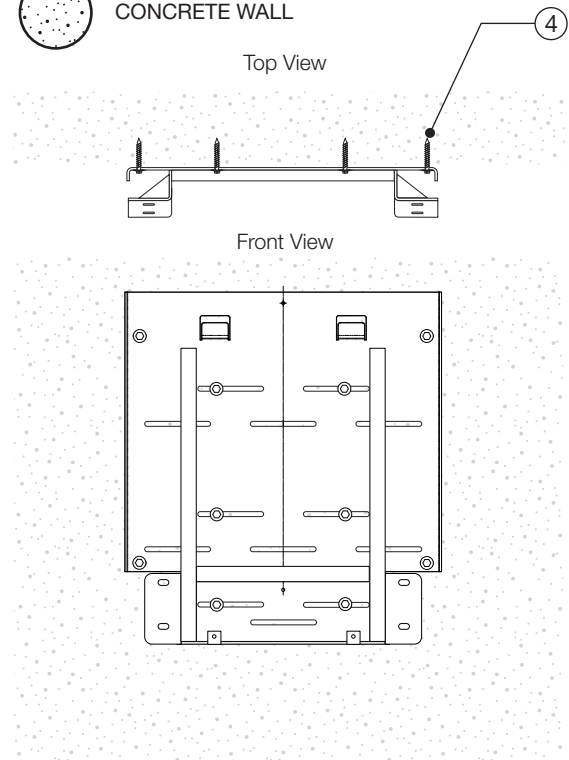


JumpSeat® Wall Commercial Assembly Instructions

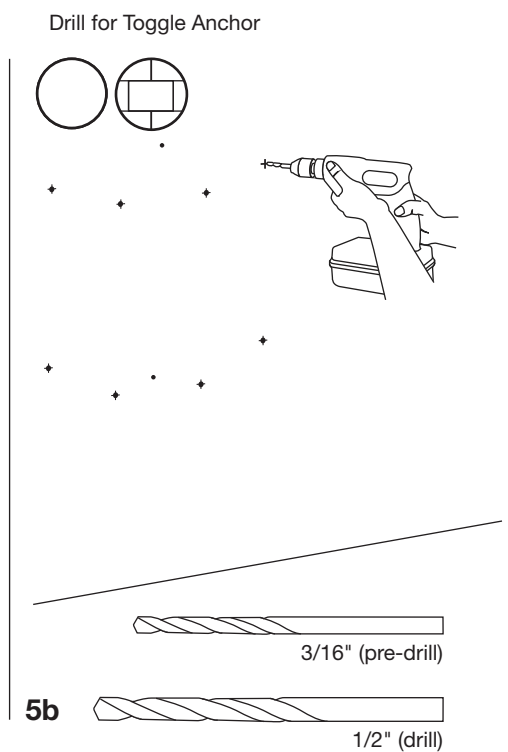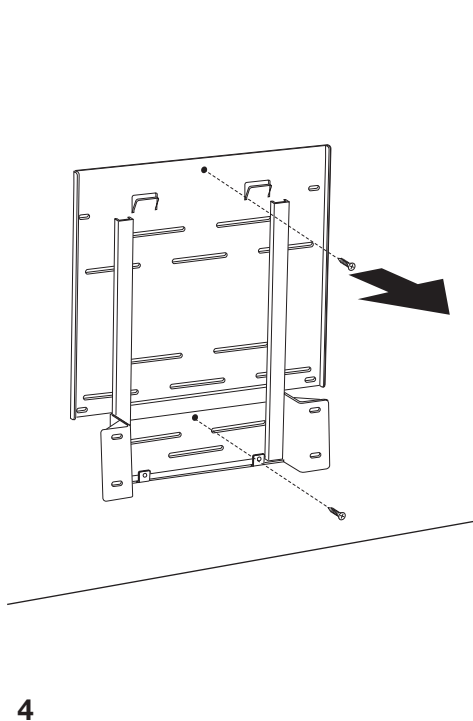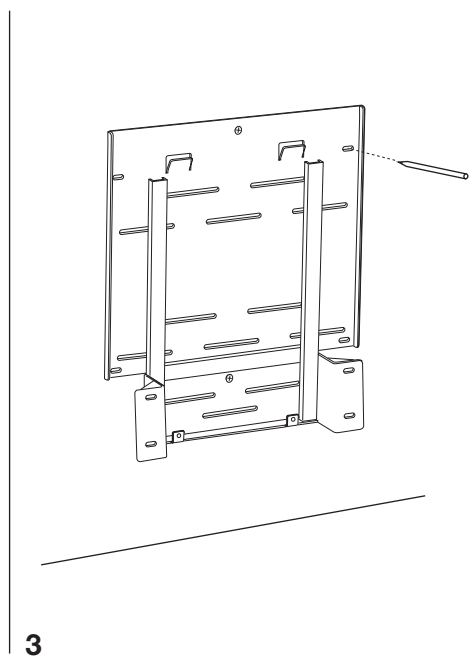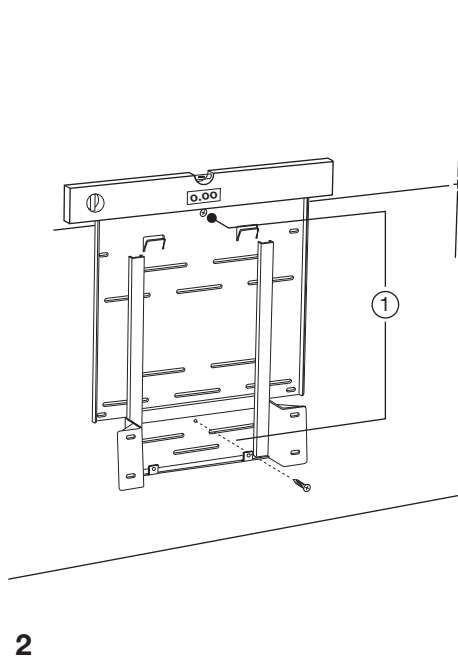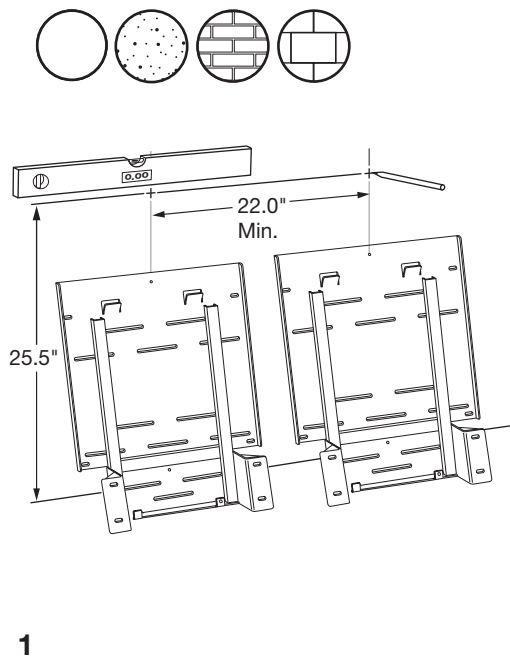


JumpSeat® Wall Commercial Assembly Instructions

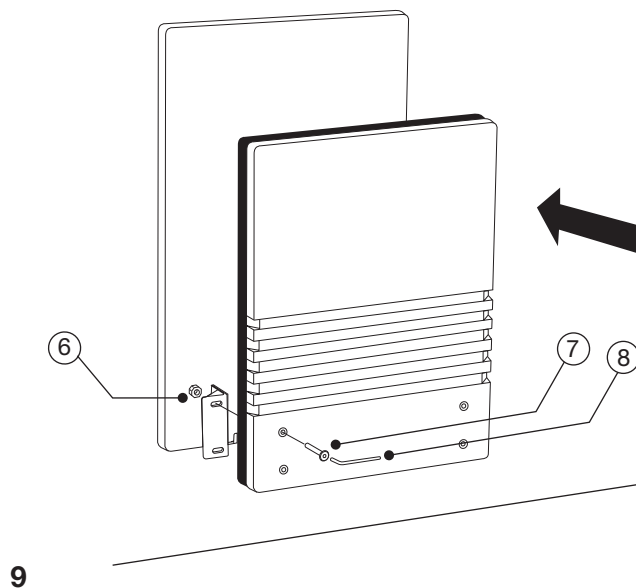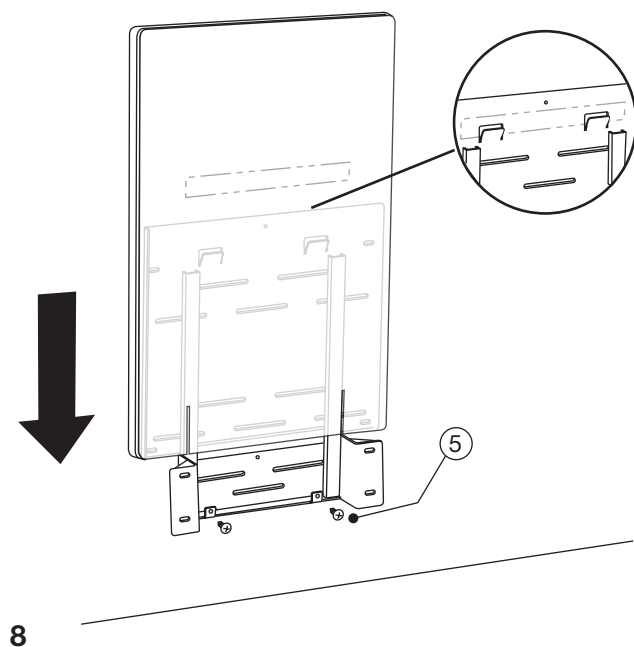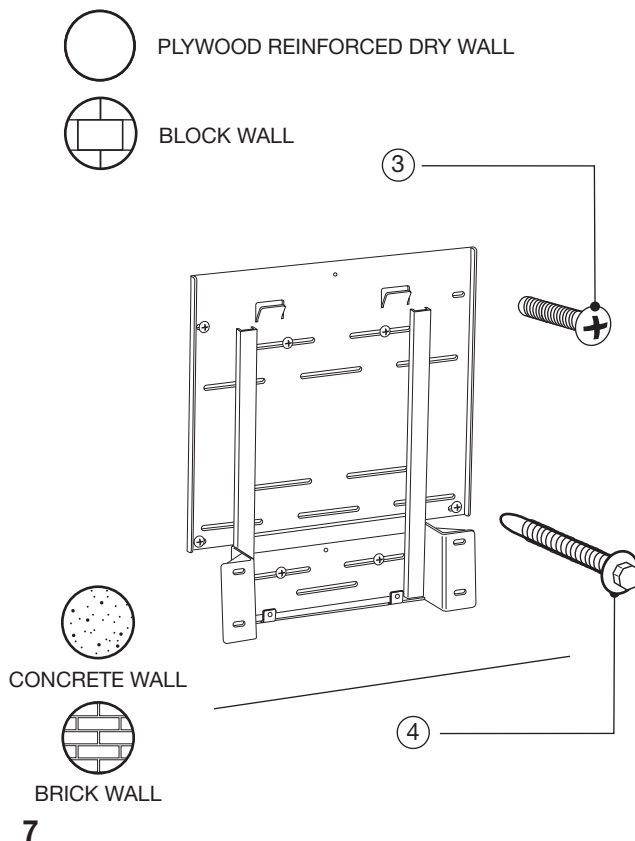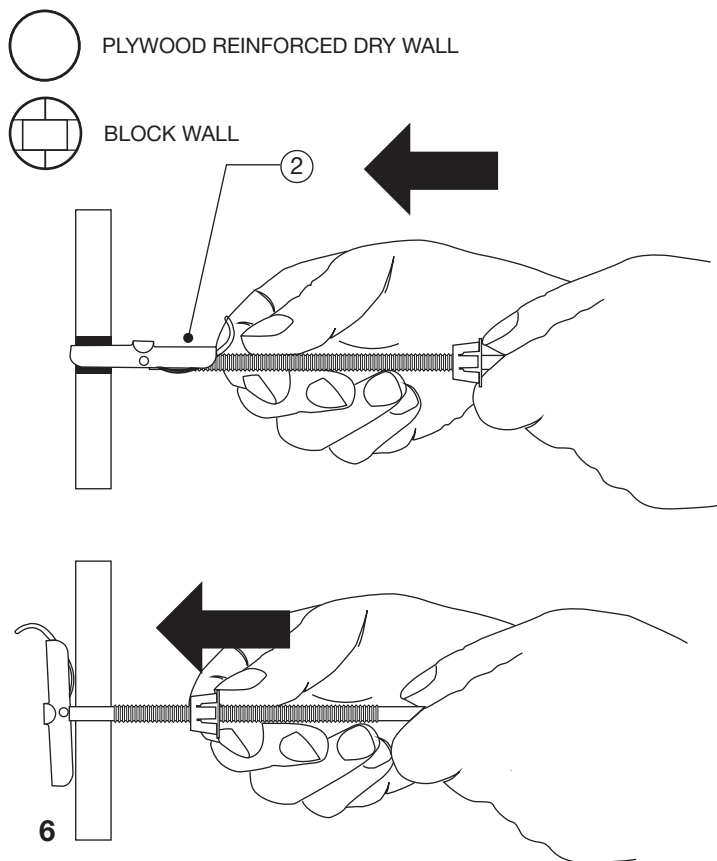


JumpSeat® Wall Residential Assembly Instructions

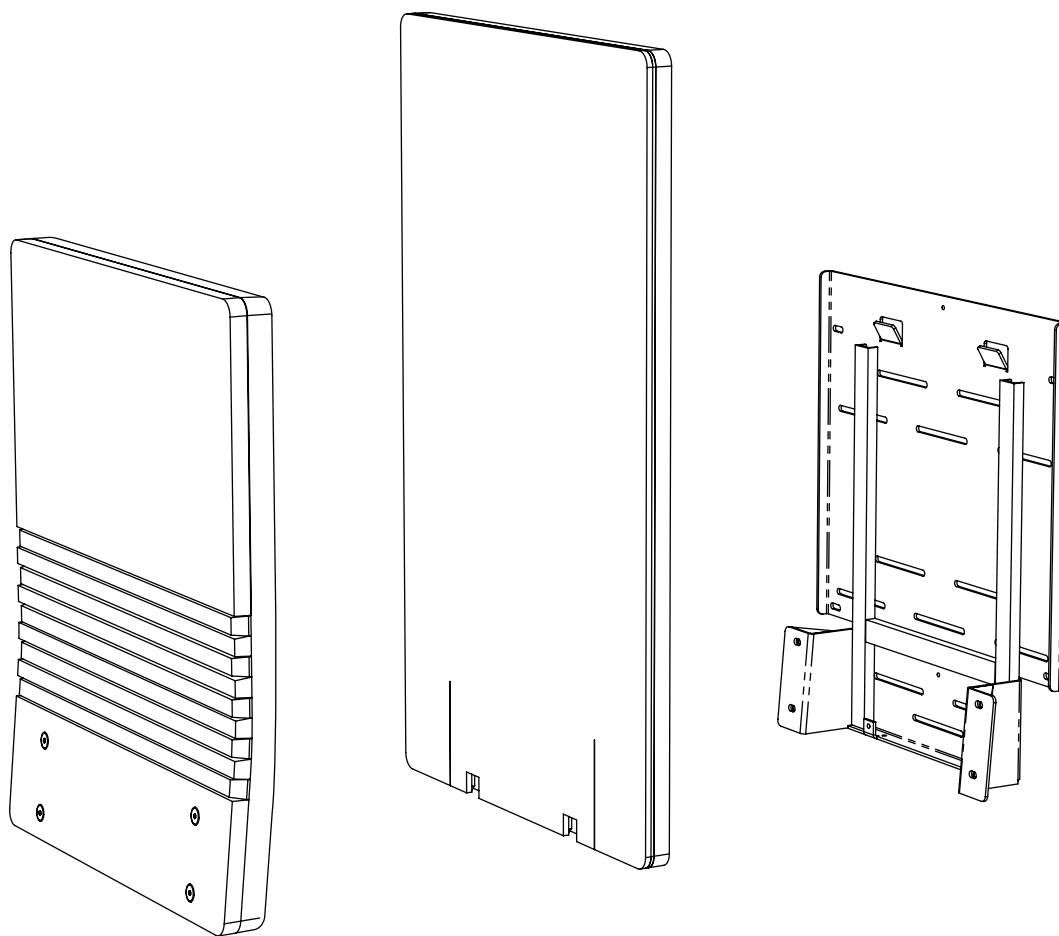

TOOLS REQUIRED

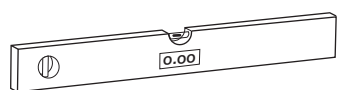


Level

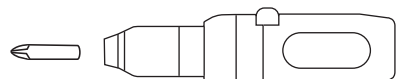

Drill

Phillips Bit

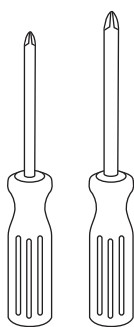

#2

#3


Stud Finder



5/16" Socket




WOOD STUD
DRY WALL

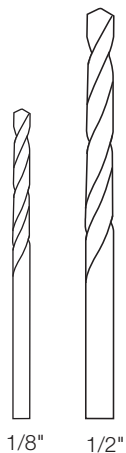

1/8"

1/2"

HARDWARE INCLUDED

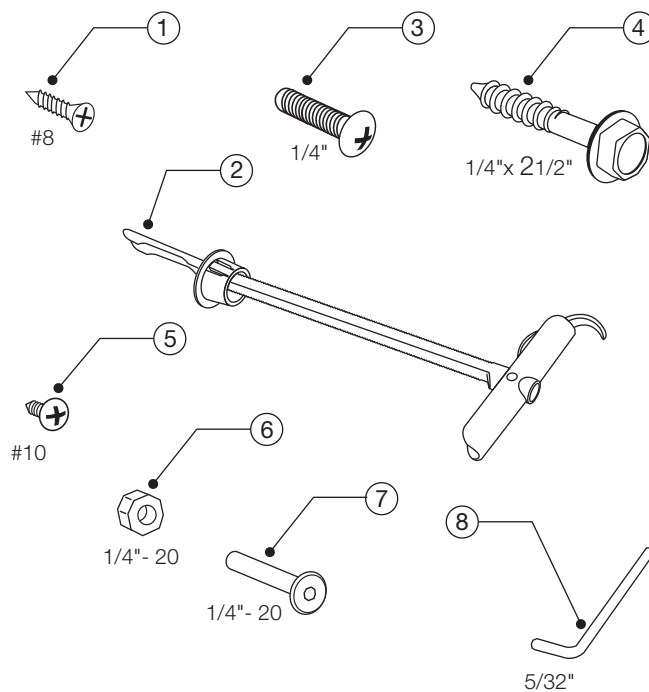

JumpSeat® Wall

Residential Assembly Instructions





WOOD STUD DRY WALL


Top View Center Stud

Top View Right Side Stud

Top View Left Side Stud

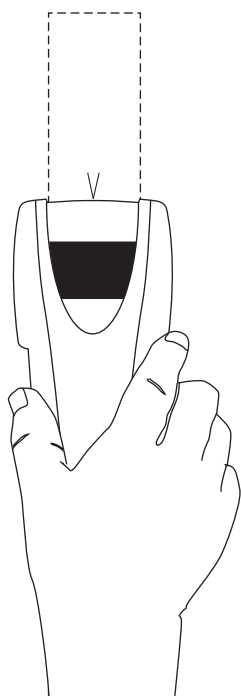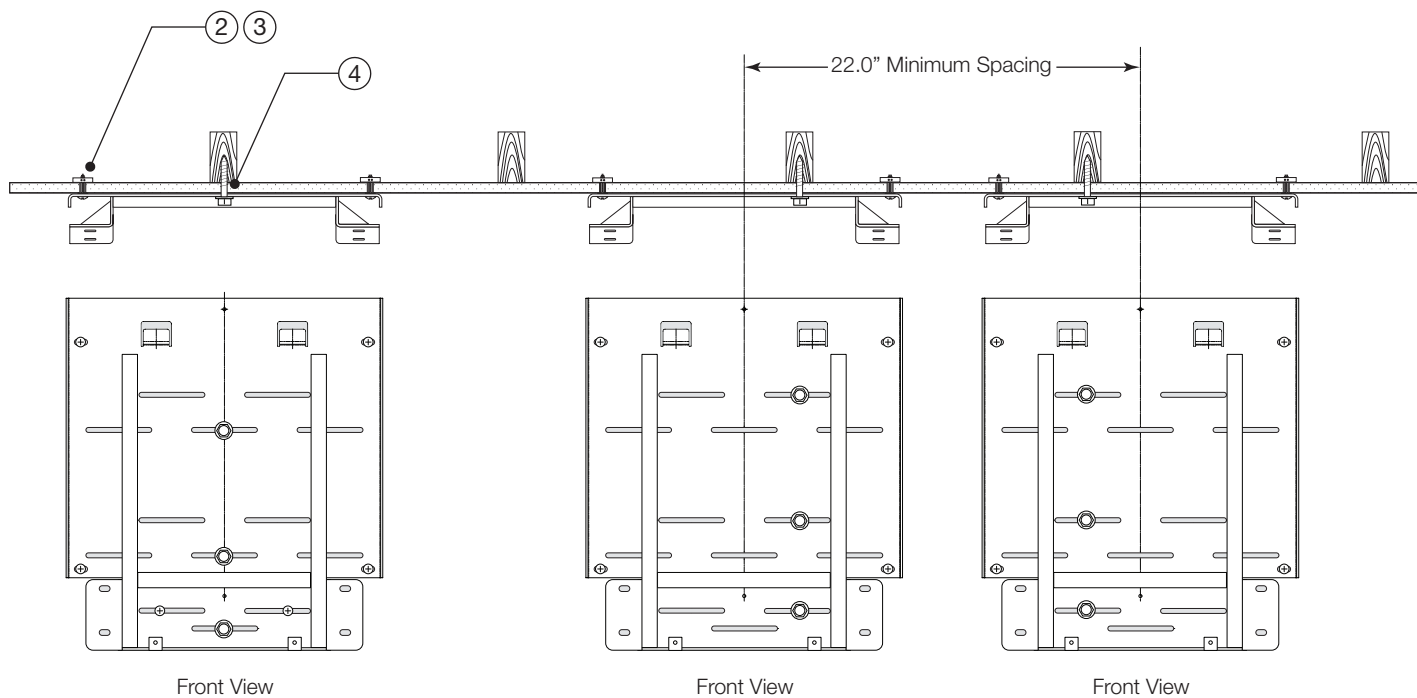

Locate Stud



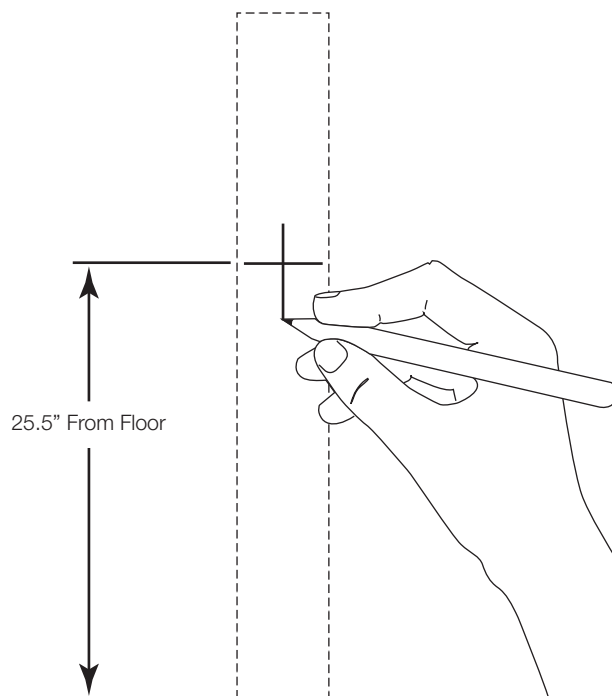


Mark Center Line


JumpSeat® Wall Residential Assembly Instructions




WOOD STUD DRY WALL

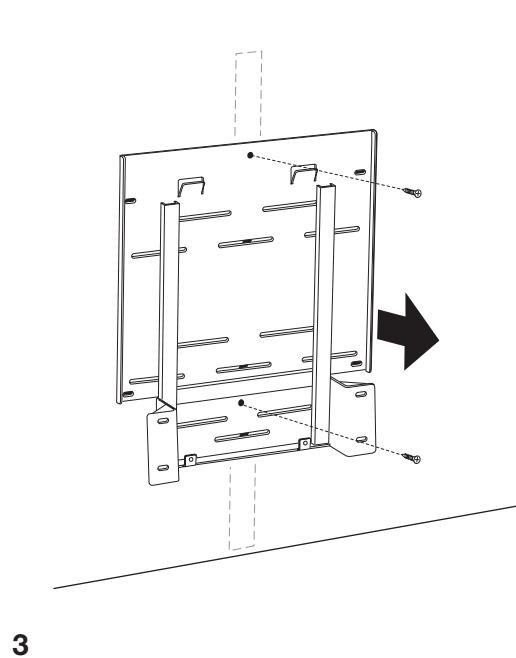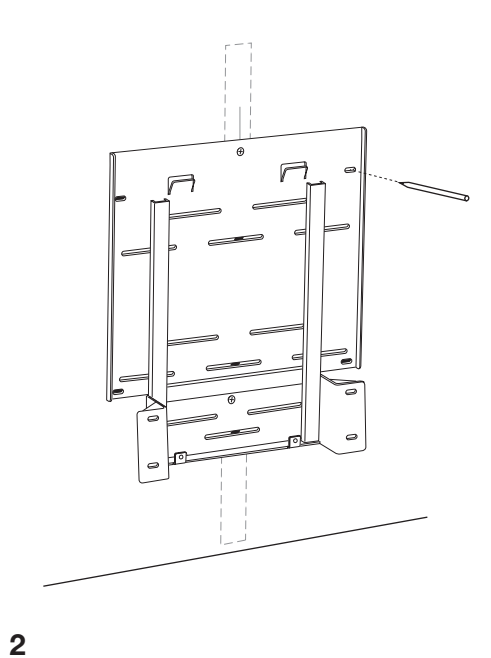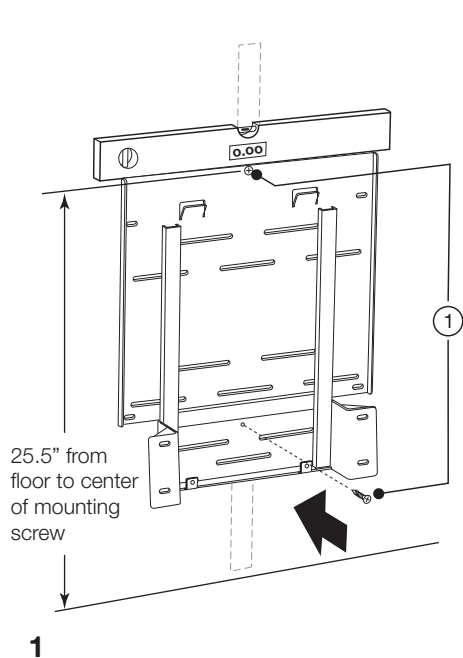

Drill

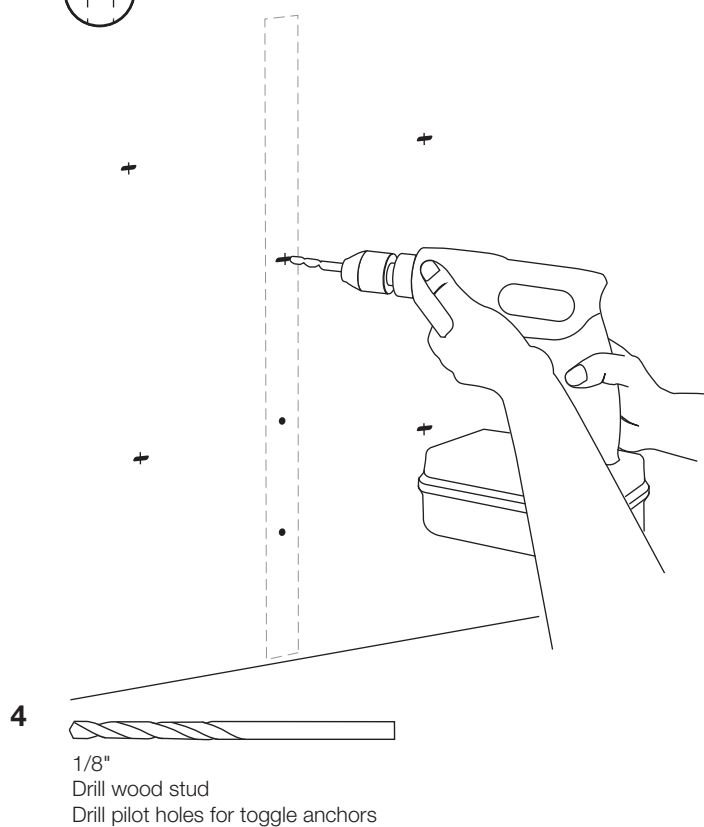


Drill for Toggle Anchor

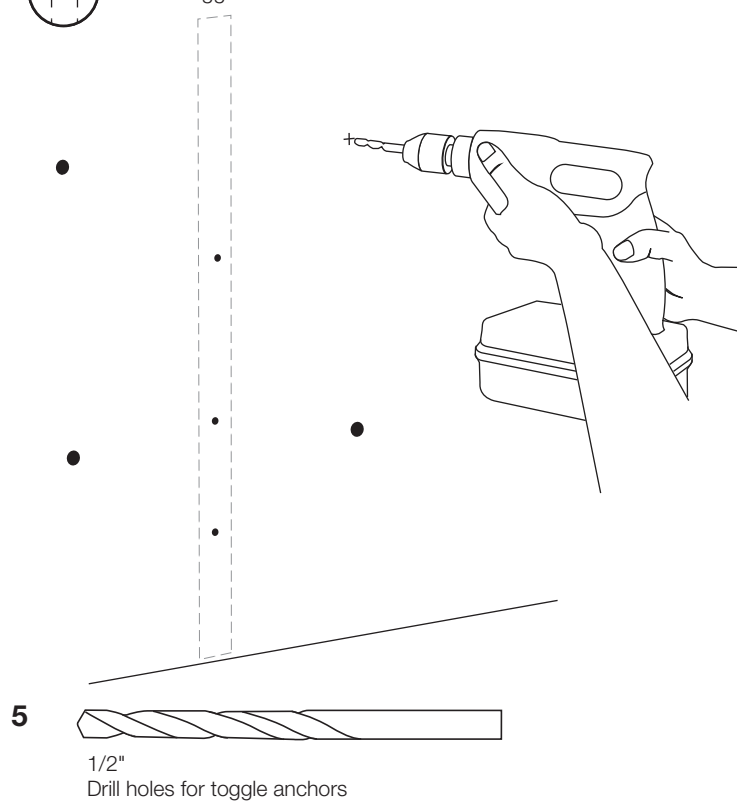

JumpSeat® Wall Residential Assembly Instructions





WOOD STUD DRY WALL

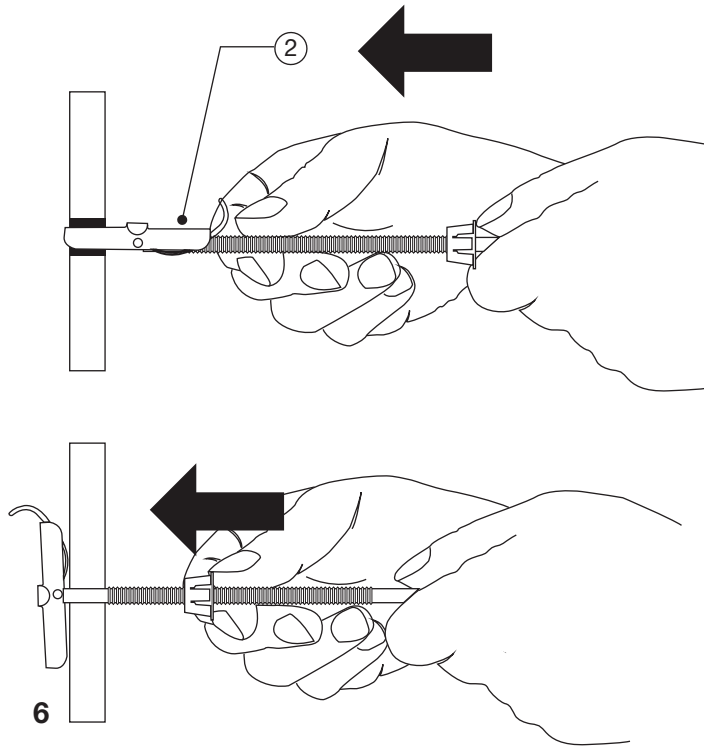


WOOD STUD DRY WALL

7

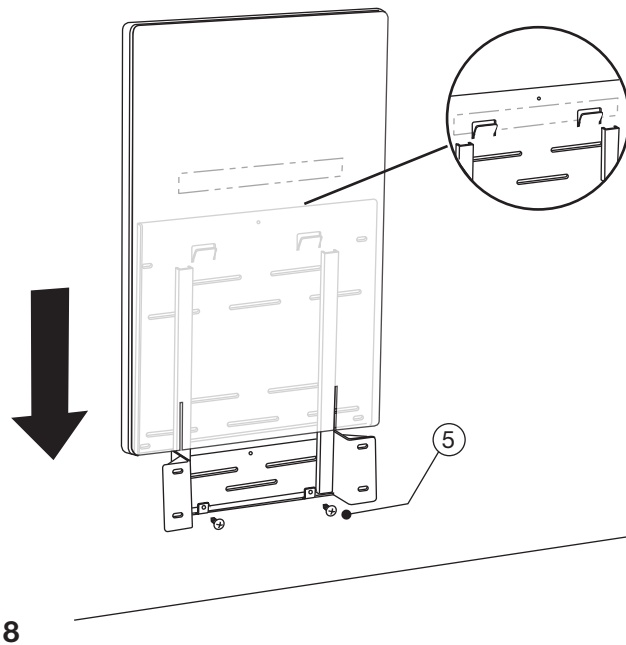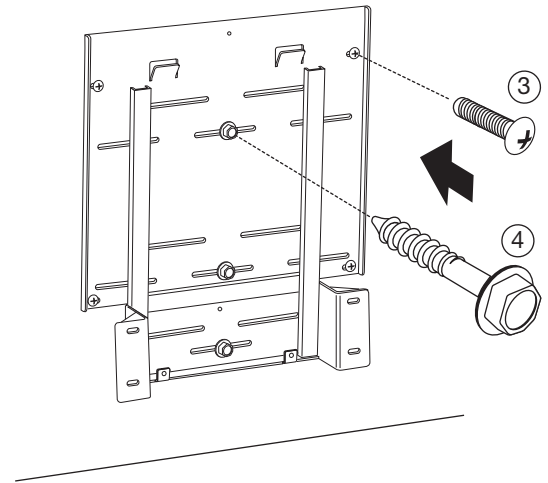

9

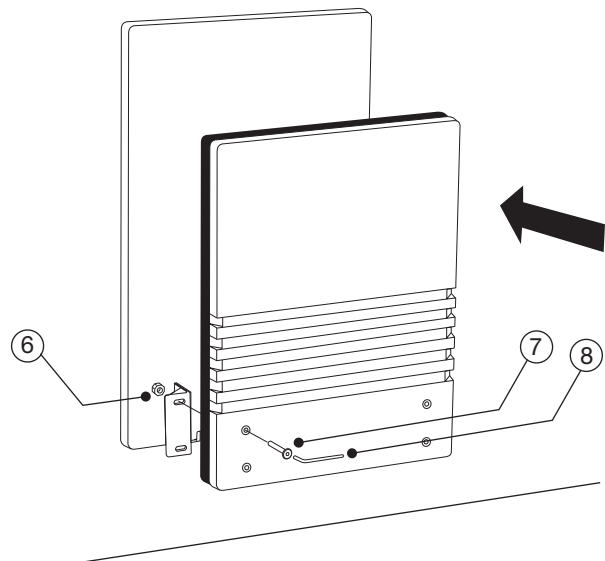

JumpSeat® is a registered trademark of Aria Enterprises, Inc.
used under license by Sedia Systems, Inc.
Patents: www.sediasystems.com/patents

866.892.6130 www.sediasystems.com