


# Shale Credenzas & Dresser

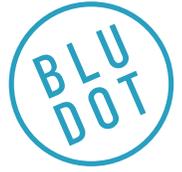

DESIGNED IN 2013

ASSEMBLY NOTES | REV 00




## BEAUTILITY!

Layers of clean details come together, from the solid wood legs to the full-grain leather drawer pulls. Shale adds storage panache and practicality to the bedroom, living room, dining room or office.

## NEED A HAND?

Contact us at [service@bludot.com](mailto:service@bludot.com) or **844.425.8368** for assistance.

# Parts & Hardware

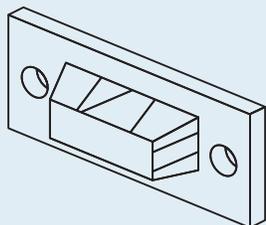

QTY

2

Pt. 8041



QTY

2


Pt. 1217



QTY

2

Pt. 1218

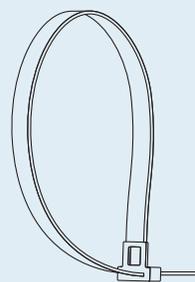

QTY

1

Pt. 8042



QTY


1

Cabinet

# Step 01

## DOOR ADJUSTMENT.


Hinges work in pairs. If you adjust one hinge, chances are you will have to adjust all the hinges.

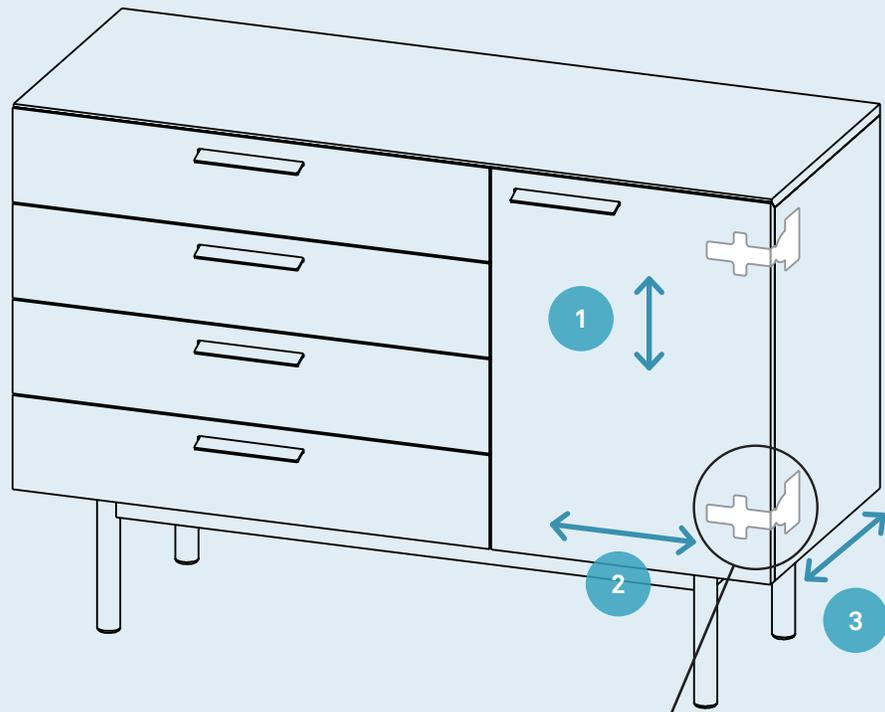

If door needs adjustment from TOP TO BOTTOM, Use Screw #1.

If door needs adjustment from SIDE TO SIDE, Use Screw #2.



If door needs adjustment from FRONT TO BACK, Use Screw #3.

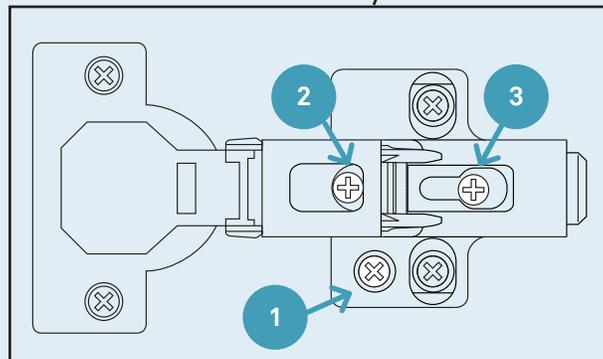

## Step 02

ATTACH ANTI-TIP BRACKET TO THE WALL.

Install anti-tip bracket to wall stud 1-inch below case top panel height.

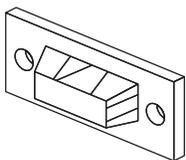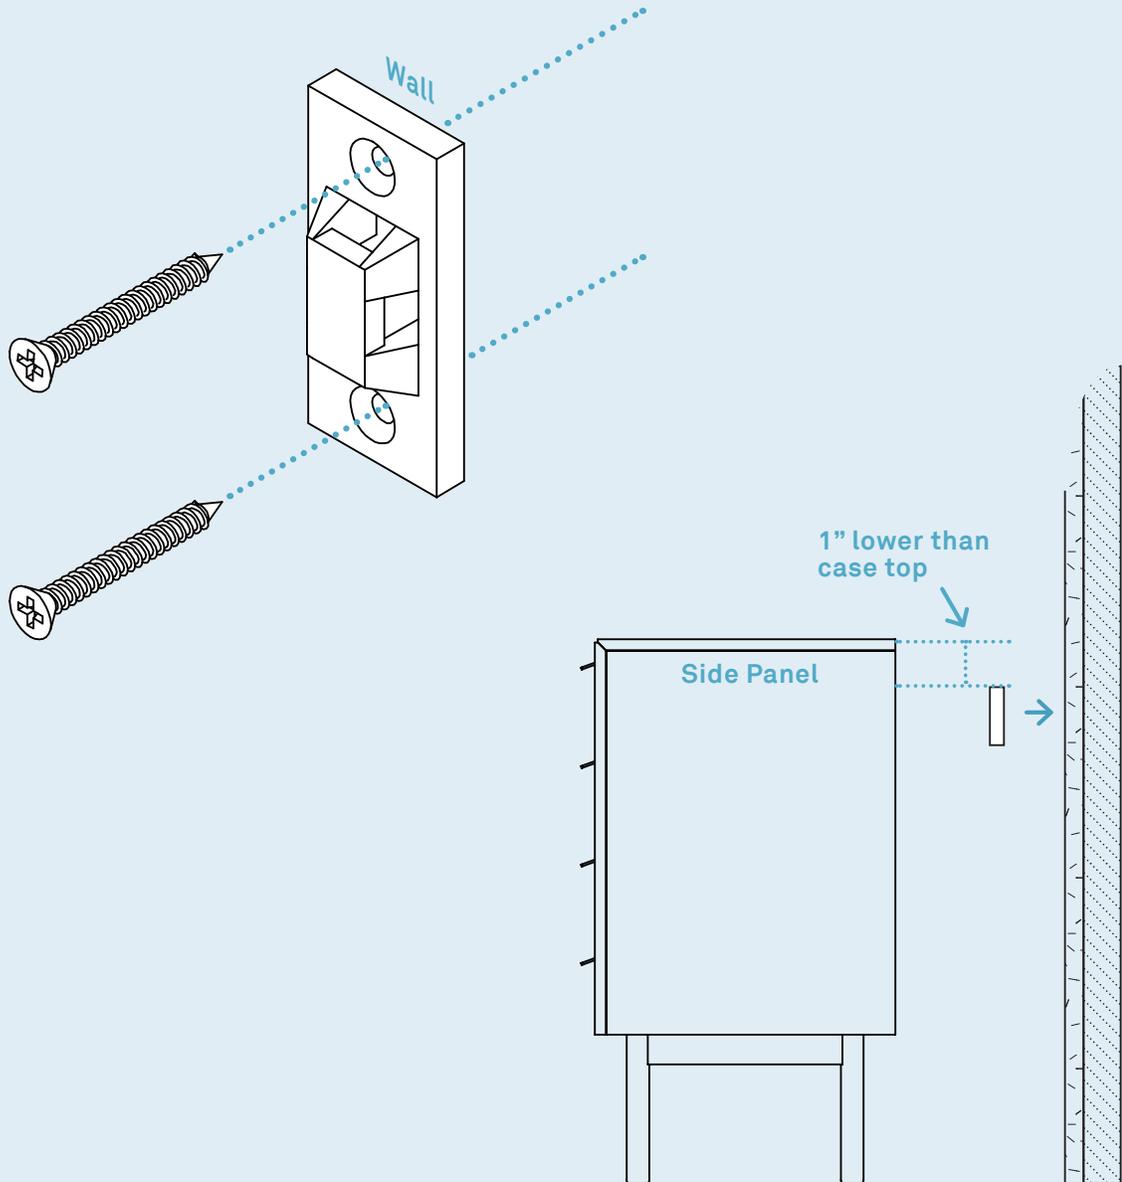

Pt. 8041 x 1




Pt. 1218 x 2


## Step 03

### INSTALL ANTI-TIP BRACKET TO CASE.

Bracket must be installed to top panel of case. In order to prevent damage, it is recommended that 3/32" pilot holes be drilled prior to installation.

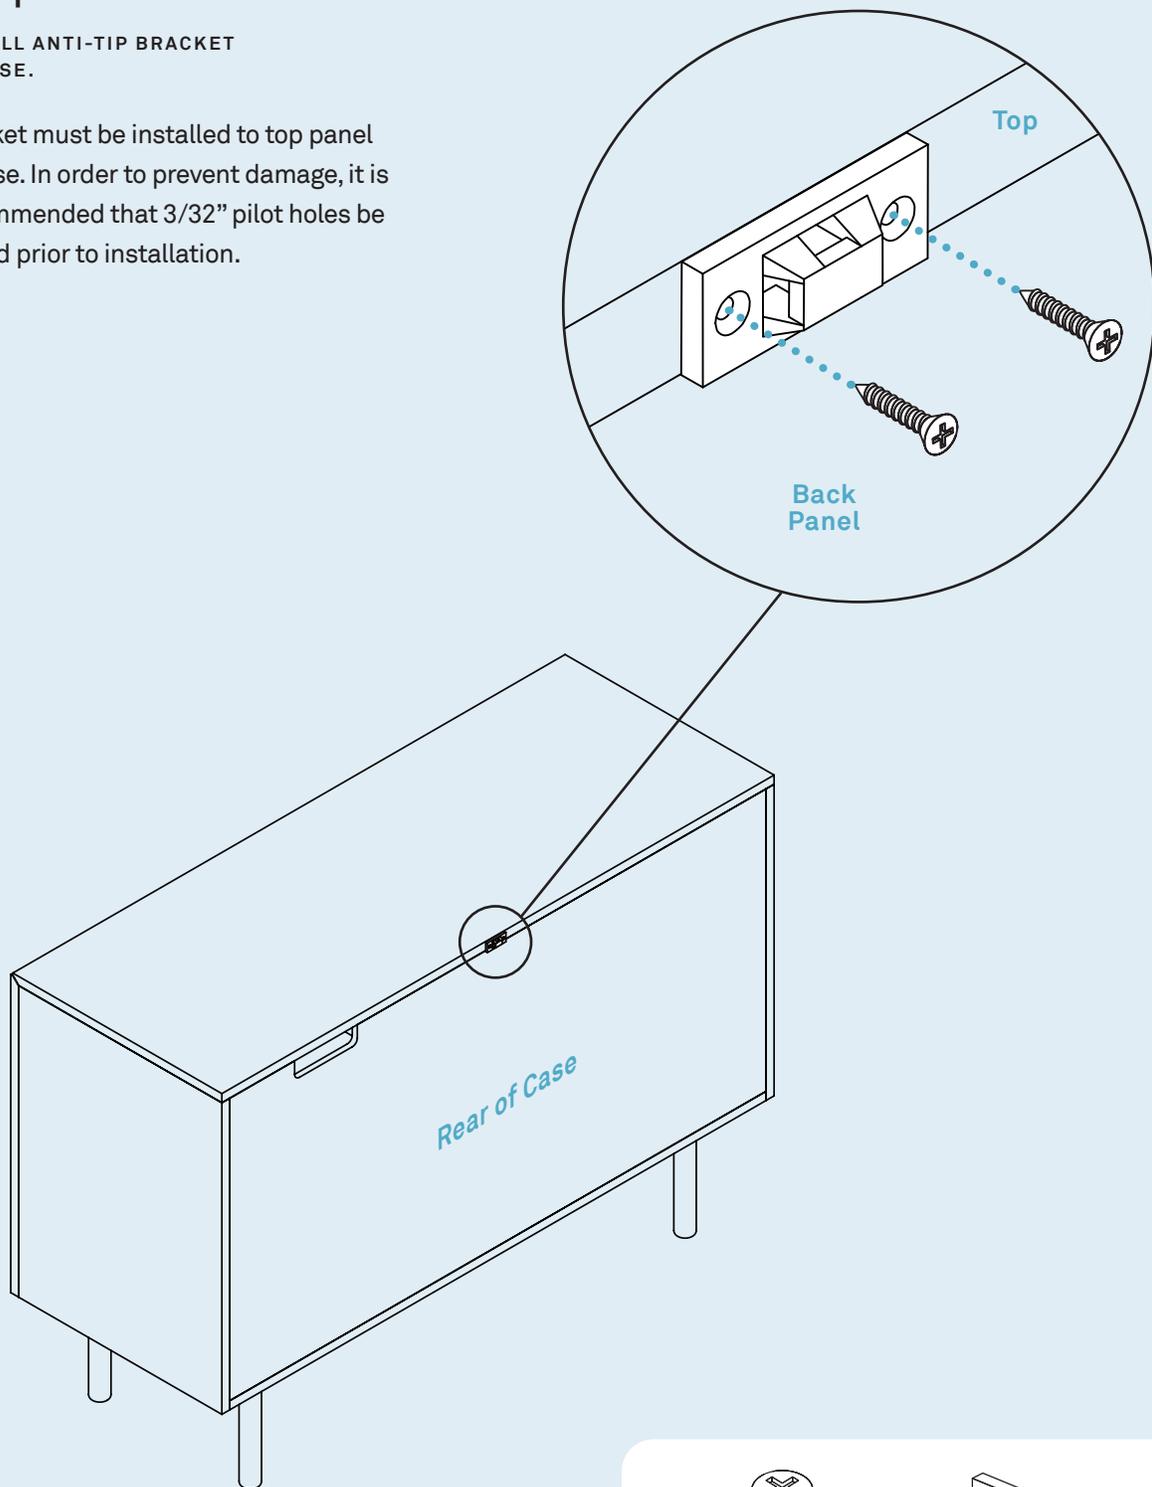

Pt. 1217 x 2


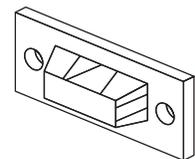


Pt. 8041 x 1


# Step 04

SECURE THE CASE.

Install and tighten the strap prior to using the product.

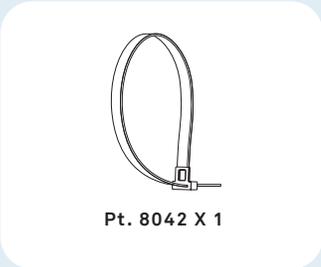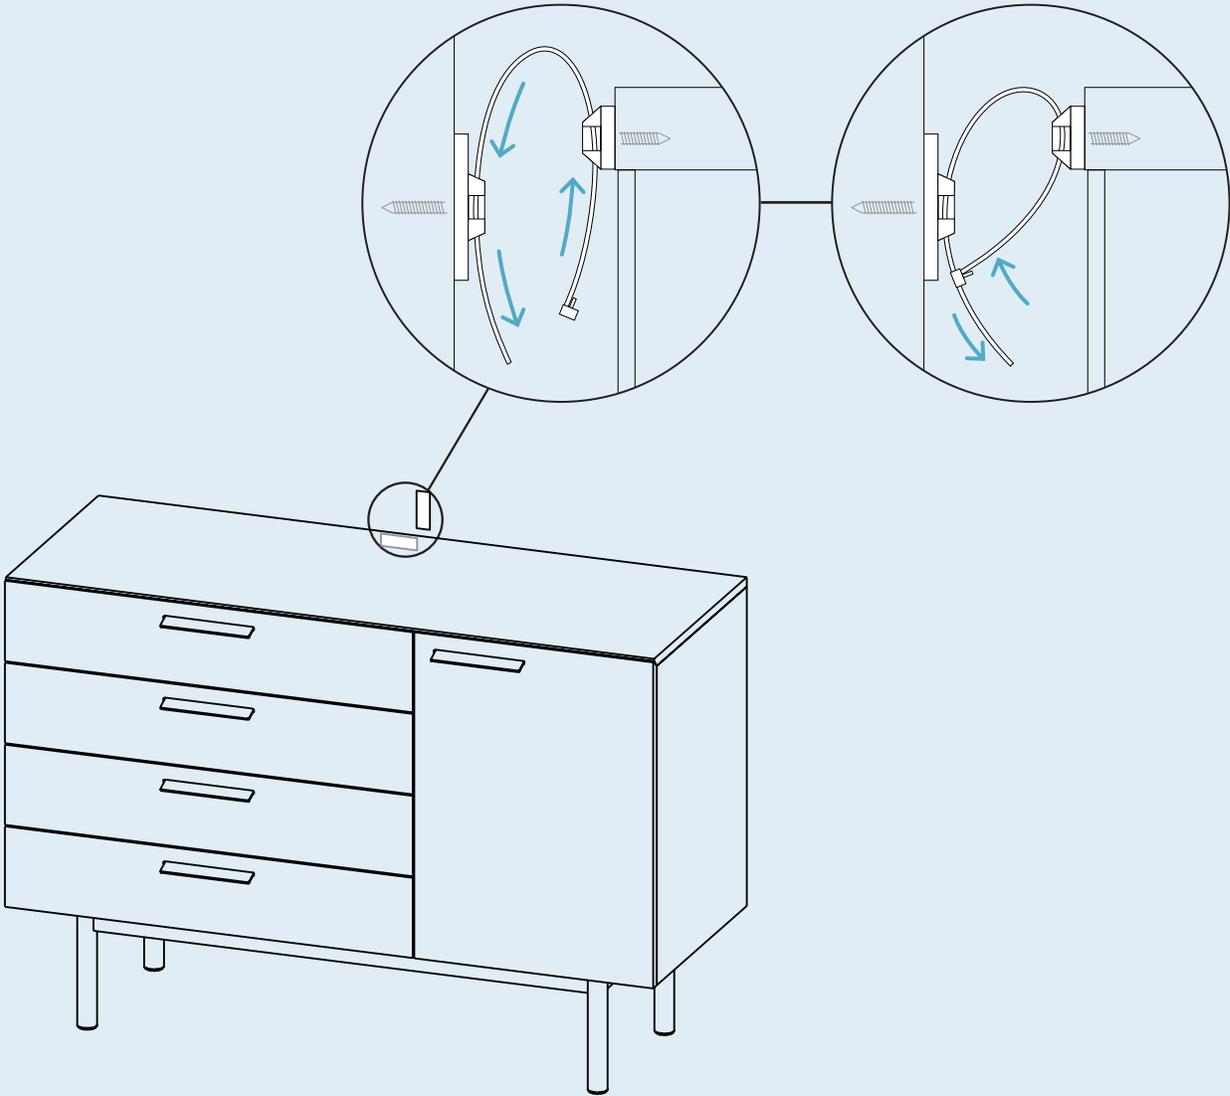

Pt. 8042 X 1



## Additional Information

### CLEAN

Clean with a slightly damp, soft cloth. To remove dirt and fingerprints, use a quality cleaner formulated for wood furniture. Wipe completely dry with a soft cloth in the direction of the wood grain.

### NOTE

Air and daylight will naturally change the color of the wood. For most woods, this change is gradual and very slight. During the first several months, while the patina is developing, items placed on the wood should be rotated to different locations to prevent uneven coloration. Over time and even patina will develop.

