


# Installation Guide

## Marble Vessels™

### Above-Counter Lavatories

K-2333

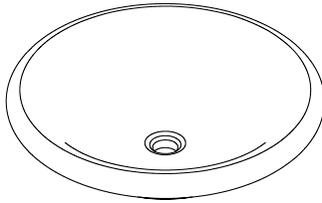

THE BOLD LOOK  
OF **KOHLER**®

1023121-2-A

## Thank You For Choosing Kohler Company

We appreciate your commitment to Kohler quality. Please take a few minutes to review this manual before you start installation. If you encounter any installation or performance problems, please don't hesitate to contact us. Our phone numbers and website are listed on the back cover. Thanks again for choosing Kohler Company.

## Before You Begin

 **CAUTION: Risk of personal injury or product damage.** This lavatory is made of marble. Two people are needed to lift the lavatory into the mounting position.

- Refer to the Homeowners Guide to determine all necessary components for your installation.
- Do not install this lavatory on a glass countertop. The weight of the lavatory may damage the glass.
- Remove the lavatory from its carton and inspect for damage.
- During installation, store the lavatory in the protective carton whenever possible.
- Observe all local plumbing and building codes.

## Tools and Materials



Pencil and  
Marker



Measuring Tape



Drill and a  
5/16" bit




Scissors




Silicone  
Sealant




Safety Glasses

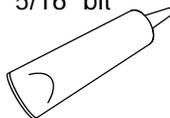


Waterproof Sealer  
(for Porous Countertops)

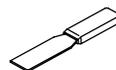

Putty Knife

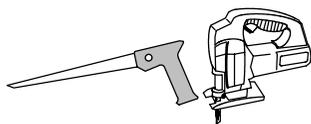



Keyhole or Saber Saw

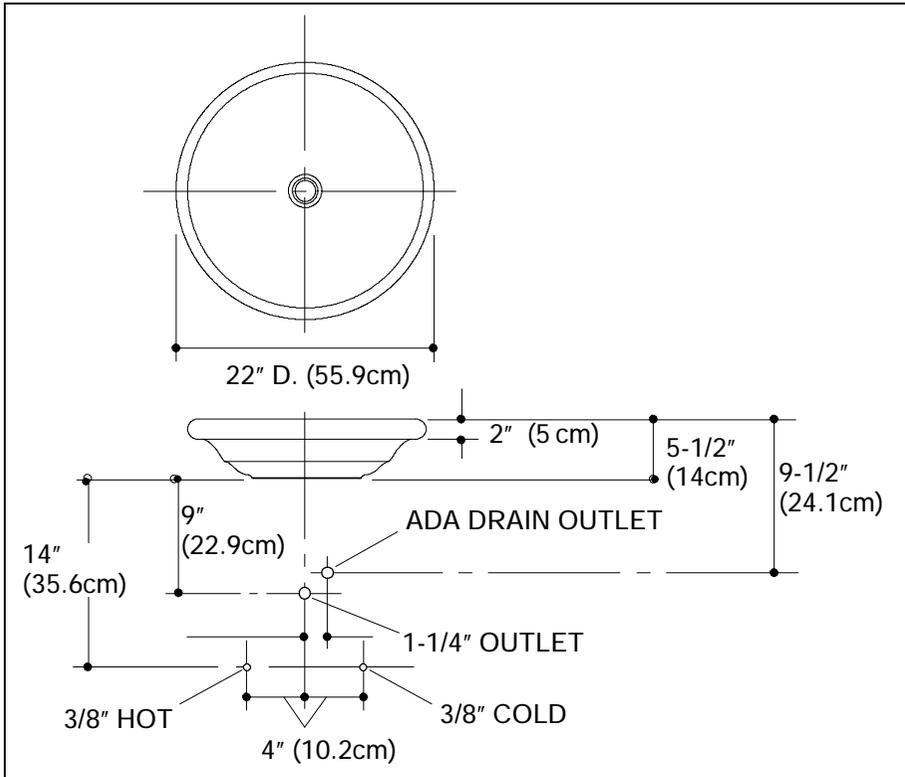

## 1. Roughing-in

## Backsplash

Faucet supply cut-out  
hole for K-2333-1 only

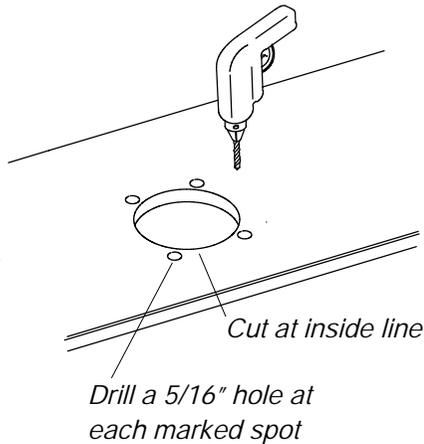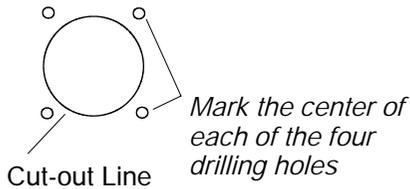

## 2. Position the Template

- Determine your desired cut-out location.

**NOTE:** The lavatory center must be at least 12" (30.5cm) from the wall to ensure there is no interference between the lavatory and the wall.

- Cut out the template along the inside line labeled "Cut-Out" using a scissors.
- Position the template on the countertop in the desired location. Make sure the template is secured firmly in place so it cannot move.
- Make sure there is adequate clearance between the lavatory, faucet, and backsplash.
- Trace the inside edge of the template on the countertop with a pencil.
- Mark the exact centers of the four drilling holes.
- If installing the K-2333-1, mark the faucet supply location.
- Remove the template.



## 3. Drill the Mounting Holes

- Drill four 5/16" holes at the marked hole centers.
- Using a saber saw, cut the sink hole in the countertop following the marked line.
- If installing the K-2333-1, cut or drill the faucet supply hole now.

K-2333-0 Only

Bottom Edge of Spout

1" (2.5cm) Min

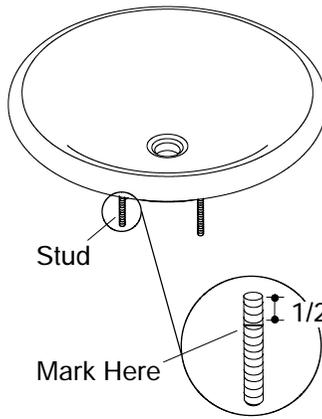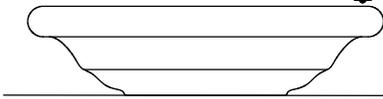

## 4. Install the Faucet

### When Installing the Faucet for the K-2333-0

- Install the faucet to the wall according to the manufacturer's instructions.
- Ensure that there is enough clearance for hand washing.
- Make sure the faucet has a minimum of 1" (2.5cm) clearance over the rim of the lavatory.
- Direct the stream of water toward the center of the lavatory.


### When Installing the Faucet for the K-2333-1

- Install the faucet to the faucet deck on the lavatory according to the faucet manufacturer's instructions.

**NOTE:** If employing the K-7702 pop-up drain with this installation, it may be necessary to drill an additional mounting hole in the connecting link using a 5/16" drill bit. If needed reference the pop-up drain installation instructions for part descriptions.

## 5. Attach the Threaded Studs

- Using a marker, mark a spot 1/2" (1.3cm) from one end of each of the four provided 70mm threaded studs.
- Screw the marked end of each stud into an insert on the bottom of the lavatory. Do not screw the studs past the previously made mark.

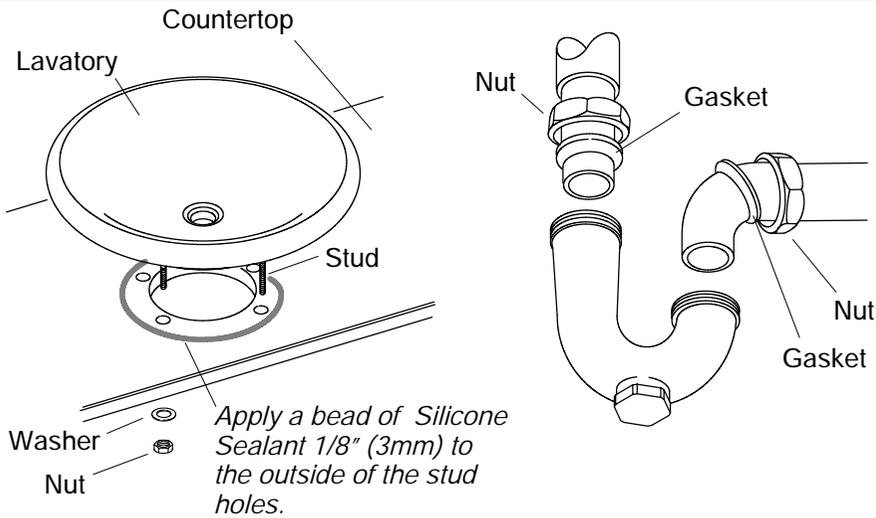

## 6. Position the Lavatory

- ⚠ CAUTION: Risk of personal injury or product damage.** This lavatory is very heavy. Two people should lift the lavatory into place.
- ⚠ CAUTION: Risk of product damage.** When lifting the lavatory into place, do not bump the studs against solid objects. Do not support the lavatory on the studs at any time.
- Place a continuous bead of silicone sealant on the countertop 1/8" (3mm) from the outside edge of the stud holes.
- Position the lavatory on the countertop. Each stud should go through one of the four previously drilled holes.
- Press down firmly.
- ⚠ CAUTION: Risk of product damage.** Do not tighten the nuts more than 1/2 turn past hand tight. Damage to the lavatory may result.
- Thread a washer and nut onto each of the studs from underneath the countertop. Tighten the nuts 1/2 turn past hand tight.
- Wipe away any excess sealant.

## 7. Position the Lavatory

- Install the drain to the lavatory according to the drain manufacturer's instructions.
- Finish the faucet installation and check for leaks.



USA: 1-800-4-KOHLER  
Canada: 1-800-964-5590  
Mexico: 001-877-680-1310  
[kohler.com](http://kohler.com)

THE BOLD LOOK  
OF **KOHLER**®

© 2003 Kohler Co.

1023121-2-A