

**NOTE:** THE JUNCTION BOXES MUST BE SOLIDLY FIXED TO THE WALL BEFORE PROCEEDING TO THE INSTALLATION.

## ● PART LIST


A Junction box	H Wire nuts
B Drywall anchor	I Cover plate
C Fixture 1	J Screws (by others)
D Lens	K Fixture 2
E Lamp	L Aligner
F Ballast cover	M Quick wire connectors
G Wall power feed cable (by others)	N Screws

## ● ANCHOR POSITIONS


Refer to anchor positioning template on pages 3-4.

## ● END VIEW



PR (ROUND)

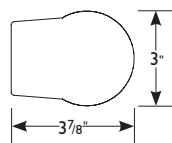


PW (WEDGE)

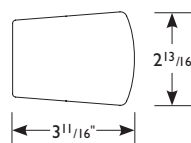


## ● MOUNTING POINTS

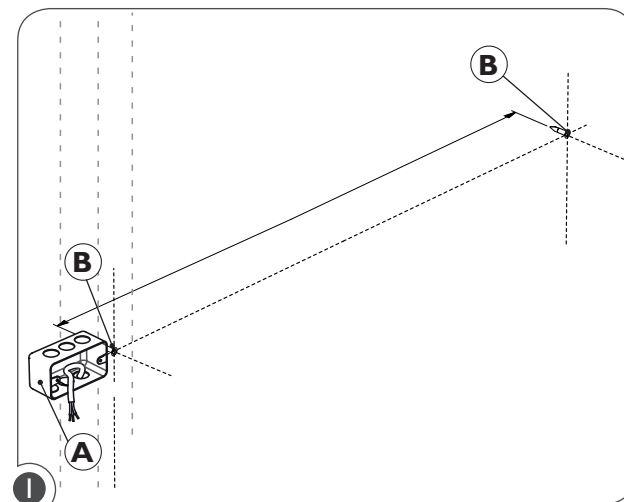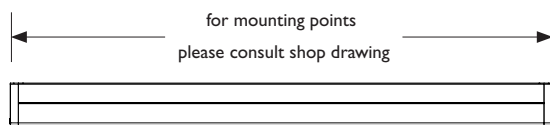


Ensure that the power to the fixture's circuit is turned off. Locate position of the junction box (A) on the wall. Make hole and use drywall anchors (B) if any of the holes do not line up with a structural stud.

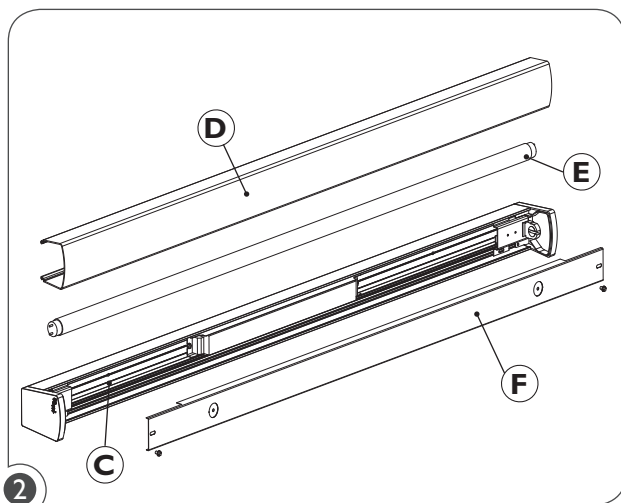

Prepare the fixture (C) by removing the lens (D), lamp (E) if installed, and the ballast cover (F).

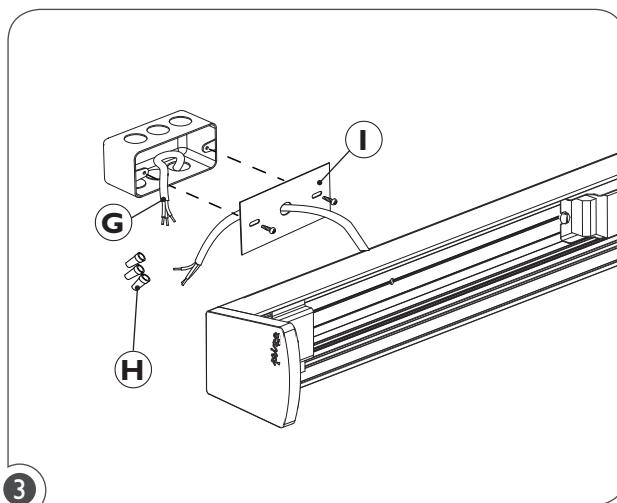

Make electrical connection between fixture and wall power cable (G) using wire nuts (H). Attach the cover plate (I).

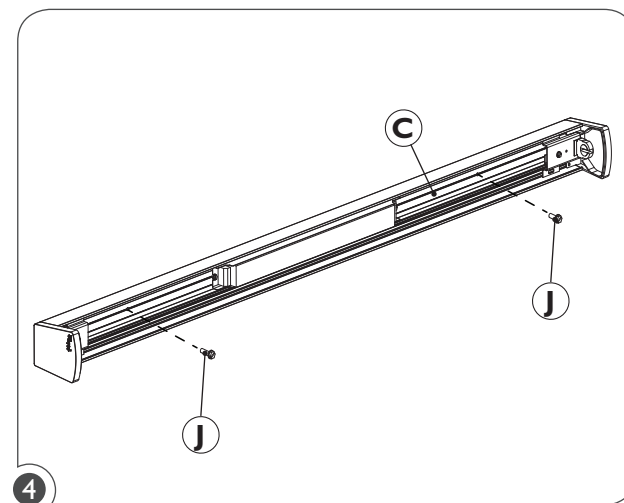


Fasten fixture (C) to the wall using mounting screws (J).


### WARNING:




RISK OF FIRE AND ELECTRICAL SHOCK. FIXTURE MUST BE INSTALLED BY A QUALIFIED ELECTRICIAN ONLY IN ACCORDANCE WITH NATIONAL, LOCAL BUILDING AND ELECTRICAL CODES. DISCONNECT POWER AT ELECTRICAL PANEL BEFORE SERVICING.

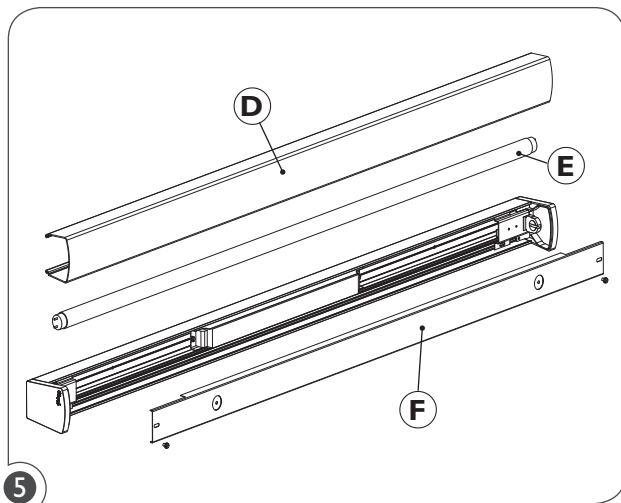


5 Install ballast cover (F), lamp (E) and lens (D).

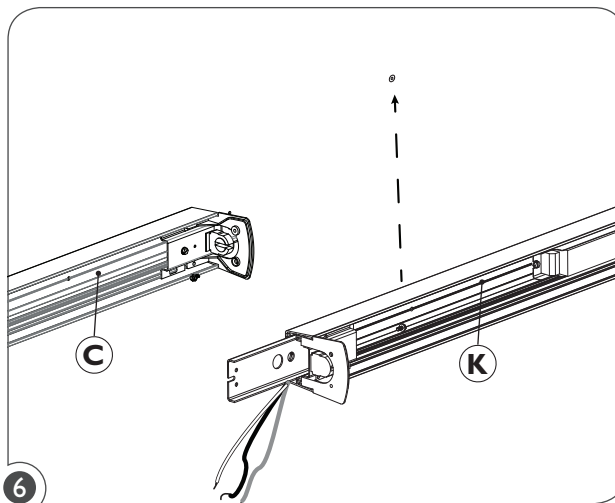


6 **CONTINUOUS ROW:** If row installation is required, repeat steps 1 to 4 on the first fixture (K) in the row.

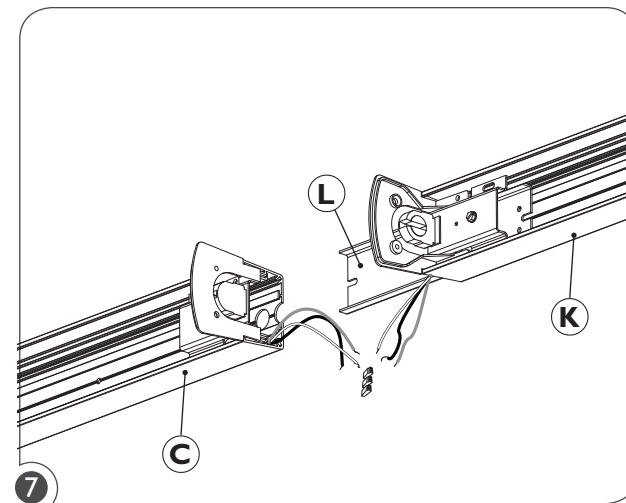


7 Repeat step 2 on the next fixture in the row. Slide fixtures (C) and (K) together using the aligner (L).

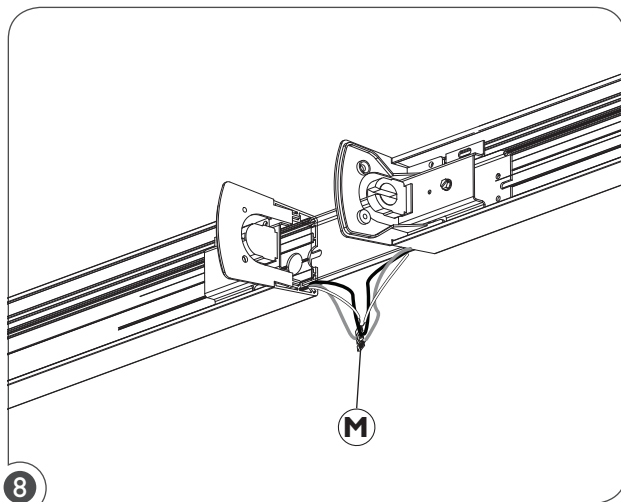

8 Make wire connection between the fixtures using supplied quick-wire connectors (M).

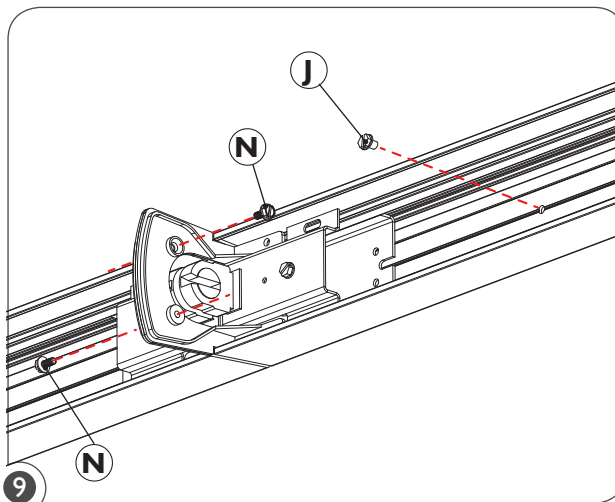

9 Slide fixtures together and fix fixtures to the wall with screws (J). Do not tighten screws (J) until all fixtures are connected. Use supplied screws (N) to secure the adjoining fixtures.


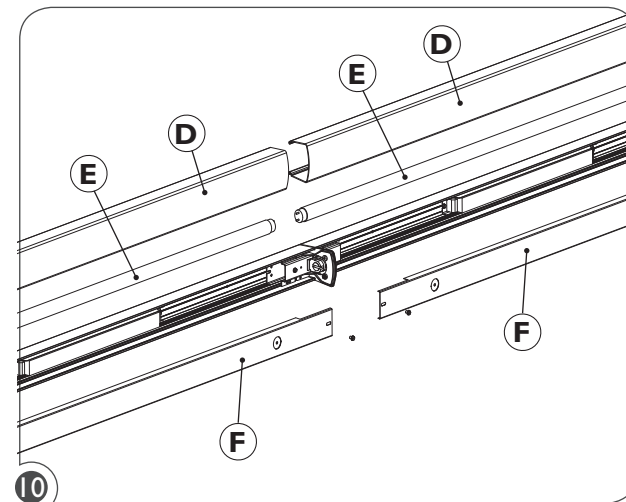


10 Repeat steps 6 to 9 for all other fixtures in the row. Install ballast cover (F), lamps (E) and lens (D).



## WALL MOUNT INSTALLATION INSTRUCTIONS TEMPLATE FOR HOLES AND J-BOX POSITION


SIDE VIEW

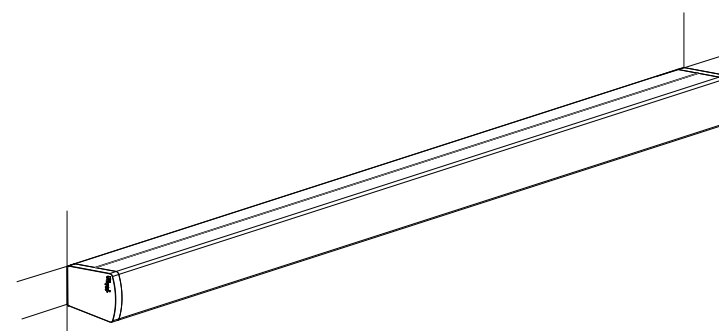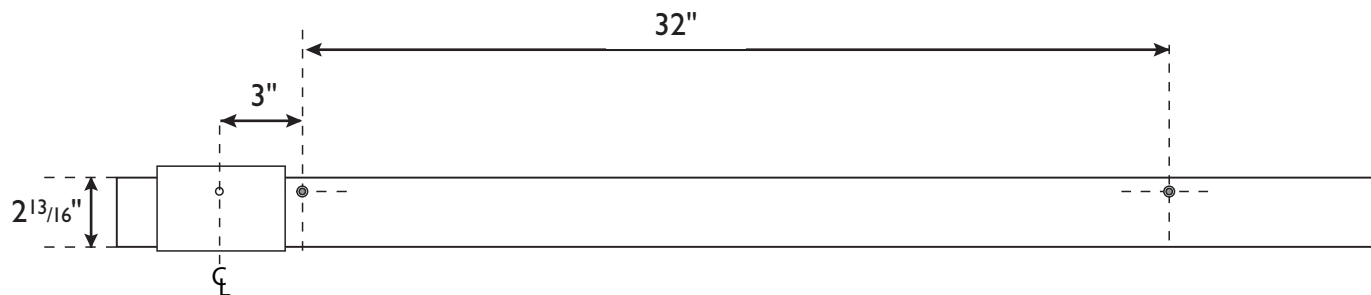

**PRIME 4" WALL MOUNT**

# prime 8' FIXTURE

## WALL MOUNT INSTALLATION INSTRUCTIONS TEMPLATE FOR HOLES AND J-BOX POSITION

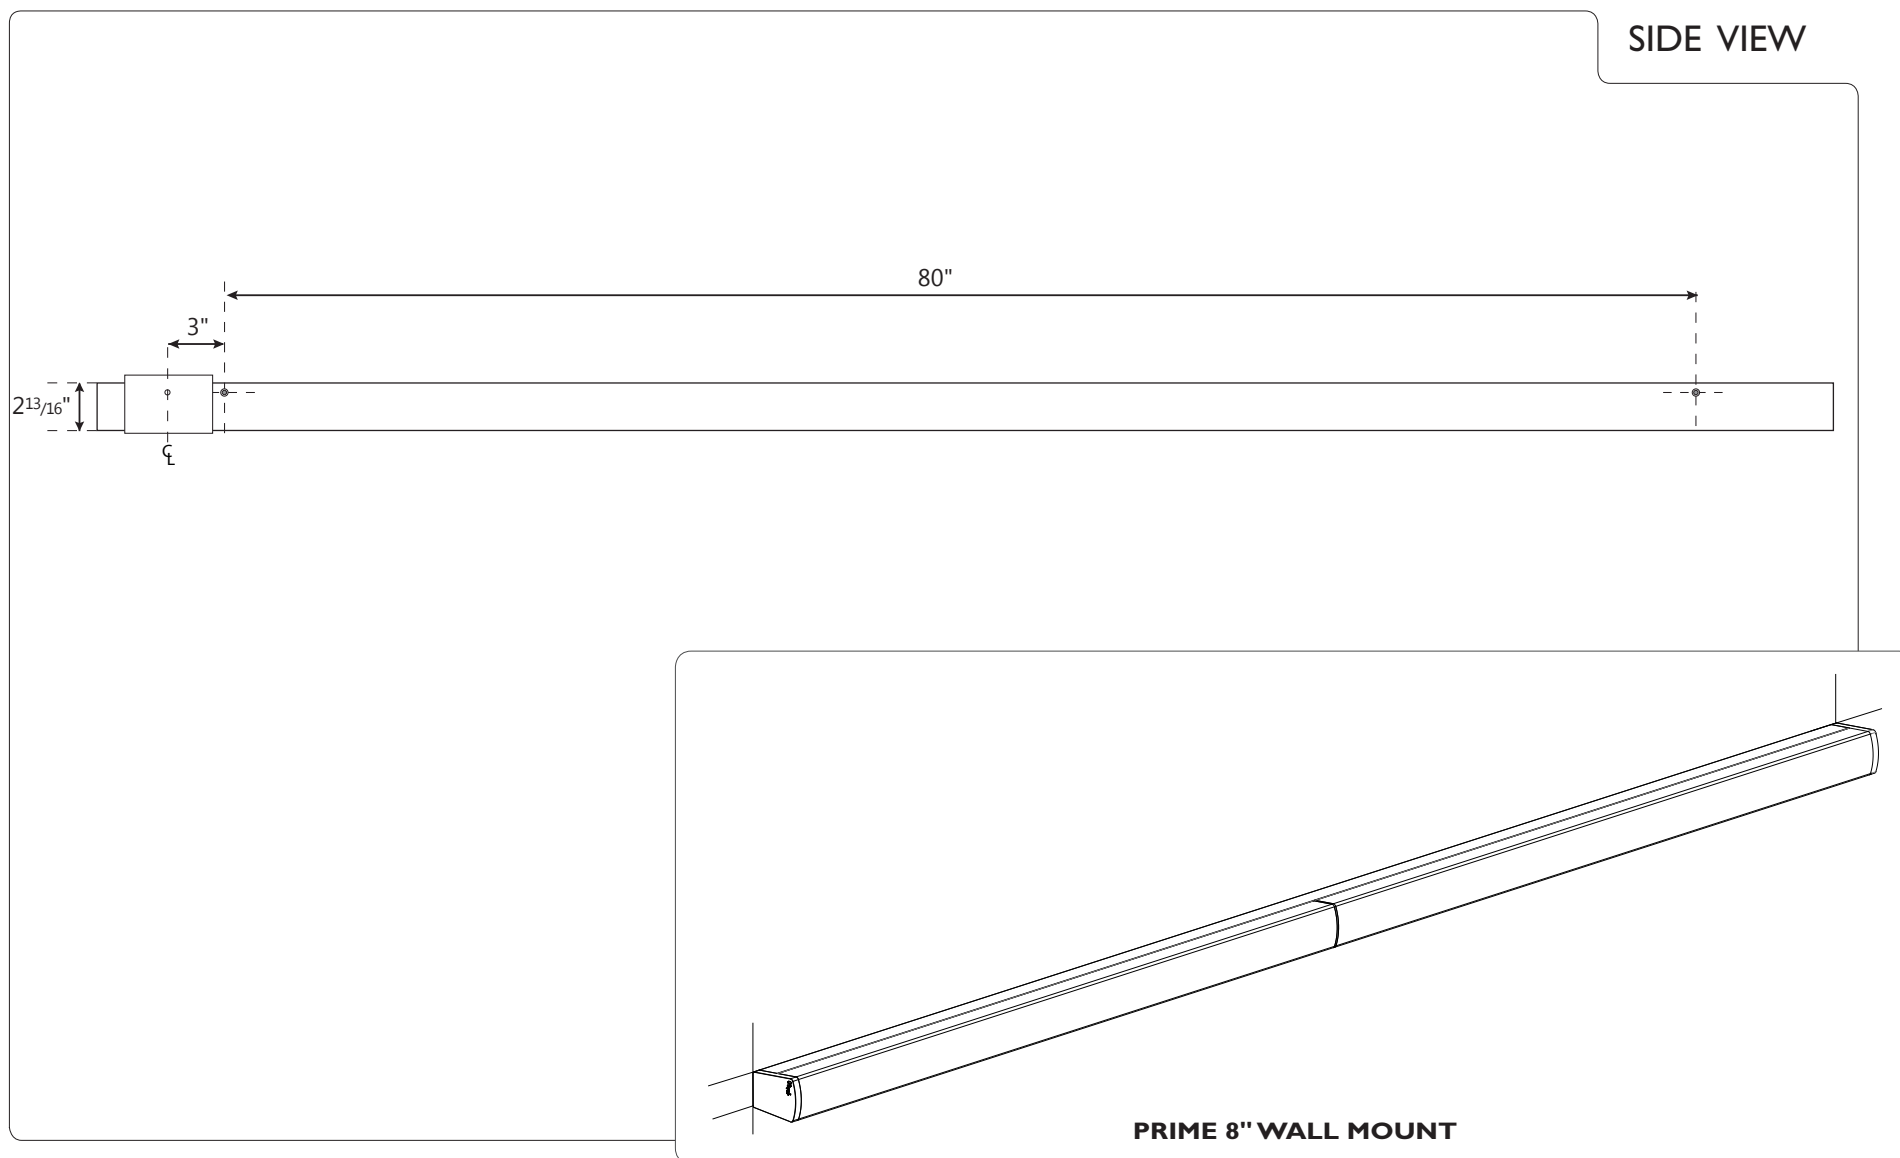

FILE NAME:PRW/INST

April 2, 2014

Page: 4 / 5

ÉCLAIRAGE  
**axis**  
LIGHTING

1.800.263.AXIS  
[T] 514.948.6272  
[F] 514.948.6271  
www.axislighting.com

**WARNING:** RISK OF FIRE AND ELECTRICAL SHOCK. FIXTURE MUST BE INSTALLED BY A QUALIFIED ELECTRICIAN ONLY IN ACCORDANCE WITH NATIONAL, LOCAL BUILDING AND ELECTRICAL CODES. DISCONNECT POWER AT ELECTRICAL PANEL BEFORE SERVICING.





Product design and development is an ongoing process at Axis Lighting. We reserve the right to change specifications. Contact Axis for the latest product information.

© 2010 Axis Lighting Inc.

## WALL MOUNT INSTALLATION INSTRUCTIONS TEMPLATE FOR HOLES AND J-BOX POSITION

SIDE VIEW

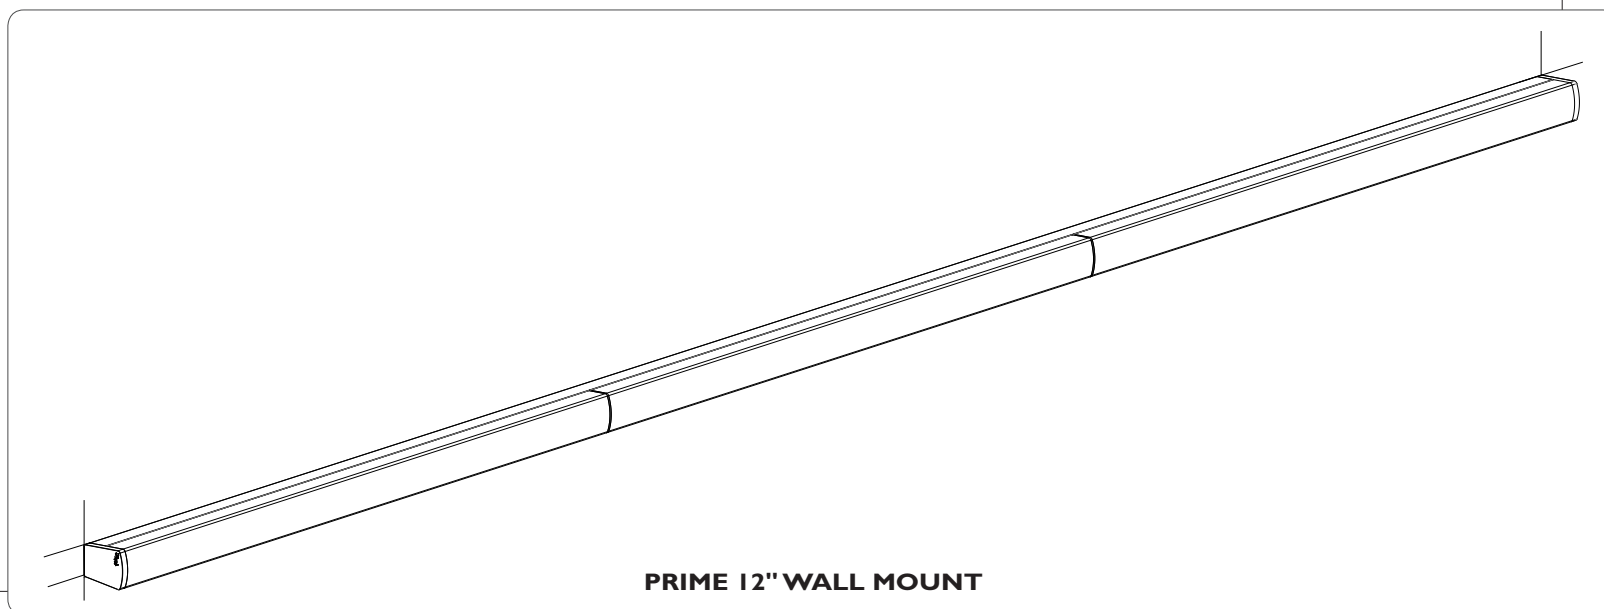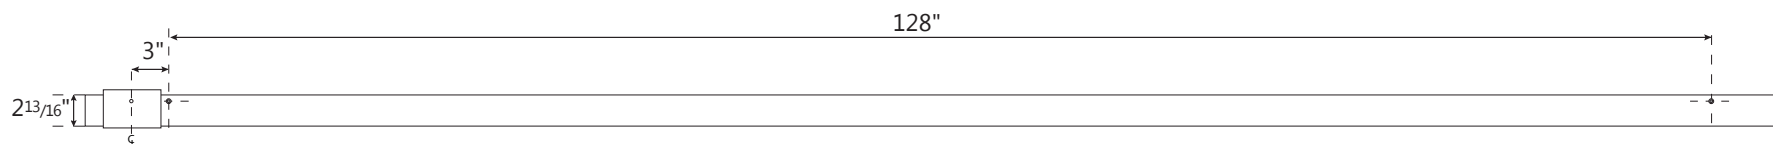

**PRIME 12" WALL MOUNT**