



Disassembly Instructions

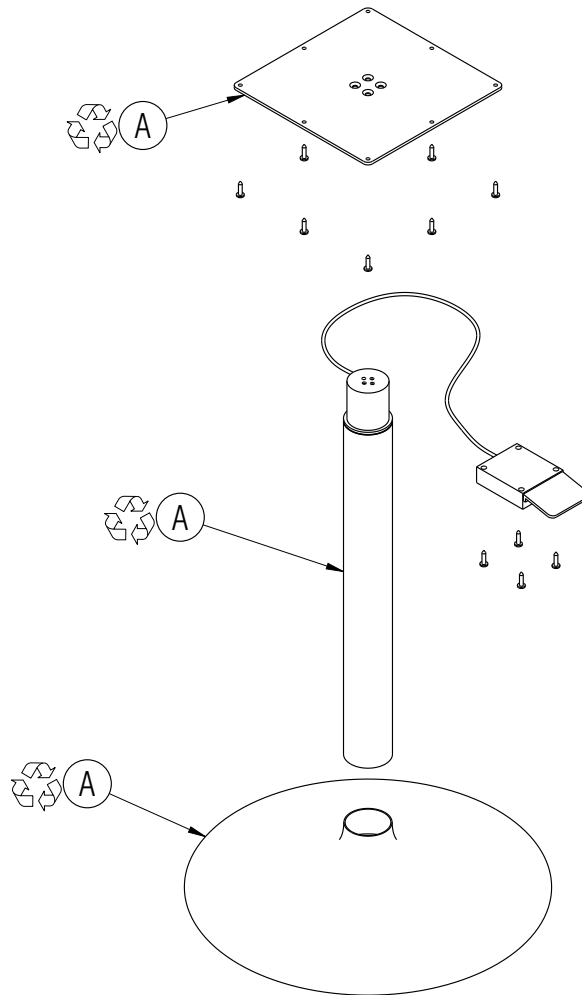

Athens Tables

Material Type: A . Steel B. Wood / Particle Board

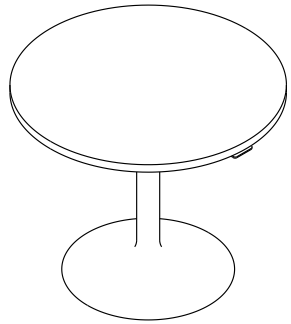

All fasteners not explicitly tagged are Material Type A: Steel

Procedure:

1. Remove the flange bolt and washer or screws holding the base to the column.
2. If so equipped, remove the screws holding the height adjustment actuator lever to the table top.
3. Remove the screws from the table support plate.
4. Remove the screws holding the table column to the table support plate.
5. The table column contains an adjustable gas actuator.

WARNING: CONTENTS UNDER PRESSURE!
REMOVE WITH CAUTION.

6. Remove the glides from the base.
7. Recycle the steel table column, base, plate, and screws.
8. Discard the table top and glides.

General Notes:

1. Disassembly time: 10-15 minutes
2. This procedure assumes basic familiarity with hand tools and furniture terminology: no specialized training is required
3. All materials removed and disassembled shall be sorted and segregated with like materials and disposed of or recycled according to recycling availability or waste acceptance
4. For items to be recycled, refer to KI's End of Life Recycling Matrix and KI's End of Life Recovery Options Matrix, available at www.ki.com


Required Tools




Gloves



Safety Glasses

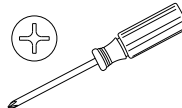

Phillips Screwdriver

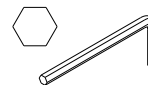

Allen Wrench



Hex Socket Wrench