
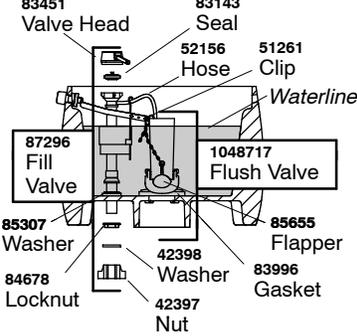


SYMPTOMS	CORRECTIVE ACTION	PARTIAL SERVICE PARTS
1. Poor flush.	A. Adjust tank water level to match the waterline. B. Fully open water supply shut-off valve. C. Clear obstruction in trapway, jet, or bowl rim holes. D. Clear obstruction in soil pipe or vent pipe.	<div style="display: flex; justify-content: space-between;"> <div style="width: 45%;"> <p>1025329** LH Trip Lever Kit</p>  <p>85395 Spacer</p> <p>78132 Locknut</p> </div> <div style="width: 45%;"> <p>1025330** RH Trip Lever Kit</p>  </div> </div>
2. No flush.	A. Reconnect the flapper chain to trip lever or flush valve. B. Adjust flapper chain assembly to remove excessive slack.	 <p>83451 Valve Head      83143 Seal</p> <p>52156 Hose      51261 Clip</p> <p>Waterline</p> <p>87296 Fill Valve      1048717 Flush Valve</p> <p>85307 Washer      85655 Flapper</p> <p>84678 Locknut      42398 Washer      83996 Gasket</p> <p>42397 Nut</p> <p><b>**Finish/color code required.</b></p>
3. Fill valve turns on/off by itself without toilet being flushed, or runs allowing water to enter tank.	A. Ensure there is sufficient slack in chain to allow flapper to fully seat and to allow handle to freely rotate back to its original position. B. Clean or replace flapper if flapper is worn, dirty, or misaligned with flush valve seat or flush valve seat is damaged. Replace flush valve seal or flush valve. C. Clean fill valve seat/seat washer of debris, or replace piston/seat washer assembly. D. Replace fill valve if valve float sinks. E. Adjust tank water level if too high.	
4. Long tank fill cycle.	A. Fully open water supply shut-off valve. B. Clean fill valve inlet, valve head, or supply line. Flush lines.	
5. Noisy tank fill cycle.	A. Partially close the water supply shut-off valve if water pressure to the toilet is too high. Check toilet performance following any such adjustment. B. Remove dirt or obstruction in valve head, flush line.	
<b>WARNING:</b> Use only genuine Kohler parts as shown to avoid property damage.		
<b>If unable to correct the problem, contact Customer Service: 1-800-4-KOHLER (USA), 1-800-964-5590 (Canada), or www.kohler.com.</b>		