
Steelcase HEALTH

Sonata[™] - Replacing a Door on an Island Module

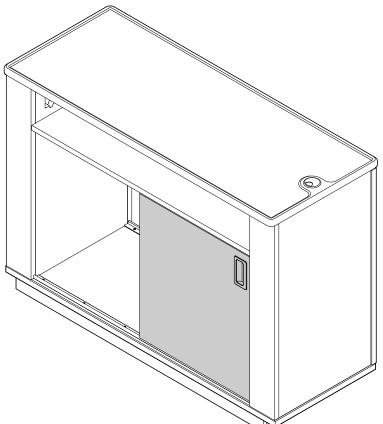

If you have a problem, question, or request, call your local dealer, or Steelcase Line 1 at 888.STEELCASE (888.783.3522) for immediate action by people who want to help you.

(Outside the U.S.A., Canada, Mexico, Puerto Rico, and the U.S. Virgin Islands, call: 1.616.247.2500)

Or visit our website: www.steelcase.com

© 2014 Steelcase Inc. Grand Rapids, MI 49501 U.S.A. Printed in U.S.A.



Page 1 of 2 939500334 Rev D

Steelcase®

Replacing a Door on an Island Module

1. Remove six (6) screws on track.

2. Slide door and track off of unit.

3. To install new door, reverse steps 1 and 2 while inserting bottom track onto bottom of door and inserting upper track into slot on bottom of shelf.

